

## 3512C MARINE AUXILIARY

Engine Serial Number - SLM00635 (Build Date - 11/11/2014, Test Date - 13/11/2014, Ship Date - unknown)

[View Latest Kit Information](#)

## ▼ ENGINE - ENTIRE GROUP (SLM00635)

Qty.	Note	Part No.	Change Level	Req. Qty	Part Name
					<b>PART NUMBERS</b>
<input type="text"/>	IKY	<a href="#">319-3571</a>	04	001	ENGINE AR
<input type="text"/>	IY	<a href="#">226-2773</a>	02	002	AIR CLEANER GP
<input type="text"/>	IY	<a href="#">253-6218</a>	02	001	MOUNTING GP-BOX
<input type="text"/>	IKY	<a href="#">231-9999</a>	11	001	BOX GP-JUNCTION
<input type="text"/>	IY	<a href="#">377-0958</a>	03	001	MOUNTING GP-AIR CLEANER
<input type="text"/>	IY	<a href="#">296-8290</a>	09	001	WIRING GP-ENGINE
<input type="text"/>	IY	<a href="#">197-9052</a>	02	001	GUARD GP-DAMPER
<input type="text"/>	IY	<a href="#">306-2157</a>	00	001	SHIELD GP-ENGINE OIL LINES
<input type="text"/>	IY	<a href="#">246-0456</a>	15	001	SHIELD GP-PROTECTION
<input type="text"/>	IY	<a href="#">120-4501</a>	13	001	FILTER GP-ENGINE OIL
<input type="text"/>	IY	<a href="#">307-0008</a>	00	001	WIRING GP-ENGINE
<input type="text"/>	IY	<a href="#">430-2746</a>	00	001	HEATER GP-JACKET WATER
<input type="text"/>	IY	<a href="#">430-2745</a>	00	001	HEATER GP-JACKET WATER
<input type="text"/>	IY	<a href="#">447-8603</a>	00	001	MOUNTING GP-JACKET WTR HEATER
<input type="text"/>	IY	<a href="#">447-8597</a>	00	001	MOUNTING GP-JACKET WTR HEATER
<input type="text"/>	IY	<a href="#">292-4521</a>	03	001	MOUNTING GP-INSTRUMENT PANEL
<input type="text"/>	IY	<a href="#">239-6364</a>	02	001	WIRING GP-ENGINE
<input type="text"/>	IY	<a href="#">120-4498</a>	05	012	THERMOCOUPLE GP
<input type="text"/>	SKY	<a href="#">242-0083</a>	00	001	HARNESS AS-WIRING
<input type="text"/>	IY	<a href="#">7E-2858</a>	09	001	ALTERNATOR GP-CHARGING
<input type="text"/>	IY	<a href="#">7E-4836</a>	12	001	MOUNTING GP-ALTERNATOR
<input type="text"/>	IY	<a href="#">7W-5780</a>	09	001	GUARD GP-BELT
<input type="text"/>	IY	<a href="#">107-7361</a>	09	001	DRIVE GP-ACCESSORY
<input type="text"/>	IY	<a href="#">253-9546</a>	01	001	WIRING GP-ALTERNATOR
<input type="text"/>	IY	<a href="#">151-9228</a>	03	001	GUARD GP-BELT
<input type="text"/>	IY	<a href="#">8N-9698</a>	07	001	RAIL GP-ENGINE SUPPORT
<input type="text"/>	IY	<a href="#">243-1286</a>	04	001	FILTER GP-CENTRIFUGAL
<input type="text"/>	IY	<a href="#">243-1290</a>	03	001	LINES GP-CENTRIFUGAL FILTER
<input type="text"/>	IY	<a href="#">244-0480</a>	00	001	SHIELD GP-ENGINE OIL LINES
	SY	<a href="#">3N-4513</a>	05	001	

				HOSE AS	
	SY	<a href="#">4P-7442</a>	03	001	PUMP GP-SUMP
	IY	<a href="#">241-2738</a>	04	001	FILTER GP-FUEL
	IY	<a href="#">244-6567</a>	04	001	SHIELD GP-FUEL LINES
	IY	<a href="#">309-2890</a>	01	001	SHIELD GP-ENGINE OIL LINES
	IY	<a href="#">210-1174</a>	03	001	PUMP GP-FUEL PRIMING
	IY	<a href="#">244-2478</a>	04	001	SHIELD GP-FUEL LINES
	SY	<a href="#">5N-2438</a>	05	001	LINES GP-FLEXIBLE FUEL
	IKY	<a href="#">255-0178</a>	02	001	WIRING GP-SENSOR
	IKY	<a href="#">255-0180</a>	01	001	WIRING GP-SENSOR
	IKY	<a href="#">4W-2768</a>	00	001	CONTACTOR GP
	IY	<a href="#">232-0858</a>	04	001	MOUNTING GP-CONTACTOR
	IY	<a href="#">264-3074</a>	02	002	PROTECTION GP-ENGINE
	IKY	<a href="#">4W-2767</a>	00	001	CONTACTOR GP
	IY	<a href="#">241-9056</a>	05	001	MOUNTING GP-CONTACTOR
	IKY	<a href="#">363-8165</a>	00	001	VALVE GP-EXPLOSION RELIEF
	SY	<a href="#">309-1583</a>	02	001	CONTROL AS-GOVERNOR
	IKY	<a href="#">143-5174</a>	10	001	STARTING MOTOR GP-AIR
	IY	<a href="#">238-9734</a>	02	001	CONTROL GP-AIR STARTING
	SKY	<a href="#">372-4717</a>	00	001	REGULATOR GP-AIR PRESSURE
	SY	<a href="#">5N-9527</a>	04	001	FITTING GP-EXHAUST
	IKY	<a href="#">253-2468</a>	03	001	BARRING GP
	IY	<a href="#">357-1662</a>	02	001	FILM GP
	SKY	<a href="#">204-2518</a>	03	001	SENSOR GP-LIQUID LEVEL
	IY	<a href="#">260-8660</a>	01	001	PUMP GP-AUXILIARY SEA WATER
	SY	<a href="#">4P-3363</a>	02	001	FITTING GP-EXHAUST
	SY	<a href="#">103-6668</a>	03	001	FLANGE GP-EXHAUST
	IY	<a href="#">3N-2652</a>	10	001	CONNECTION GP-EXPANSION TANK
	IKY	<a href="#">456-3777</a>	01	001	BOX GP-INSTRUMENT PANEL
					<b>SHIPPED LOOSE</b>
	SY	<a href="#">3N-4513</a>		001	HOSE AS
	SY	<a href="#">4P-3363</a>		001	FITTING GP-EXHAUST
	SY	<a href="#">4P-3363</a>		001	FITTING GP-EXHAUST
	SY	<a href="#">4P-7442</a>		001	PUMP GP-SUMP
	SY	<a href="#">4P-7442</a>		001	PUMP GP-SUMP
	SKY	<a href="#">5N-6237</a>		001	PUMP GP-ENGINE OIL
	SY	<a href="#">5N-2438</a>		001	LINES GP-FLEXIBLE FUEL
	SY	<a href="#">5N-2438</a>		001	LINES GP-FLEXIBLE FUEL
	SY	<a href="#">5N-9527</a>		001	FITTING GP-EXHAUST
	SY	<a href="#">5N-9527</a>		001	FITTING GP-EXHAUST
	SY	<a href="#">103-6668</a>		001	FLANGE GP-EXHAUST
	SY	<a href="#">103-6668</a>		001	FLANGE GP-EXHAUST
	SKY	<a href="#">143-5174</a>		001	STARTING MOTOR GP-AIR


SKY [204-2518](#)  
SKY [204-2518](#)  
SKY [242-0083](#)  
SY [260-8660](#)  
SY [309-1583](#)  
SY [309-1583](#)  
SKY [372-4717](#)  
SKY [372-4717](#)  
SY [6L-4502](#)

001 SENSOR GP-LIQUID LEVEL  
001 SENSOR GP-LIQUID LEVEL  
001 HARNESS AS-WIRING  
001 PUMP GP-AUXILIARY SEA WATER  
001 CONTROL AS-GOVERNOR  
001 CONTROL AS-GOVERNOR  
001 REGULATOR GP-AIR PRESSURE  
001 REGULATOR GP-AIR PRESSURE  
001 CHART-PLATE & FILM

Key:

Y Separate Illustration

I Installed

S Shipped Loose