

3456 GENERATOR SET

Machine Serial Number - CBX00579 (Build Date - 17/12/2003)

Engine Serial Number - 3PG01060 (Build Date - 01/12/2003, Test Date - 03/12/2003, Ship Date - unknown)

[View Latest Kit Information](#)

▼ PRODUCT - ENTIRE GROUP (CBX00579)

Qty.	Note	Serial No.	Part No.	Part Name
<input type="text"/>	Y		<a href="#">199-3720</a>	GENERAL AR-GENSET
(N/A)		3PG01060	1000	ENGINE
(N/A)		CER00797	1404	GENERATOR
<input type="text"/>	Y		<a href="#">209-6697</a>	CONTACTOR GP
<input type="text"/>	Y		<a href="#">206-9570</a>	EXTENSION GP-BASE

Key:

Y Separate Illustration

▼ ENGINE - ENTIRE GROUP (3PG01060)

Qty.	Note	Part No.	Change Level	Req. Qty	Part Name
<b>PART NUMBERS</b>					
<input type="text"/>	IY	<a href="#">199-3720</a>	01	001	GENERAL AR-GENSET
<input type="text"/>	IY	<a href="#">3N-8594</a>	05	001	COVER GP-ENGINE LIFTING EYE
<input type="text"/>	IY	<a href="#">7L-7871</a>	09	001	BATTERY GP
<input type="text"/>	IY	<a href="#">142-6947</a>	04	001	SENSOR GP-COOLANT LEVEL
<input type="text"/>	IY	<a href="#">154-5504</a>	03	001	CONTROL GP-GOVERNOR
<input type="text"/>	IY	<a href="#">156-0040</a>	01	001	TRANSFORMER GP-CURRENT
<input type="text"/>	IY	<a href="#">158-0341</a>	03	001	FASTENER GP-GENERATOR COUPLING
<input type="text"/>	IY	<a href="#">160-9644</a>	03	001	SWITCH GP-DISCONNECT
<input type="text"/>	IY	<a href="#">169-4450</a>	03	001	HARNES AS-WIRING
<input type="text"/>	IY	<a href="#">196-7332</a>	01	001	BOX GP-JUNCTION
<input type="text"/>	IY	<a href="#">197-3688</a>	04	001	AIR CLEANER GP
<input type="text"/>	IKY	<a href="#">235-4659</a>	00	001	ENGINE AR-COMPLETE
<input type="text"/>	IY	<a href="#">198-9810</a>	09	001	BOX GP-EXTENSION TERMINAL
<input type="text"/>	IY	<a href="#">199-6484</a>	02	001	WIRING GP-ENGINE
<input type="text"/>	IY	<a href="#">218-2840</a>	01	001	GUARD GP-PULLEY
<input type="text"/>	IY	<a href="#">220-6034</a>	02	001	RADIATOR GP
<input type="text"/>	IY	<a href="#">220-6036</a>	01	001	LINES GP-AIR
<input type="text"/>	IY	<a href="#">245-5710</a>	00	001	SUPPORT GP-BATTERY
<input type="text"/>	IY	<a href="#">194-4591</a>	00	001	GENERATOR AR
<input type="text"/>	IY	<a href="#">171-6833</a>	06	001	RELAY GP
<input type="text"/>	IY	<a href="#">179-1687</a>	04	001	SENSOR GP-TEMPERATURE
<input type="text"/>	IY	<a href="#">193-3247</a>	06	001	HARNES AS-WIRING
<input type="text"/>	IY	<a href="#">196-7178</a>	05	001	PANEL GP-ELECTRONIC
<input type="text"/>	IY	<a href="#">206-8791</a>	01	001	FUMES DISPOSAL GP
<input type="text"/>	IY	<a href="#">222-7173</a>	00	001	ENCLOSURE GP

	IY	<a href="#">169-0241</a>	05	001	CONNECTION GP-TERMINAL STRIP
	IY	<a href="#">195-9574</a>	03	001	LINES GP-ENGINE OIL DRAIN
	IY	<a href="#">196-2947</a>	03	001	ENCLOSURE GP-GENERATOR
	IY	<a href="#">196-7330</a>	00	001	MOUNTING GP-JUNCTION BOX
	IY	<a href="#">199-1238</a>	00	001	WIRING GP-SENSOR
	IY	<a href="#">217-8708</a>	00	001	LINES GP-FUEL
	IY	<a href="#">218-8546</a>	01	001	TANK & BASE GP-FUEL
	IY	<a href="#">220-6029</a>	00	001	LINES GP-COOLANT DRAIN
	IY	<a href="#">206-9570</a>	01	001	EXTENSION GP-BASE
	IY	<a href="#">143-9519</a>	06	001	REGULATOR GP-VOLTAGE
	IY	<a href="#">155-8893</a>	05	001	WIRING GP-GENERATOR
	IY	<a href="#">193-3262</a>	02	001	HARNESS AS-WIRING
	IY	<a href="#">198-9185</a>	01	001	MOUNTING GP-CONTROL
	IY	<a href="#">199-1556</a>	04	001	CONNECTION GP-GENERATOR LEADS
	IY	<a href="#">184-7039</a>	01	001	KIT-SEAL
	IY	<a href="#">190-2565</a>	04	001	HARNESS AS-WIRING
	IY	<a href="#">200-0844</a>	02	001	RELAY GP
	IY	<a href="#">190-2566</a>	04	001	HARNESS AS-WIRING
	IY	<a href="#">200-0842</a>	02	001	RELAY GP
	IY	<a href="#">171-6834</a>	06	001	MODULE GP-ALARM
	IY	<a href="#">194-5279</a>	02	001	HEATER GP-JACKET WATER
	IY	<a href="#">207-5405</a>	00	001	CONNECTION GP-ELECTRICAL
	IY	<a href="#">7C-9141</a>	03	001	BATTERY CHARGER
	IY	<a href="#">199-8975</a>	00	001	MOUNTING GP-BATTERY CHARGER
	IY	<a href="#">203-5570</a>	00	001	CONNECTION GP-ELECTRICAL
	IY	<a href="#">209-6697</a>	01	001	CONTACTOR GP
	IY	<a href="#">169-4524</a>	08	001	MOUNTING GP-CIRCUIT BREAKER
	IY	<a href="#">183-2489</a>	01	001	CIRCUIT BREAKER GP
	IY	<a href="#">198-8877</a>	02	001	COVER GP-GENERATOR
	IY	<a href="#">222-2331</a>	00	001	WIRING GP-PANEL
	IY	<a href="#">235-5205</a>	00	001	WIRING GP-AUXILIARY

## Key:

Y Separate Illustration

I Installed