

## C27 GENERATOR SET

Machine Serial Number - DWB03188 (Build Date - 30/08/2012)

Engine Serial Number - MJE03188 (Build Date - 17/07/2012, Test Date - 19/07/2012, Ship Date - unknown)

[View Latest Kit Information](#)

## ▼ PRODUCT - ENTIRE GROUP (DWB03188)

Qty.	Note	Serial No.	Part No.	Part Name
<input type="text"/>	Y		<a href="#">265-2121</a>	GENERAL AR
(N/A)		MJE03188	1000	ENGINE
(N/A)		AFR04055	1404	GENERATOR

Key:

Y Separate Illustration

## ▼ ENGINE - ENTIRE GROUP (MJE03188)

Qty.	Note	Part No.	Change Level	Req. Qty	Part Name
<b>PART NUMBERS</b>					
<input type="text"/>	IY	<a href="#">265-2121</a>	04	001	GENERAL AR
<input type="text"/>	IRY	<a href="#">267-1232</a>	16	001	ENGINE AR-COMPLETE
<input type="text"/>	IY	<a href="#">149-7876</a>	08	001	FASTENER GP-GENERATOR COUPLING
<input type="text"/>	IY	<a href="#">151-7794</a>	04	001	MOUNTING GP-ENGINE FLEXIBLE
<input type="text"/>	IY	<a href="#">205-7860</a>	10	001	FILM GP
<input type="text"/>	IY	<a href="#">250-6859</a>	06	001	MOUNTING GP-VOLTAGE REGULATOR
<input type="text"/>	IY	<a href="#">261-3322</a>	02	001	SWITCH GP-DISCONNECT
<input type="text"/>	IY	<a href="#">272-0705</a>	06	001	ENCLOSURE GP-GENERATOR
<input type="text"/>	IY	<a href="#">272-5156</a>	00	001	COVER GP-ACCESS
<input type="text"/>	IY	<a href="#">382-6083</a>	00	001	PANEL GP-INSTR
<input type="text"/>	IY	<a href="#">274-5789</a>	03	001	PANEL GP-ELECTRONIC
<input type="text"/>	IY	<a href="#">274-5793</a>	07	001	BOX GP-EXTENSION TERMINAL
<input type="text"/>	IY	<a href="#">275-0030</a>	01	001	COVER GP-ENGINE LIFTING EYE
<input type="text"/>	IY	<a href="#">275-0032</a>	01	001	COVER GP-ENGINE LIFTING EYE
<input type="text"/>	IY	<a href="#">278-4930</a>	03	001	FUMES DISPOSAL GP
<input type="text"/>	IY	<a href="#">278-8038</a>	02	001	REGULATOR GP-VOLTAGE
<input type="text"/>	IY	<a href="#">280-7830</a>	05	001	HARNES GP-WIRING
<input type="text"/>	IY	<a href="#">280-7831</a>	06	001	WIRING GP-PANEL
<input type="text"/>	IY	<a href="#">280-7832</a>	05	001	WIRING GP-PANEL
<input type="text"/>	IY	<a href="#">280-7852</a>	03	001	WIRING GP-GENERATOR
<input type="text"/>	IY	<a href="#">291-2856</a>	08	001	FILM GP
<input type="text"/>	IY	<a href="#">295-6925</a>	01	001	

	IY	<a href="#">311-3023</a>	02	001	BATTERY GP
	IY	<a href="#">164-4543</a>	01	001	DRIVE GP-FAN
	IY	<a href="#">308-6431</a>	02	001	V-BELT SET
	IY	<a href="#">136-6580</a>	00	001	WIRING GP-SENSOR
	IY	<a href="#">169-2106</a>	04	001	GENERATOR AR
	IY	<a href="#">203-7164</a>	06	001	COVER GP-ACCESS
	IY	<a href="#">280-4126</a>	04	001	CONNECTION GP-GENERATOR LEADS
	IY	<a href="#">280-4316</a>	07	001	CONTROL GP-UNPROGRAMMED
	IY	<a href="#">280-4325</a>	00	001	CONTACTOR GP
	IY	<a href="#">280-4324</a>	03	001	RELAY GP-GROUND FAULT
	IY	<a href="#">295-8198</a>	04	001	WIRING GP-PANEL
	IY	<a href="#">281-8465</a>	09	001	HEATER GP-JACKET WATER
	IY	<a href="#">184-7029</a>	05	001	CONNECTION GP-ELECTRICAL
	IY	<a href="#">372-5192</a>	00	001	MOUNTING GP-BATTERY CHARGER
	IRY	<a href="#">5N-5692</a>	14	001	CONNECTION GP-ELECTRICAL
	IY	<a href="#">260-9522</a>	06	001	ALTERNATOR GP-CHARGING
	IY	<a href="#">271-4224</a>	06	001	WIRING GP-ELECTRONIC CONTROL
	IY	<a href="#">303-6241</a>	01	001	GUARD GP-BELT
	IY	<a href="#">270-4552</a>	01	001	MOUNTING GP-ALTERNATOR
	IY	<a href="#">281-4708</a>	01	001	SWITCH GP-AUXILIARY
	IY	<a href="#">298-4652</a>	02	001	TRANSFORMER GP-CURRENT
	IY	<a href="#">292-1653</a>	04	001	ENCLOSURE GP-GENERATOR
	IY	<a href="#">292-0219</a>	04	001	AIR CLEANER GP
	IY	<a href="#">296-5037</a>	02	001	ENCLOSURE GP-RADIATOR
	IY	<a href="#">292-1723</a>	05	001	LINES GP-ENGINE OIL DRAIN
	IY	<a href="#">199-1238</a>	01	001	BASE GP-GENERATOR
	IY	<a href="#">264-7219</a>	00	001	WIRING GP-SENSOR
	IY	<a href="#">171-4504</a>	03	001	FASTENER GP-FUEL TANK
	IY	<a href="#">322-4066</a>	01	001	TANK & BASE GP-FUEL
	IY	<a href="#">298-4647</a>	09	001	LINES GP-FUEL
	IY	<a href="#">295-8187</a>	02	001	RADIATOR GP
	IY	<a href="#">296-5020</a>	01	001	EXTENSION GP-FUEL TANK
	IY	<a href="#">189-8891</a>	02	001	EXTENSION GP-BASE
	IY	<a href="#">222-2331</a>	01	001	CONNECTION GP-GENERATOR LEADS
	IY	<a href="#">270-4668</a>	00	001	WIRING GP-PANEL
	IY	<a href="#">280-7884</a>	00	001	MOUNTING GP-CIRCUIT BREAKER
	IY	<a href="#">340-4311</a>	00	001	COVER GP-GENERATOR
					CIRCUIT BREAKER GP

Key:

Y Separate Illustration

I Installed

R REMFG PART MAY BE AVAILABLE