

**3516B Marine Auxiliary**

Engine Serial Number - S2R00500

Engine Build Date -

**Engine - Entire Group (S2R00500)**

Part Number	Change Level	Part Name
<u>232-2521</u> I	11	Engine AR
<u>4P-0558</u> N	02	Air Cleaner GP
<u>8N-9639</u> I	04	Guard GP-Damper
<u>9Y-0851</u> I	01	Rail GP-Engine Support
<u>231-7874</u> I	04	Mounting GP-Box
<u>231-9999</u> I	08	Box GP-Junction
<u>231-9916</u> I	08	Wiring GP-Engine
<u>111-9377</u> I	06	Mounting GP-Air Cleaner
<u>115-3634</u> N	01	Filter-Soot
<u>120-4501</u> I	13	Filter GP-Engine Oil
<u>307-0008</u> I	00	Wiring GP-Sensor
<u>292-4520</u> I	00	Mounting GP-Instrument Panel
<u>290-3213</u> I	01	Box GP-Instrument Panel
<u>239-1470</u> I	01	Wiring GP-Engine Electronic
<u>273-4988</u> I	03	Shield GP-Engine Oil Lines
<u>246-0457</u> I	13	Shield GP-Fuel Lines
<u>242-0083</u>	00	Harness AS-Wiring

Part Number	Change Level	Part Name
<b>S</b>		
<u>9Y-7876</u> I	03	Drain GP-Engine Oil
<u>241-2738</u> I	03	Filter GP-Fuel
<u>244-6567</u> I	03	Shield GP-Fuel Lines
<u>244-2478</u> I	03	Shield GP-Fuel Lines
<u>210-1175</u> I	03	Pump GP-Fuel Priming
<u>232-0889</u> I	00	Wiring GP-Air Shutoff
<u>274-5750</u> I	02	Shutoff GP-Air
<u>8N-8510</u> I	22	Valve GP-Explosion Relief
<u>4W-2768</u> I	00	Contactors GP
<u>231-9526</u> I	03	Mounting GP-Contactors
<u>264-3074</u> I	01	Protection GP-Engine
<u>143-5174</u> I	09	Starting Motor GP-Air
<u>238-9734</u> I	01	Control GP-Air Starting
<u>200-6504</u> I	02	Heater GP-Jacket Water
<u>258-8950</u> I	04	Mounting GP-Jacket Wtr Heater
<u>258-8951</u> I	02	Mounting GP-Jacket Wtr Heater
<u>4P-3363</u> S	02	Fitting GP-Exhaust
<u>103-6668</u> S	02	Flange GP-Exhaust
<u>273-3285</u> I	00	Lines GP-Fuel

Part Number	Change Level	Part Name
<u>276-1307</u> I	02	Shield GP-Fuel Lines
0S-1571 S		Bolt
0S-1591 S		Bolt
1A-2029 S		Bolt
1W-6356 S		Gasket
2J-3506 S		Nut-Full
3B-1915 S		Bolt
3N-6504 S		Hose AS
<u>4P-0558</u> S		Air Cleaner GP
4P-0583 S		Bracket AS
4P-3362 S		Adapter
<u>4P-3363</u> S		Fitting GP-Exhaust
5M-2894 S		Washer-Hard
5P-3860 S		Clamp-Hose
5P-4869 S		Clamp-Hose
5P-8248 S		Washer-Hard
6F-5985 S		Hose AS
<u>6L-4502</u> S		Chart-Plate & Film
8M-7145 S		Washer
8N-5254		Hose-Reducer

Part Number	Change Level	Part Name
<b>S</b> 8T-6762 <b>S</b>		Plug-Pipe
9S-8752 <b>S</b>		Nut-Full
9X-8887 <b>S</b>		Bolt
<u>103-6668</u> <b>S</b>		Flange GP-Exhaust
<u>111-9377</u> <b>S</b>		Mounting GP-Air Cleaner
<u>115-3634</u> <b>S</b>		Filter-Soot
133-6479 <b>S</b>		Flange-Exhaust
133-6480 <b>S</b>		Gasket
<u>143-5174</u> <b>S</b>		Starting Motor GP-Air
<u>242-0083</u> <b>S</b>		Harness AS-Wiring
<u>273-3285</u> <b>S</b>		Lines GP-Fuel
<b>I - Installed</b> <b>N - Not Installed</b> <b>S - Shipped Loose</b>		