

**C15 Generator Set**

Machine Serial Number - C5E00842

Machine Build Date - 2007/04/22

Engine Serial Number - FSE00999

Engine Build Date - 2007/02/26

**Product - Entire Group (C5E00842)**

Part Number	Serial Number	Part Name
<u>287-3369</u>		General AR-Genset
1000	FSE00999	Engine
1404	G6B10915	Generator
5N-9635		Convenience Num

**Engine - Entire Group (FSE00999)**

Part Number	Change Level	Part Name
<u>287-3369</u> I		General AR-Genset
<u>286-4922</u> I	03	Engine AR-Complete
<u>235-1203</u> I		Generator AR
<u>233-9391</u> I		Air Cleaner GP
<u>287-4914</u> I		Radiator GP
<u>218-4698</u> I		Fan GP-Blower
<u>264-0255</u> I		Lines GP-Coolant Drain
<u>233-9351</u> I		Coupling GP-Generator
<u>270-3125</u> I		Battery GP
<u>144-7184</u> I	02	Cover GP-Engine Lifting Eye
<u>251-1413</u> I		Fastener GP-Panel
<u>264-0256</u>		Drain GP-Oil

Part Number	Change Level	Part Name
<u>263-5120</u> 		Fumes Disposal GP
<u>261-8429</u> 		Potentiometer AS
<u>261-5613</u> 		Harness AS-Power
<u>258-6763</u> 		Enclosure AS
<u>258-6791</u> 		Panel GP-Electronic
<u>258-6790</u> 		Mounting GP-Bus Bar
<u>258-6782</u> 		Door GP
<u>258-6776</u> 		Mounting GP-Divider Plate
<u>258-6773</u> 		Mounting GP-Bracket
<u>240-0170</u> 		Box GP-Connection
<u>266-7116</u> 		Harness AS-Engine
<u>240-1622</u> 		Cable GP
<u>262-9635</u> 		Mounting GP-Wiring
<u>266-2701</u> 		Cover GP-Control Panel
<u>268-8667</u> 		Plug GP-Box
205-7860 	08	Film GP
<u>253-3023</u> 		Fastener GP-Instrument Panel
<u>239-6758</u> 		Mounting GP-Control Panel
<u>239-0410</u> 		Transformer GP-Current

<b>Part Number</b>	<b>Change Level</b>	<b>Part Name</b>
<u>240-1621</u> I		Wiring GP-Generator
<u>261-5132</u> I		Control GP-Generator Set
<u>239-3812</u> I		Duct GP-Cable
<u>246-5891</u> I		Connection GP-Generator Leads
<u>266-1425</u> I		Mounting GP-Control Panel
<u>292-5967</u> I		Panel GP-Electrical
<u>261-5828</u> I		Relay GP
<u>261-6623</u> I		Panel GP-Electrical
<u>261-8479</u> I		Wiring GP-Generator
<u>258-6778</u> I		Panel GP-Electronic
<u>258-6795</u> I		Mounting GP-Terminal Strip
<u>275-5521</u> I		Connector AS
<u>246-3102</u> I		Harness AS-Wiring
<u>263-9343</u> I		Sensor GP-Coolant Level
<u>275-2218</u> I		Enclosure GP-Generator
<u>275-8628</u> I		Film GP
<u>241-3092</u> I		Seal GP-Enclosure
<u>241-6058</u> I		Insulation GP-Weather
<u>266-1422</u> I		Cover GP-Control Panel
<u>261-7645</u>		Cover GP-Control Panel

Part Number	Change Level	Part Name
<u>282-6303</u> 		Insulation GP-Generator
<u>286-2426</u> 	01	Film GP
<u>237-7177</u> 		Base GP-Engine & Generator
<u>270-0171</u> 		Support GP-Battery
<u>263-9346</u> 		Mounting GP-Engine & Generator
<u>235-4480</u> 		Extension GP-Base
<u>282-6288</u> 		Cover GP-Base
<u>282-6287</u> 		Cover GP-Access
<u>240-6068</u> 		Cover GP-Generator
<u>245-2112</u> 		Switch AS-Liquid Level
<u>239-9373</u> 		Mounting GP-Generator
<u>268-2649</u> 		Mounting GP-Battery Charger
<u>193-3260</u> 	04	Harness AS-Wiring
<u>261-7137</u> 		Contactora GP
<u>196-2236</u> 	02	Heater GP-Jacket Water
<u>183-2899</u> 		Harness AS-Wiring
<u>295-2249</u> 		Mounting GP-Jacket Wtr Heater
<u>282-9957</u> 		Circuit Breaker GP
<u>243-3539</u> 		Circuit Breaker GP

Part Number	Change Level	Part Name
<u>269-8465</u> I		Cover GP-Access
<u>243-5599</u> I		Cover GP-Access
<u>260-0568</u> I		Bracket GP-Mounting
<u>277-3571</u> I		Seal GP-Enclosure
<u>284-9215</u> I		Bracket GP-Terminal
<u>295-2373</u> I		Connection GP-Terminal Strip
<u>284-9187</u> I		Terminal GP-Circuit Breaker
<u>143-6856</u> I	01	Shunt-Trip
<u>237-8962</u> I		Harness AS-Wiring
<u>279-7085</u> I		Base GP-Fuel Tank
<u>283-9152</u> I		Fastener GP-Cover
<u>287-4959</u> I		Lines GP-Fuel
<u>282-6301</u> I		Cover GP-Access
<u>282-6315</u> I		Cover GP-Access
C5E00842		
G6B10915		
<u>6L-4502</u> S		Chart-Plate & Film
<b>I - Installed</b>		
<b>S - Shipped Loose</b>		