

**C18 Generator Set C18 Generator Set**

Machine Serial Number - EKW00665

Machine Build Date - 2008/07/28

Engine Serial Number - EST00657

Engine Build Date - 2008/07/08

**Product - Entire Group (EKW00665)**

Part Number	Serial Number	Part Name
<u>273-5732</u>		General AR-Genset
252-7504		Control GP-Electronic
<u>272-8238</u>		Block AS-Terminal
<u>272-8238</u>		Block AS-Terminal
<u>272-8238</u>		Block AS-Terminal
259-0241		Transformer GP-Current
253-3028		Connection GP-Generatc
<u>236-1159</u>		Module GP-Alarm
<u>272-8238</u>		Block AS-Terminal
<u>8D-2676</u>		Switch AS-Toggle
1000	EST00657	Engine
1404	G6B14162	Generator

**Engine - Entire Group (EST00657)**

Part Number	Change Level	Part Name
<u>273-5732</u> 	00	General AR-Genset
<u>272-6915</u> 	07	Engine AR-Complete
<u>247-6121</u> 	00	Generator AR
<u>249-3098</u> 		Coupling GP-Generator
<u>239-0431</u> 		Transformer GP-Current
<u>240-1621</u> 		Wiring GP-Generator
<u>261-5613</u> 		Harness AS-Power
<u>258-6763</u> 		Enclosure AS
<u>236-4395</u> 		Cover GP-Instrument Par
<u>258-6791</u> 		Panel GP-Electronic
<u>258-6790</u> 		Mounting GP-Bus Bar
<u>258-6782</u> 		Door GP
<u>258-6776</u> 		Mounting GP-Divider Plat
<u>258-6773</u> 		Mounting GP-Bracket
<u>294-9976</u> 		Air Cleaner GP
<u>253-3023</u> 		Fastener GP-Instrument I

Part Number	Change Level	Part Name
<u>251-1514</u> 		Fumes Disposal GP
<u>251-1476</u> 		Support GP-Battery
<u>269-8103</u> 		Harness AS-Engine
<u>240-1622</u> 		Cable GP
<u>240-0170</u> 		Box GP-Connection
<u>239-6758</u> 		Mounting GP-Control Par
<u>237-7206</u> 		Battery GP
<u>234-5561</u> 		Guard GP-Pulley
<u>214-0588</u> 		Radiator GP
<u>144-7184</u> 	02	Cover GP-Engine Lifting I
<u>213-0144</u> 		Cover GP-Access
<u>262-9635</u> 		Mounting GP-Wiring
<u>266-2701</u> 		Cover GP-Control Panel
<u>268-8667</u> 		Plug GP-Box
<u>286-8875</u> 		Fastener GP-Wiring Harn
<u>261-5132</u> 		Control GP-Generator Se
<u>248-3054</u> 		Enclosure GP-Generator
<u>248-0969</u> 		Film GP
<u>241-3092</u> 		Seal GP-Enclosure
<u>261-7645</u> 		Cover GP-Control Panel
<u>266-1422</u> 		Cover GP-Control Panel
<u>249-2697</u> 		Cover GP-Base
<u>241-6058</u> 		Insulation GP-Weather
<u>283-0948</u> 		Base GP-Engine & Gene
<u>249-2791</u> 		Mounting GP-Engine & G
<u>245-4465</u> 		Lines GP-Coolant Drain
<u>245-4466</u> 		Drain GP-Engine Oil
<u>255-9077</u> 		Lines GP-Fuel
<u>213-1508</u>		Mounting GP-Beam

Part Number	Change Level	Part Name
<u>282-6212</u>		Cover GP-Access
<u>282-6318</u>		Cover GP-Access
<u>263-3751</u>		Sensor GP-Liquid Level
<u>239-9373</u>		Mounting GP-Generator
<u>259-0983</u>		Mounting GP-Voltage Re
<u>261-8430</u>		Switch AS
<u>193-3260</u>	04	Harness AS-Wiring
<u>304-8784</u>		Mounting GP-Battery Cha
<u>239-3812</u>		Duct GP-Cable
<u>261-0736</u>		Panel GP-Electronic
<u>272-2205</u>		Support GP-Cable
<u>261-5828</u>		Relay GP
<u>261-6623</u>		Panel GP-Electrical
<u>266-1425</u>		Mounting GP-Control Par
<u>292-5967</u>		Panel GP-Electrical
<u>261-8479</u>		Wiring GP-Generator
<u>258-6778</u>		Panel GP-Electronic
<u>258-6795</u>		Mounting GP-Terminal St
<u>261-7137</u>		Contacto GP
<u>183-2899</u>		Harness AS-Wiring
<u>246-8984</u>		Mounting GP-Jacket Wtr
<u>282-9957</u>		Circuit Breaker GP
<u>243-4027</u>		Circuit Breaker GP
<u>258-6812</u>		Cover GP-Enclosure
<u>243-5599</u>		Cover GP-Access
<u>260-0568</u>		Bracket GP-Mounting
<u>277-3571</u>		Seal GP-Enclosure
<u>284-9189</u>		Terminal GP-Circuit Brea

Part Number	Change Level	Part Name
<u>295-2373</u> I		Connection GP-Terminal
<u>243-4797</u> I		Shunt-Trip
<u>237-8962</u> I		Harness AS-Wiring
<u>246-3101</u> I		Harness AS-Wiring
EKW00665		
G6B14162		
<u>6L-4502</u> S		Chart-Plate & Film
<b>I - Installed</b>		
<b>S - Shipped Loose</b>		