

3512 Generator Set

Machine Serial Number - CMJ00786

Machine Build Date - 2003/12/17

Engine Serial Number - 1KZ01334

Engine Build Date -

Product - Entire Group (CMJ00786)

Part Number	Serial Number	Part Name
<u>198-0967</u>		General AR
121-4714		Software
1000	1KZ01334	Engine
1404	2FN01960	Generator

Engine - Entire Group (1KZ01334)

Part Number	Change Level	Part Name
<u>198-0967</u> 	00	General AR
<u>3N-7056</u> 	00	Support GP-Battery
<u>5N-2438</u> 	05	Lines GP-Flexible Fuel
<u>5N-8877</u> 	06	Mounting GP-Engine Flexible
<u>7C-0526</u> 	02	Starting Motor GP-Electric
<u>7C-6207</u> 	05	Radiator GP
<u>7L-7872</u> 	09	Battery GP
<u>7N-6782</u> 	08	Indicator GP-Air Filter Change
<u>7W-0825</u> 	01	Cable GP-Battery
<u>7W-3953</u> 	09	Drive GP-Fan
<u>7W-5223</u> 	00	Pulley GP-Fan Drive
<u>7W-6669</u> 	01	Guard GP-Damper
<u>7W-7214</u> 	05	Guard GP-Belt
<u>7W-9465</u> 	05	Pump GP-Fuel Priming
<u>8N-9302</u> 	08	Air Cleaner GP
<u>8N-9639</u> 	04	Guard GP-Damper
<u>9Y-5563</u> 	02	Fumes Disposal GP
<u>9Y-8234</u> 	05	Mounting GP-Radiator
<u>104-4704</u> 	03	Mounting GP-Control Panel
<u>108-5555</u> 	04	Switch GP-Disconnect
<u>121-6202</u>	08	Regulator GP-Voltage

Part Number	Change Level	Part Name
<u>121-8855</u>	06	Connection GP-Electrical
<u>129-2244</u>	01	Sensor & Mtg GP-Radiator
<u>141-1808</u>	03	Box GP-Generator Connection
<u>145-5138</u>	01	Wiring GP-Electronic Control
<u>147-3738</u>	01	Valve GP-Fluid Sampling
<u>151-9228</u>	02	Guard GP-Belt
<u>152-6787</u>	02	Rail GP-Engine & Gen Support
<u>153-0191</u>	06	Installation AR-Generator
<u>187-6312</u>	04	Harness AS-Sensor
<u>197-9048</u>	06	Engine AR
<u>201-0549</u>	03	Drain GP-Engine Oil
<u>202-0052</u>	00	Fan GP-Blower
<u>205-7860</u>	02	Film GP
<u>4W-0472</u>	05	Fumes Disposal GP
<u>122-3487</u>	02	Conversion GP-Generator
<u>144-1984</u>	03	Generator AR
<u>178-7191</u>	00	Transformer GP-Potential
<u>198-5274</u>	06	Wiring GP-Panel
<u>9Y-6496</u>	02	Module GP-Interface
<u>187-6309</u>	13	Panel GP-Control
<u>208-0293</u>	01	Governor GP-Electronic
<u>110-5959</u>	05	Switch GP-Coolant Level
<u>8N-6435</u>	02	Filter GP-Primary Fuel
<u>233-7973</u>	01	Separator GP-Water
<u>136-9370</u>	06	Mounting GP-Jacket Wtr Heater
<u>166-6653</u>	03	Mounting GP-Jacket Wtr Heater
<u>200-6504</u>	01	Heater GP-Jacket Water
<u>122-1194</u>	01	Box & Mounting GP

Part Number	Change Level	Part Name
<u>121-9480</u> I	02	Connection GP-Terminal Strip
<u>8N-8510</u> I	16	Valve GP-Explosion Relief
<u>2W-7871</u> I	03	Flange GP-Exhaust
<u>7N-6967</u> I	05	Fitting GP-Exhaust
<u>5N-2457</u> I	03	Fitting GP-Exhaust
<u>3N-8276</u> I	01	Pyrometer GP
<u>5N-2126</u> I	05	Connector
<u>5N-9365</u> I	03	Thermocouple
<u>5N-9366</u> I	02	Harness AS-Sensor
<u>158-4240</u> I	01	Switch AS-Selector
<u>7C-0182</u> I	07	Thermocouple GP
<u>4P-4925</u> I	03	Pump & Lines GP-Prelubrication
<u>148-8028</u> I	01	Box GP-Junction
I - Installed		