

**G3516 Gas Engine**

Engine Serial Number - 4EK

Engine Build Date - 1999/11/01

**Engine - Entire Group (4EK)**

Part Number	Change Level	Part Name
<u>4P-8336</u> 	08	Engine AR
<u>8N-9639</u> 	04	Guard GP-Damper
<u>107-9020</u> 	02	Meter GP-Service
<u>107-9022</u> 	03	Pyrometer GP
<u>107-9023</u> 	01	Gauge AS-Pressure
<u>107-9024</u> 	01	Gauge GP-Coolant Temp
<u>107-9025</u> 	01	Gauge GP-Manifold Pres
<u>107-9026</u> 	01	Gauge AS-Pressure
<u>9Y-6496</u> 	02	Module GP-Interface
<u>108-3921</u> 	02	Gauge GP-Air Inlet Temp
<u>118-0474</u> 	04	Harness AS-Panel
<u>2W-5616</u> 	04	Cover GP-Oil Pan
<u>9Y-8179</u> 	02	Connection GP-Water
<u>5N-4659</u> 	06	Regulator GP-Oil Level
<u>110-6206</u> 	00	Drain GP-Engine Oil
<u>8N-8510</u> 	07	Valve GP-Explosion Relie
<u>6I-1043</u> 	03	Mounting GP-Jacket Wtr
<u>6I-1044</u> 	07	Mounting GP-Jacket Wtr
<u>7E-6247</u> 	03	Heater GP-Jacket Water
<u>109-7034</u> 	01	Control GP-Jacket Water
<u>3N-7056</u> 	00	Support GP-Battery
<u>7L-7872</u> 	08	Battery GP
<u>7W-0825</u> 	01	Cable GP-Battery
<u>5N-8877</u> 	04	Mounting GP-Engine Fle
<u>7C-0527</u> 	02	Starting Motor GP-Electri
<u>134-8621</u>	00	Switch GP-Start

Part Number	Change Level	Part Name
<u>4P-9088</u> I	02	Air Cleaner GP
<u>4P-9090</u> I	00	Regulator GP-Gas Pressi
<u>4P-9091</u> I	03	Carburetor GP
<u>4P-9596</u> I	04	Valve GP-Solenoid
<u>4P-9597</u> I	01	Indicator GP-Air Filter Ch
<u>7E-9202</u> I	01	Throttle GP
<u>103-6193</u> I	07	Panel GP-Control
<u>131-5457</u> I	01	Control AS-Governor
<u>7W-6555</u> I	01	Housing & Regulator GP
<u>9Y-0851</u> I, L	00	Rail GP-Engine Support

**I - Installed**  
**L - Less Indicator**