

PMG3516 Power Module

Machine Serial Number - JKK00192
Machine Build Date - 2013/10/30

Engine Serial Number - XL600192
Engine Build Date - 2012/06/21

Product - Entire Group (JKK00192)

Part Number	Serial Number	Part Name
<u>389-1071</u>		General AR
<u>204-6483</u>		Cover GP-Engine
<u>350-4305</u>		Wiring GP-Prelubrication
<u>333-6184</u>		Shield GP-Manifold
<u>356-0842</u>		Film GP XQ1250 Power I
<u>220-0581</u>		Shield GP-Exhaust
<u>210-7753</u>		Manifold GP-Exhaust
<u>285-7187</u>		Box GP-Control
<u>278-1348</u>		Gear GP-Front
<u>353-2739</u>		Connection GP
<u>325-8393</u>		Door GP-Access
<u>210-6281</u>		Lines GP-Water
<u>392-7189</u>		Packaging AR
<u>391-9055</u>		Enclosure & Connection /
<u>200-6405</u>		Lines GP-Engine Oil
<u>360-4240</u>		Filter GP-Engine Oil
<u>2W-8772</u>		Flywheel GP
<u>8N-7182</u>		Damper GP
<u>369-9257</u>		Circuit Breaker
<u>205-0359</u>		Lines GP-Turbocharger V
<u>293-7379</u>		Elbow GP-Air Inlet
<u>360-4241</u>		Lines GP-Water
<u>2W-2680</u>		Mounting GP-Bellows
<u>335-5205</u>		Cover GP-Generator
<u>293-7636</u>		Lines GP-Air
<u>325-8394</u>		Door GP-Access
<u>388-8782</u>		Connection GP-Water
<u>213-4520</u>		Guard GP-Belt
<u>210-6269</u>		Manifold GP-Water
<u>229-5706</u>		Sensor GP-Speed
<u>210-6270</u>		Connection GP-Water
<u>212-8212</u>		Mounting GP-Alternator
<u>333-0421</u>		Fastener GP-Wiring Harn
<u>257-2143</u>		Barring & Mounting GP
<u>3L-0462</u>		Test- Gas Genset
<u>285-7192</u>		Ignition GP-Gas Engine
<u>354-6883</u>		Lock GP
<u>388-8800</u>		Heater GP - Jw
<u>392-9610</u>		Panel AR
<u>388-8783</u>		Mounting GP-Jacket Wtr
<u>389-9653</u>		Parts GP-Miscellaneous
<u>266-6608</u>		Regulator GP-Oil Level
<u>276-4847</u>		Connection GP-Electrical
<u>198-1905</u>		Paint
<u>285-7194</u>		Wiring GP-Engine
<u>211-1074</u>		Breather GP

Part Number	Serial Number	Part Name
283-0781		Oil
<u>247-3784</u>		Cover GP-Cylinder Block
<u>388-8787</u>		Valve GP-Gas Control
<u>232-0422</u>		Housing & Regulator GP
<u>240-7976</u>		Cover GP-Accessory Driv
<u>190-8843</u>		Drain GP-Engine Oil
<u>285-7199</u>		Wiring GP-Electronic Cor
<u>333-1184</u>		Alternator GP-Charging
3L-0456		Procedure - Dvr Prog Anc
<u>266-8594</u>		Turbocharger GP
<u>220-7253</u>		Wiring GP-Engine
<u>271-5619</u>		Lines GP-Water
<u>3N-8594</u>		Cover GP-Engine Lifting I
<u>391-1329</u>		Wiring GP-Panel
<u>350-5665</u>		Shield GP-Manifold
<u>190-8842</u>		Plug GP-Oil Pan
1000	XL600192	Engine
1404	G5Z01230	Generator
354-8751		Film GP
3L-0467		Two Bearing Gen ALIGNI
360-3743		Electronics GP-Generato
<u>358-0711</u>		Wiring GP-Panel
<u>392-3589</u>		Heater GP-Jacket Water
<u>425-6601</u>		Camshaft GP
223-9772		Gauge GP-Oil Level (Dip:
<u>318-3127</u>		Connection GP-Terminal
<u>275-8193</u>		Mounting GP-Instrument
<u>391-3895</u>		Radiator GP
307-8458		Mounting GP-Jacket Wtr
<u>253-0585</u>		Pump GP-Water
<u>388-8784</u>		Sensor & Mtg GP-Electric
<u>373-4095</u>		Rail GP-Engine Support
<u>366-5476</u>		Pump GP-Prelubrication
<u>276-2910</u>		Pump GP-Prelubrication
<u>276-2910</u>		Pump GP-Prelubrication
<u>276-2910</u>		Pump GP-Prelubrication
<u>238-3321</u>		Aftercooler GP-Water
388-8775		Wiring GP - (XQ1475G)
<u>293-7530</u>		Lines GP-Fuel
<u>352-9862</u>		Film GP
<u>333-1659</u>		Piston GP
<u>375-2740</u>		Mounting GP-Rail
271-0185		Sensor GP-Temperature
<u>206-4164</u>		Lines GP-Air
<u>211-0560</u>		Camshaft GP
<u>206-4180</u>		Mounting GP-Control
<u>388-8771</u>		Wiring GP-Panel
<u>252-5589</u>		Coupling GP-Generator L
<u>285-7190</u>		Wiring GP-Sensor
<u>352-0924</u>		Lines GP-Water
<u>241-6715</u>		Drive GP-Accessory
0V-2319		Yes
<u>8N-9639</u>		Guard GP-Damper

Part Number	Serial Number	Part Name
<u>191-6658</u>		Starting Motor GP-Electri
<u>316-5555</u>		Battery & Mounting GP
<u>244-9895</u>		Circuit Breaker AS
<u>392-4538</u>		Wiring GP-Jacket Water I
<u>393-1214</u>		Cover GP-Enclosure
<u>276-2910</u>		Pump GP-Prelubrication

Engine - Entire Group (XL600192)

Part Number	Change Level	Part Name
<u>293-7530</u> 	02	Lines GP-Fuel
<u>293-7379</u> 	03	Elbow GP-Air Inlet
<u>388-8783</u> 	00	Mounting GP-Jacket Wtr
<u>388-8782</u> 	00	Connection GP-Water
<u>392-3589</u> 	00	Heater GP-Jacket Water
<u>391-3895</u> 	00	Radiator GP
<u>316-5555</u> 	05	Battery & Mounting GP
<u>325-8393</u> 	02	Door GP-Access
<u>325-8394</u> 	02	Door GP-Access
<u>388-8787</u> 	00	Valve GP-Combination
<u>425-6601</u> 	00	Camshaft GP
<u>294-7498</u> 	01	Generator AR
<u>266-8594</u> 	03	Turbocharger GP
<u>293-7636</u> 	03	Lines GP-Air
<u>285-7187</u> 	04	Box GP-Control
<u>275-8193</u> 	02	Mounting GP-Instrument
<u>285-7190</u> 	03	Wiring GP-Sensor
<u>285-7194</u> 	03	Wiring GP-Engine
<u>285-7199</u> 	04	Wiring GP-Electronic Cor
<u>285-7192</u> 	03	Ignition GP-Gas Engine
<u>2W-8772</u> 	04	Flywheel GP
<u>8N-9639</u> 	06	Guard GP-Damper
<u>8N-7182</u> 	12	Damper GP
<u>241-6715</u>	03	Drive GP-Accessory

Part Number	Change Level	Part Name
<u>190-8842</u>	00	Plug GP-Oil Pan
<u>190-8843</u>	00	Drain GP-Engine Oil
<u>191-6658</u>	01	Starting Motor GP-Electri
<u>200-6405</u>	10	Lines GP-Engine Oil
<u>232-0422</u>	01	Housing & Regulator GP
<u>238-3321</u>	03	Aftercooler GP-Water
<u>204-6483</u>	05	Cover GP-Engine
<u>205-0359</u>	05	Lines GP-Turbocharger V
<u>206-4164</u>	10	Lines GP-Air
<u>206-4180</u>	07	Mounting GP-Control
<u>240-7976</u>	02	Cover GP-Accessory Driv
<u>210-6269</u>	03	Manifold GP-Water
<u>210-6270</u>	06	Connection GP-Water
<u>352-0924</u>	01	Lines GP-Water
<u>210-6281</u>	04	Lines GP-Water
<u>210-7753</u>	14	Manifold GP-Exhaust
<u>211-1074</u>	03	Breather GP
<u>388-8784</u>	02	Sensor & Mtg GP-Electric
<u>360-4240</u>	02	Filter GP-Eng Oil
<u>220-0581</u>	00	Shield GP-Exhaust
<u>333-1659</u>	00	Piston GP
<u>271-5619</u>	08	Lines GP-Water
<u>253-0585</u>	05	Pump GP-Water
<u>278-1348</u>	03	Gear GP-Front
<u>350-5665</u>	00	Shield GP-Manifold
<u>333-6184</u>	00	Shield GP-Manifold
<u>350-4305</u>	03	Wiring GP-Prelubrication
<u>366-5476</u>	01	Pump GP-Prelubrication

Part Number	Change Level	Part Name
<u>360-4241</u> I	01	Lines GP-Water
<u>213-4520</u> I	04	Guard GP-Belt
<u>212-8212</u> I	05	Mounting GP-Alternator
<u>220-7253</u> I	01	Wiring GP-Engine
<u>333-1184</u> I	05	Alternator GP-Charging
<u>266-6608</u> I	01	Regulator GP-Oil Level
<u>257-2143</u> I	01	Barring & Mounting GP
<u>247-3784</u> I	07	Cover GP-Cylinder Block
<u>3N-8594</u> I	06	Cover GP-Engine Lifting I
<u>373-4095</u> I	00	Rail GP - Engine
<u>252-5589</u> I	04	Installation AR-Generator
<u>352-9862</u> I	00	Film GP
<u>276-4847</u> I	00	Connection GP-Electrical
<u>244-9895</u> I	01	Circuit Breaker AS
<u>335-5205</u> I	01	Cover GP-Generator
<u>318-3127</u> I	06	Connection GP-Terminal
<u>375-2740</u> I	00	Extension GP
<u>333-0421</u> I	01	Fastener GP-Wiring Harn
<u>358-0711</u> I	03	Wiring GP-Panel
<u>388-8771</u> I	00	Wiring GP-Panel
<u>369-9257</u> I	01	Circuit Breaker
<u>229-5706</u> I	05	Sensor GP-Speed
<u>391-1329</u> I	00	Wiring GP-Panel
<u>389-9653</u> s	01	Parts GP-Miscellaneous
<u>2W-2680</u> s	09	Mounting GP-Bellows
<u>271-0185</u> I	04	Sensor GP-Temperature
<u>2W-2680</u> s		Mounting GP-Bellows
<u>1B-5357</u> s		Nut-Full
<u>2W-2680</u>		Mounting GP-Bellows

Part Number s	Change Level	Part Name
5P-8245 s		Washer-Hard
9X-8873 s		Bolt
111-5822 s		Gasket-Exhaust
207-1331 s		Bellows AS
<u>389-9653</u> s		Shipping AR
6V-8188 s		Nut
7X-0325 s		Bolt
7X-0413 s		Bolt
8T-4223 s		Washer-Hard
8T-4988 s		Clamp-Hose
8T-4990 s		Clamp-Hose
113-7376 s		Washer
114-0254 s		Isolator
135-5294 s		Elbow-Rubber
<u>206-0884</u> s		Air Cleaner GP
286-0177 s		Battery Charger
320-2785 s		Hose-Reducer
<u>6L-4502</u> s		Chart-Plate & Film
I - Installed		
S - Shipped Loose		