

3412C Generator Set

Machine Serial Number - BCW00485

Machine Build Date - 2001/11/14

Engine Serial Number - BPG00334

Engine Build Date - 2001/10/25

Product - Entire Group (BCW00485)

Part Number	Serial Number	Part Name
<u>187-2026</u>		General AR-Genset
1000	BPG00334	Engine
1404	AGE00505	Generator

Engine - Entire Group (BPG00334)

Part Number	Change Level	Part Name
<u>187-2026</u> 	00	General AR-Genset
<u>186-4819</u> 	04	Engine AR-Complete
<u>3N-8594</u> 	04	Cover GP-Engine Lifting Eye
<u>6N-8878</u> 	02	Gauge GP-Fuel Pressure
<u>142-6947</u> 	04	Sensor GP-Coolant Level
<u>148-5232</u> 	02	Fitting GP-Exhaust
<u>149-7876</u> 	03	Fastener GP-Generator Coupling
<u>153-3434</u> 	04	Mounting GP-Engine Flexible
<u>155-6256</u> 	00	Control GP-Governor
<u>166-5029</u> 	02	Lines GP-Engine Oil Drain
<u>166-5034</u> 	02	Fumes Disposal GP
<u>168-3237</u> 	04	Support GP-Battery
<u>168-3241</u> 	05	Enclosure GP-Generator
<u>168-3293</u> 	02	Air Cleaner GP

Part Number	Change Level	Part Name
<u>169-0226</u> 	03	Box GP-Junction
<u>169-0247</u> 	07	Box GP-Extension Terminal
<u>169-2055</u> 	02	Lines GP-Flexible Fuel
<u>169-2065</u> 	00	Base GP-Engine & Generator
<u>169-2067</u> 	03	Lines GP-Coolant Drain
<u>169-4439</u> 	04	Harness AS-Wiring
<u>169-4441</u> 	05	Harness AS-Wiring
<u>169-4444</u> 	04	Harness AS-Wiring
<u>169-4450</u> 	03	Harness AS-Wiring
<u>180-3986</u> 	02	Mounting GP-Junction Box
<u>156-0040</u> 	00	Transformer GP-Current
<u>170-8400</u> 	03	Cover GP-Control Panel
<u>188-8215</u> 	01	Guard GP-Belt
<u>196-8775</u> 	01	Switch GP-Disconnect
<u>136-6625</u> 	00	Generator AR
<u>153-3441</u> 	02	Sensor GP-Engine
<u>169-0200</u> 	08	Panel GP-Electronic
<u>171-6833</u> 	03	Relay GP
<u>193-3247</u> 	02	Harness AS-Wiring
<u>143-9519</u> 	04	Regulator GP-Voltage
<u>155-8893</u> 	01	Wiring GP-Generator
<u>193-3262</u>	01	Harness AS-Wiring

Part Number	Change Level	Part Name
<u>169-2106</u>	03	Cover GP-Access
<u>203-7165</u>	00	Connection GP-Generator Leads
184-7039	01	Kit-Seal
<u>190-2565</u>	02	Harness AS-Wiring
<u>200-0844</u>	01	Relay GP
<u>190-2566</u>	02	Harness AS-Wiring
<u>200-0842</u>	01	Relay GP
<u>171-6827</u>	03	Panel GP-Instrument
<u>169-2058</u>	02	Heater GP-Jacket Water
<u>171-6841</u>	03	Connection GP-Electrical
<u>111-6138</u>	02	Battery Charger
<u>184-7029</u>	01	Mounting GP-Battery Charger
<u>203-4316</u>	00	Connection GP-Electrical
<u>7L-7872</u>	08	Battery GP
<u>184-7031</u>	02	Contactore GP
<u>169-0237</u>	03	Cover GP-Generator
<u>169-4524</u>	07	Mounting GP-Circuit Breaker
<u>183-2491</u>	01	Circuit Breaker GP
<u>184-7038</u>	01	Wiring GP-Panel
<u>189-8891</u>	01	Connection GP-Generator Leads
<u>105-7931</u>	01	Switch AS-Auxiliary

Part Number	Change Level	Part Name
201-2675	00	Guard GP-Engine
I		
AGE00505		
BCW00485		
I - Installed		