

3406C Generator Set

Machine Serial Number - KPS01946

Machine Build Date - 2005/02/27

Engine Serial Number - 1DZ09362

Engine Build Date -

Product - Entire Group (KPS01946)

Part Number	Serial Number	Part Name
<u>217-8403</u>		General AR
<u>128-8556</u>		Adapter GP-Base End Channels
<u>4P-5639</u>		Kit-Space Heater
<u>4P-3829</u>		Heater GP-Space
PL4838		RH Mtg Of Control Panel
121-4713		Instructions
<u>6N-8878</u>		Gauge GP-Fuel Pressure
<u>147-3081</u>		Filter GP-Fuel
<u>220-7918</u>		Module GP-Alarm
<u>220-7919</u>		Relay GP
1000	1DZ09362	Engine
1404	9DR05279	Generator

Engine - Entire Group (1DZ09362)

Part Number	Change Level	Part Name
<u>217-8403</u> 	00	General AR
<u>2W-8198</u> 	09	Shutoff GP-Electrical
<u>4N-1062</u> 	11	Starting Motor GP-Electric
<u>4N-3093</u> 	09	Fan GP-Blower
<u>4N-9778</u> 	04	Lines GP-Water
<u>4P-7610</u> 	03	Sensor GP-Speed
<u>6L-2927</u> 	08	Elbow GP-Exhaust
<u>7N-8837</u> 	05	Drive GP-Fan
<u>103-1956</u> 	01	Mounting GP-Contactor
<u>103-6101</u> 	05	Control GP-Engine Monitoring
<u>109-3319</u> 	03	Coupling GP-Generator
<u>128-5881</u> 	01	Base GP-Engine & Generator
<u>129-6803</u> 	06	Connection GP-Electrical
<u>129-7502</u> 	01	Lines GP-Coolant Drain
<u>192-7208</u> 	00	Lines GP-Engine Oil Drain
<u>199-1430</u> 	00	Mounting GP-Radiator

Part Number	Change Level	Part Name
<u>202-8626</u> 	02	Fumes Disposal GP
<u>205-7860</u> 	04	Film GP
<u>217-8408</u> 	02	Engine AR
<u>219-6107</u> 	02	Radiator GP
<u>219-6108</u> 	00	Mounting GP-Bracket
<u>219-3214</u> 	09	Panel GP-Electronic
<u>219-3233</u> 	01	Fastener GP-Wiring Harness
<u>222-0751</u> 	08	Harness AS-Engine
<u>129-1478</u> 	01	Generator AR
<u>200-4289</u> 	01	Guard GP-Belt
<u>219-3220</u> 	01	Control AR-Emcp Electronic
<u>7E-0123</u> 	01	Mounting GP-Governor Actuator
<u>7E-0598</u> 	00	Actuator AS-Governor
<u>7E-1232</u> 	03	Governor AS-Electronic
<u>222-5397</u> 	02	Harness AS-Wiring
<u>129-9424</u> 	05	Enclosure GP-Generator
<u>128-7405</u> 	01	Shield-Rain
<u>220-7918</u> 	00	Module GP-Alarm
<u>220-7919</u> 	02	Relay GP
<u>247-4215</u> 	04	Regulator GP-Voltage
<u>4P-5639</u> 	05	Kit-Space Heater
<u>222-5393</u> 	02	Harness AS
<u>118-4304</u> 	00	Battery Charger
<u>130-1983</u> 	04	Fastener GP-Battery Charger
<u>4W-5580</u> 	03	Mounting GP-Alternator
<u>6T-1395</u> 	06	Alternator GP-Charging
<u>103-7284</u> 	01	Mounting GP-Circuit Breaker
<u>219-6109</u> 	01	Guard GP-Belt
<u>128-8556</u>	00	Adapter GP-Base End Channels

Part Number	Change Level	Part Name
<u>110-9697</u> I	03	Lines GP-Flexible Fuel
<u>130-1270</u> I	03	Tank AS-Fuel
<u>222-5395</u> I	03	Harness AS
<u>222-5396</u> I	05	Harness AS
<u>116-7041</u> I	01	Mounting GP-Muffler
<u>130-6277</u> I	02	Muffler
<u>136-5938</u> I	01	Fitting GP-Exhaust
<u>116-0428</u> I	02	Fitting GP-Exhaust
<u>6L-3340</u> I	01	Neutral Bus Bar AS
<u>105-7185</u> I	01	Harness AS-Panel
<u>169-1839</u> I	00	Circuit Breaker GP
<u>169-1851</u> I	02	Mounting GP-Circuit Breaker
<u>222-5184</u> I	01	Box GP-Extension Terminal
<u>130-5691</u> I	01	Cable AS-Extension
<u>222-5186</u> I	01	Box GP-Extension Terminal
<u>135-2823</u> I	01	Connection GP-Electrical
<u>7L-7872</u> I	09	Battery GP
<u>128-5214</u> I	00	Support GP-Battery
<u>220-4135</u> I	02	Heater GP-Jacket Water
<u>9Y-6103</u> I	01	Air Cleaner GP
<u>147-3081</u> I	02	Filter GP-Fuel
<u>6N-8878</u> I	02	Gauge GP-Fuel Pressure
<u>7N-1295</u> I	01	Spring
I - Installed		