

**3516 Gen Set Engine**

Engine Serial Number - 25Z06308

Engine Build Date - 1999/03/02

**Engine - Entire Group (25Z06308)**

Part Number	Change Level	Part Name
<u>107-7350</u> 	08	Engine AR
<u>3N-4905</u> 	03	Hose AS
<u>4P-0558</u> 	00	Air Cleaner GP
<u>4P-7610</u> 	02	Sensor GP-Speed
<u>4W-4755</u> 	02	Switch GP-Magnetic
<u>6I-0134</u> 	05	Mounting GP-Air Cleaner
<u>7C-0527</u> 	02	Starting Motor GP-Electric
<u>7E-2858</u> 	00	Alternator GP-Charging
<u>7E-4836</u> 	04	Mounting GP-Alternator
<u>7E-6247</u> 	02	Heater GP-Jacket Water
<u>7N-6782</u> 	08	Indicator GP-Air Filter Change
<u>7W-3953</u> 	08	Drive GP-Fan
<u>7W-5224</u> 	00	Pulley GP-Fan Drive
<u>7W-5780</u> 	04	Guard GP-Belt
<u>7W-6669</u> 	01	Guard GP-Damper
<u>7W-7214</u> 	04	Guard GP-Belt
<u>7W-9032</u> 	04	Enclosure GP-Wiring
<u>7W-9704</u> 	05	Pump GP-Sump
<u>8N-9639</u> 	04	Guard GP-Damper
<u>104-9727</u> 	03	Mounting GP-Contactor
<u>105-2048</u> 	02	Sensor & Mtg GP-Radiator
<u>105-3255</u> 	00	Mounting GP-Circuit Breaker
<u>105-7184</u> 	04	Fastener GP-Wiring Harness
<u>107-0165</u> 	01	Pump GP-Fuel Priming
<u>115-7182</u> 	01	Rail GP-Engine Support
<u>121-8855</u>	05	Connection GP-Electrical

Part Number	Change Level	Part Name
<u>125-9326</u>	01	Transformer GP-Potential
<u>129-2235</u>	01	Harness AS-Engine
<u>130-5652</u>	01	Panel GP-Control
<u>131-7253</u>	03	Control GP-Governor
<u>134-3159</u>	03	Mounting GP-Jacket Wtr Heater
<u>134-3160</u>	02	Mounting GP-Jacket Wtr Heater
<u>134-3241</u>	01	Sensor GP-Temp & Press
<u>135-3319</u>	03	Battery Charger GP
<u>140-2665</u>	00	Fumes Disposal GP
<u>141-1598</u>	00	Switch GP-Disconnect
<u>141-1809</u>	01	Box GP-Generator Connection
<u>141-6413</u>	00	Rail GP-Slide
<u>141-7883</u>	00	Box AS-Storage
<u>146-0806</u>	01	Door AS-Access
<u>146-9838</u>	03	Panel GP-Control
<u>147-1165</u>	06	Switchgear AR
<u>149-8779</u>	02	Heater GP-Space
<u>149-6401</u>	00	Battery GP
<u>152-2876</u>	02	Harness AS-Wiring
<u>153-0180</u>	00	Vent GP-Fuel Tank
<u>155-4428</u>	02	Radiator GP
<u>130-5653</u>	03	Panel GP-Control
<u>7W-7319</u>	02	Regulator GP-Oil Level
<u>102-6845</u>	02	Tank GP-Engine Oil
<u>140-2674</u>	00	Valve GP-Radiator Drain
<u>149-5237</u>	01	Enclosure GP-Generator
<u>151-5674</u>	01	Connection GP-Electrical
<u>152-8793</u>	01	Insulation GP-Generator

Part Number	Change Level	Part Name
<u>149-8358</u> I	02	Baffle AS
<u>154-3629</u> I	00	Muffler GP
<u>162-8683</u> I	00	Mounting GP-Engine
<u>168-8623</u> I	00	Container AR
<u>146-9053</u> I	02	Tank GP-Fuel
<u>149-6401</u> I	00	Battery GP
<u>113-1217</u> I	00	Door AS
<u>131-0487</u> I	03	Control GP-Emcp Electronic
<u>149-8841</u> I	00	Door GP-Access
<u>155-7445</u> I	01	Shield AS
<u>9Y-1392</u> I	02	Jack
<u>151-5714</u> I	00	Ladder GP
<u>156-9155</u> I	01	Handle AS
<u>125-9976</u> I	00	Relay GP
<u>131-2842</u> I	02	Panel GP-Control
<u>136-6168</u> I	02	Panel AR-Utility
<u>136-7052</u> I	00	Control GP-Engine Electronic
<u>147-1186</u> I	01	Control GP-Circuit Breaker
<u>149-8781</u> I	02	Heater GP-Space
<u>147-1190</u> I	00	Paralleling GP-Automatic
<u>129-3164</u> I	03	Enclosure GP-Extension
<u>131-0341</u> I	01	Meter GP-Power Factor
<u>131-0488</u> I	01	Panel GP-Control
<u>121-6200</u> I	04	Regulator GP-Voltage
<u>129-5762</u> I	01	Meter GP-Watt
<u>130-5379</u> I, L	01	Paralleling GP-Manual
<u>131-2837</u> I, L	03	Panel GP-Control
<u>134-0959</u> I, L	06	Bus Bar GP
<u>147-1170</u>	00	Panel GP-Circuit Breaker

Part Number I, L	Change Level	Part Name
<u>122-6590</u> I, L	00	Transformer AS-Current
<u>149-7755</u> I, L	00	Enclosure GP-Generator
<u>155-7444</u> I, L	01	Shield AS
<u>121-6202</u> I, L	06	Regulator GP-Voltage
<u>131-2960</u> I, L	02	Relay GP
3E-3361 S		Plug AS-Connector
3E-3362 S		Wedge-Plug Lock
8T-8730 S		Socket-Connector
131-4254 S		Kit-Parts
<u>171-6719</u> S		Kit-Parts
<u>171-6721</u> S		Kit-Parts
<b>I - Installed</b> <b>L - Less Indicator</b> <b>S - Shipped Loose</b>		