

3412C Generator Set

Machine Serial Number - 9EP00236

Machine Build Date - 2000/09/14

3412C Engine - Machine

Engine Serial Number - 3FZ

Engine Build Date - 2000/07/19

Product - Entire Group (9EP00236)

Part Number	Serial Number	Part Name
<u>167-6899</u>		General AR
1000	3FZ01695	Engine
1404	4RJ00516	Generator

Engine - Entire Group (3FZ01695)

Part Number	Change Level	Part Name
<u>167-6899</u> I	00	General AR
<u>166-8592</u> I	02	Engine AR
<u>3N-8594</u> I	03	Cover GP-Engine Lifting Eye
<u>6N-8878</u> I	02	Gauge GP-Fuel Pressure
<u>142-6947</u> I	03	Sensor GP-Coolant Level
<u>149-7876</u> I	02	Fastener GP-Generator Coupling
<u>151-7733</u> I	02	Switch GP-Disconnect
<u>153-3434</u> I	03	Mounting GP-Engine Flexible
<u>155-6256</u> I	00	Control GP-Governor
<u>168-3237</u> I	02	Support GP-Battery
<u>168-3241</u> I	03	Enclosure GP-Generator
<u>168-3290</u> I	01	Air Cleaner GP
<u>169-0226</u> I	02	Box GP-Junction
<u>169-0247</u> I	04	Box GP-Extension Terminal
<u>169-0296</u> I	01	Connection GP-Generator Leads
<u>169-2050</u> I	05	Radiator & Fan GP
<u>169-4439</u> I	01	Harness AS-Wiring
<u>169-4441</u> I	01	Harness AS-Wiring
<u>169-4444</u> I	01	Harness AS-Wiring
<u>169-4450</u> I	01	Harness AS-Wiring
<u>173-7080</u>	00	Generator AR

Part Number	Change Level	Part Name
<u>180-3986</u>	02	Mounting GP-Junction Box
<u>156-0040</u>	00	Transformer GP-Current
<u>188-8214</u>	00	Guard GP-Belt
<u>188-1003</u>	01	Enclosure GP-Generator
<u>168-3252</u>	02	Lines GP-Coolant Drain
<u>169-2069</u>	01	Lines GP-Flexible Fuel
<u>169-2121</u>	01	Lines GP-Engine Oil Drain
<u>170-8401</u>	01	Base GP-Engine & Generator
<u>169-2120</u>	01	Fumes Disposal GP
<u>188-3854</u>	01	Extension GP-Fuel Tank
<u>171-6842</u>	01	Connection GP-Electrical
<u>143-9519</u>	03	Regulator GP-Voltage
<u>155-8893</u>	01	Wiring GP-Generator
<u>193-3262</u>	00	Harness AS-Wiring
<u>169-2106</u>	01	Cover GP-Access
<u>171-6833</u>	01	Relay GP
<u>190-2566</u>	00	Harness AS-Wiring
<u>131-1965</u>	01	Panel GP-Instrument
<u>168-3238</u>	01	Heater GP-Jacket Water
<u>171-6841</u>	01	Connection GP-Electrical
<u>111-6138</u>	02	Battery Charger
<u>171-6844</u>	02	Connection GP-Electrical
<u>184-7040</u>	00	Mounting GP-Battery Charger
<u>7L-7872</u>	08	Battery GP
<u>153-3441</u>	03	Sensor GP-Engine
<u>169-0200</u>	05	Panel GP-Electronic
<u>193-3247</u>	00	Harness AS-Wiring
<u>169-0237</u>	01	Cover GP-Generator

Part Number	Change Level	Part Name
<u>169-4524</u> I	02	Mounting GP-Circuit Breaker
<u>183-2490</u> I	00	Circuit Breaker GP
<u>184-7038</u> I	00	Wiring GP-Panel
<u>189-6394</u> I	00	Connection GP-Generator Leads
<u>189-8891</u> I	00	Connection GP-Generator Leads
<u>179-9017</u> I	00	Cover GP-Generator
<u>183-2489</u> I	00	Circuit Breaker GP
<u>183-2519</u> I	02	Connection GP-Generator Leads
<u>169-4522</u> I	01	Box GP-Extension Terminal
<u>105-7931</u> I	01	Switch AS-Auxiliary
<u>184-7031</u> I	00	Contactore GP
<u>171-6834</u> I	01	Module GP-Alarm
I - Installed		