

C15 INDUSTRIAL ENGINE

Engine Serial Number – JRE prefix (Build Date - 10/2005, Test Date - 10/2005, Ship Date - unknown)

✦ ENGINE - ENTIRE GROUP (JRE prefix)

Qty.	NPR	Note	Part No.	ChangeReq. Level	Qty	Part Name
						FEATURE CODES
		I	C15DI11	F	001	C15 ACERT DIT-ATAAC IND ENG 11
		I	FLYHG11	F	001	FLY. HSG SAE NO. 1
		I	ACGOV00	F	001	AIR COMPRESSOR GOVERNOR
		I	AIRLG04	F	001	AIR LINES - 45 DEGREE
		I	ALT1211	F	001	CHARGING ALTERNATOR 12V 115 AM
		I	FDV0011	F	001	FAN DRIVE 0.681 RATIO
		I	CLS0001	F	001	COOLANT LEVEL SENSOR
		I	EXCAD01	F	001	STRAIGHT EXHAUST ADAPTER
		I	LUBOIL3	F	001	LUBRICATING OIL
		I	AIRSO03	F	001	AIR SHUTOFF 12V
		I	FRSUP05	F	001	FRONT ENGINE SUPPORT 05
		I	2100RPM	F	001	2100 RPM
		I	AIRCP03	F	001	AIR COMPRESSOR
		I	ALMT03	F	001	ALTERNATOR MOUNTING
		I	CGTOTH	F	001	THROTTLE POSITION SENSOR-OTHER
		I	ELSM128	F	001	ELEC START MTR 12V
		I	EXHFRNT	F	001	FRONT FACING EXHAUST
		I	FLYAD01	F	001	FLYWHEEL ADAPTER
		I	FULIN04	F	001	FUEL LINES LH
		I	INDUSTB	F	001	INDUSTRIAL B RATING
		I	INDUSTR	F	001	APPLICATION
		I	OFLTOP1	F	001	TOP OIL FILLER
		I	PFFWS02	F	001	PRIMARY FF/WATER SEP
		I	VLT0012	F	001	12 VOLT
		I	MSPETWS	F	001	PETRO WELL SERVICING
		I	PBKCD01	F	001	PARTS BOOK-ELECTRONIC
		I	PSD05	F	001	WHSLE ENG MERCHANDISING PRGM
		I	MSCPB11	F	001	WORKOVER
		I	MWCODED	F	001	MECHANICAL DRIVE

	I	CERTIF5	F	001	EPA/CARB TIER3 & EC STAGE IIIA
	I	HP00475	F	001	475 BHP (354 BKW) W/O FAN
					PART NUMBERS
	I	PQ0088	05	001	C15 ACERT DIT-ATAAC IND ENG 11
	<u>NPR</u>	IY <u>241-0020</u>	06	001	ENGINE AR-CORE
	<u>NPR</u>	IY <u>4P-5894</u>	05	001	DAMPER & PULLEY GP
	I	5P-2506	00	001	LITERATURE GP
	<u>NPR</u>	IY <u>6I-3950</u>	04	001	SUPPORT GP-ENGINE
	<u>NPR</u>	I 107-4447	03	001	INSTRUCTION-TURBOCHARGER
	<u>NPR</u>	IY <u>107-6736</u>	01	001	COVER GP-CYLINDER BLOCK
	<u>NPR</u>	IY <u>107-6737</u>	01	001	COVER GP-CYLINDER BLOCK
	<u>NPR</u>	IY <u>108-2312</u>	02	001	FITTING GP-QUICK DISCONNECT
	<u>NPR</u>	IY <u>109-1657</u>	01	001	FASTENER GP-VALVE MECHANISM
	<u>NPR</u>	IY <u>255-9250</u>	00	001	PLUG GP-WATER LINES
	<u>NPR</u>	IY <u>109-2373</u>	01	001	FASTENER GP-WATER PUMP
	<u>NPR</u>	IY <u>111-2088</u>	01	001	LIFTING GP-ENGINE
	<u>NPR</u>	I 121-0499	02	001	COVER GP-STORAGE
	<u>NPR</u>	IY <u>124-0657</u>	01	001	SHIELD GP-MANIFOLD
	<u>NPR</u>	IY <u>127-0564</u>	00	001	LIFTING GP-ENGINE
	<u>NPR</u>	IY <u>140-9746</u>	00	001	COVER GP-CYLINDER BLOCK
	<u>NPR</u>	IY <u>150-4279</u>	02	001	PUMP & MTG GP-FUEL TRANSFER
	<u>NPR</u>	IY <u>151-5366</u>	00	001	FASTENER GP-ENGINE
	<u>NPR</u>	IY <u>255-9252</u>	00	001	PLUG GP-WATER LINES
	<u>NPR</u>	IY <u>255-9251</u>	00	001	PLUG GP-WATER LINES
	<u>NPR</u>	IY <u>159-6159</u>	05	001	COVER GP-FRONT HOUSING
	<u>NPR</u>	IY <u>159-9107</u>	04	001	CONNECTION GP-ELECTRICAL
	<u>NPR</u>	IY <u>159-9362</u>	07	001	FUMES DISPOSAL GP
	<u>NPR</u>	IY <u>160-8328</u>	01	001	PAN GP-OIL
		IY <u>160-8329</u>	00	001	FASTENER GP-OIL PAN
	<u>NPR</u>	IY <u>237-4291</u>	03	001	MANIFOLD GP-EXHAUST
	<u>NPR</u>	IY <u>170-1282</u>	01	001	FILTER GP-ENGINE OIL
	<u>NPR</u>	IY <u>172-7120</u>	01	001	FASTENER GP-ENGINE
	<u>NPR</u>	IY <u>224-1229</u>	05	001	HOUSING GP-FRONT
	<u>NPR</u>	IY <u>187-0673</u>	01	001	GUIDE GP-OIL LEVEL GAUGE
	<u>NPR</u>	IY <u>255-9245</u>	02	001	LINES GP-WATER
	<u>NPR</u>	IY <u>236-1780</u>	02	001	CONTROL & MTG GP-ENGINE ELEK

	NPR	IY	<u>237-4294</u>	04	001	WIRING GP-ENGINE
	NPR	IY	<u>240-6054</u>	02	001	CONNECTION GP-ELECTRICAL
	NPR	IY	<u>200-2852</u>	00	001	FASTENER GP-WATER LINES
	NPR	IY	<u>201-6631</u>	01	001	FITTING GP-FUEL LINES
	NPR	IY	<u>212-1487</u>	00	001	LINES GP-TURBOCHARGER OIL
	NPR	IY	<u>224-0754</u>	00	001	FASTENER GP-OIL COOLER
	NPR	IY	<u>234-9184</u>	00	001	PLUG GP-CYLINDER HEAD
	NPR	IY	<u>234-9706</u>	01	001	PLUG GP-CYLINDER BLOCK
	NPR	IY	<u>247-8211</u>	00	001	PLUG GP-CYLINDER BLOCK
	NPR	IY	<u>227-9495</u>	01	001	SUPPORT GP-ENGINE
	NPR	IY	<u>238-9384</u>	01	001	FASTENER GP-WIRING HARNESS
	NPR	IY	<u>252-9659</u>	01	001	TURBOCHARGER GP
		I	255-4213	00	001	INSTRUCTIONS
	NPR	I	211-4834	03	001	PLATE & FILM GP
	NPR	IY	<u>275-3979</u>	01	001	SHIELD GP-HEAT
		I	PQ0198	02	001	FLYWHEEL HOUSING SAE NO. 1
	NPR	IY	<u>141-8953</u>	00	001	FASTENER GP-FUEL LINES
	NPR	IY	<u>135-7634</u>	04	001	HOUSING GP-FLYWHEEL
	NPR	IY	<u>127-5728</u>	00	001	COVER GP-FLYWHEEL HOUSING
	NPR	IY	<u>135-8015</u>	00	001	PLUG GP-FLYWHEEL HOUSING
		I	PQ0207	02	001	PR FUEL FILTER/WATER SEP
		IY	<u>212-9431</u>	00	001	FILTER GP-WATER SEP & FUEL
	NPR	IY	<u>237-4290</u>	02	001	LINES GP-FUEL FILTER
		I	PQ0210	02	001	AIR COMPRESSOR (BA-922)
	NPR	IY	<u>192-3219</u>	00	001	MANIFOLD GP-FUEL
	NPR	IY	<u>224-0875</u>	01	001	FITTING GP-WATER LINES
	NPR	IY	<u>232-5187</u>	00	001	AIR COMPRESSOR GP
	NPR	IY	<u>277-4857</u>	00	001	PLUG GP-AIR COMPRESSOR
	NPR	IY	<u>278-0026</u>	00	001	PLUG GP-AIR COMPRESSOR
	NPR	IY	<u>234-9775</u>	01	001	PLUG GP-ENGINE
	NPR	IY	<u>224-4501</u>	02	001	GOVERNOR GP-AIR COMPRESSOR
	NPR	IY	<u>126-0079</u>	02	001	ADAPTER GP-TURBOCHARGER AIR
	NPR	IRY	<u>121-4134</u>	02	001	ALTERNATOR GP-CHARGING
		I	PQ0212	03	001	ALTERNATOR MOUNTING RH 03
	NPR	IY	<u>118-3419</u>	02	001	MOUNTING GP-ALTERNATOR
	NPR	IY	<u>135-6940</u>	00	001	FASTENER GP-ALTERNATOR

	I	PA6452	03	001	FAN DRIVE .681 RATIO
	<u>NPR</u>	IY <u>120-4231</u>	03	001	DRIVE GP-FAN
	I	PA7160	07	001	COOLANT LEVEL SENSOR
	<u>NPR</u>	IY <u>165-6634</u>	02	001	SENSOR GP-COOLANT LEVEL
	<u>NPR</u>	IY <u>4W-9183</u>	02	001	CONNECTION GP-EXHAUST
	I	PQ0495	00	001	FLYWHEEL ADAPTER -SAE NO. 1
	<u>NPR</u>	IY <u>148-8808</u>	01	001	ADAPTER GP-FLYWHEEL
	I	PQ0220	00	001	LINES GP-FUEL FILTER (LH LOWER
	<u>NPR</u>	IY <u>224-2165</u>	02	001	PUMP GP-FUEL PRM & SEC FILTER
	<u>NPR</u>	IY <u>255-0655</u>	02	001	LINES GP-FUEL FILTER
	<u>NPR</u>	IY <u>192-1623</u>	02	001	MOUNTING GP-SENSOR
	I	PQ0442	00	001	TOP OIL FILLER
	<u>NPR</u>	IY <u>120-9847</u>	00	001	COVER GP-FRONT HOUSING
	<u>NPR</u>	IY <u>239-4112</u>	01	001	COVER GP-VALVE MECHANISM
	I	0P-9400		001	LUBRICATING OIL
	I	PA7507	02	001	AIR SHUTOFF - 12V
	<u>NPR</u>	IY <u>185-1676</u>	00	001	SHUTOFF GP-AIR
	I	PQ0491	00	001	MOTOR GP- STARTING (12V) (LH)
	<u>NPR</u>	IY <u>110-5369</u>	01	001	STARTING MOTOR GP-ELECTRIC
	I	PQ0444	01	001	FRONT ENGINE SUPPORT
	<u>NPR</u>	IY <u>244-8681</u>	01	001	SUPPORT GP-ENGINE
	<u>NPR</u>	IY <u>262-4168</u>	00	001	SUPPORT GP-ENGINE
	I	0V-1590		001	PETRO WELL SERVICING
	I	0V-1767		001	PARTS BOOK - ELECTRONIC
	I	PP5367	00	001	475 BHP (354 BKW) W/O FAN
	I	0K-4921		001	SETTING
					SHIPPED LOOSE
	S+	0V-1767		001	PARTS BOOK - ELECTRONIC
	<u>NPR</u>	S 4W-9160		001	CLAMP-V BAND
	<u>NPR</u>	S 5P-9074		001	WIRE-ELECTRICAL
	<u>NPR</u>	S 7C-2644		001	CLIP
	<u>NPR</u>	S 7N-6114		001	BUSHING-PILOT
	<u>NPR</u>	S 8C-3334		002	RIVET-TUBULAR
	<u>NPR</u>	S 8C-6354		001	CAP-RECEPTACLE
	<u>NPR</u>	S 8T-8732		001	RECEPTACLE-CONNECTOR
	<u>NPR</u>	S 8T-8736		001	RECEPTACLE-CONNECTOR

	<u>NPR</u>	S	8T-8737	068	PLUG-SEAL
	<u>NPR</u>	S	9N-1940	001	ADAPTER-EXHAUST PIPE
	<u>NPR</u>	S	9W-0844	003	SOCKET-CONNECTOR
	<u>NPR</u>	S	9W-0852	002	PIN-CONNECTOR
	<u>NPR</u>	S	9Y-6089	001	GASKET
		S	SEBP3815	001	PTS BK 14007C2 (A)
		S	SEBU6251	001	LUBE 140019B2(A)
		S	SEBU7902	001	OMM 1400 (A)
		S	SELF5340	001	WARRANTY 140013C2(A)
		S	SERP3815	001	PTSCD 1400 (A)
		S	SMBU6981	001	SUPP
	<u>NPR</u>	S	013-8307	012	BOLT-SOCKET HEAD
	<u>NPR</u>	S	109-0072	001	SEAL-O-RING
	<u>NPR</u>	S	133-0967	001	PIN-CONNECTOR
	<u>NPR</u>	S	133-0969	001	CONNECTOR-SOCKET
	<u>NPR</u>	S	151-6320	002	TOOL-WIRE REMOVAL
	<u>NPR</u>	S	160-7689	001	PLUG AS-CONNECTOR
	<u>NPR</u>	SY	<u>165-6634</u>	001	SENSOR GP-COOLANT LEVEL
	<u>NPR</u>	S	180-9339	007	PIN-CONNECTOR
	<u>NPR</u>	S	180-9340	069	SOCKET-CONNECTOR

Key:

I Installed

Y Separate Illustration

R REMFG PART MAY BE AVAILABLE

S Shipped Loose