

3508B LOCOMOTIVE ENGINE

Engine Serial Number - 5PS prefix (Build Date - 10/2004, Test Date - 10/2004, Ship Date - unknown)

[View Latest Kit Information](#)

▼ ENGINE - ENTIRE GROUP (5PS prefix)

Qty.	NPR	Note	Part No.	ChangeReq. Level	Qty	Part Name
						FEATURE CODES
		I	PSTSPCL	F	001	***SPECIAL SETTING REQUEST***
		I	508DL01	F	001	3508B DITA LOCOMOTIVE ENGINE
		I	ACL9003	F	001	AIR CLEANER
		I	ACLDE01	F	001	AIR CLEANER - DUAL ELEMENT
		I	AIARM04	F	001	AIR INLET ADAPTER-RECTANGULAR
		I	BARGP01	F	001	ENGINE BARRING GROUP
		I	CCM0001	F	001	CUST COMMUNICATIONS MODULE-CCM
		I	CLIOCNO	F	001	INLET/OUTLET CONNECTION
		I	CLWOCN1	F	001	SINGLE WATER OUTLET
		I	EXRVAL2	F	001	EXPLOSION RELIEF VALVE
		I	FLN0001	F	001	FLEXIBLE FUEL LINES
		I	FLYHG04	F	001	FLYWHEEL AND HOUSING, SAE NO.0
		I	FPP0005	F	001	FUEL PRIMING PUMP LH/RH
		I	FUMDIS1	F	001	FUMES DISPOSAL
		I	HOREXH6	F	001	HORIZONTAL EXHAUST
		I	LUBOIL1	F	001	LUBRICATING OIL
		I	OFL0001	F	001	OIL FILLER
		I	OSAMVL1	F	001	OIL SAMPLING VALVE
		I	SEPAR03	F	001	SEPARATOR
		I	LOWBSFC	F	001	LO BSFC
		I	EECDOI1	F	001	EEC DECLARATION OF INCORP.
		I	LITGENE	F	001	EXTRA LITERATURE
		I	LITGENO	F	001	LITERATURE
		I	MSLOCEP	F	001	LOCOMOTIVE EPG
		I	SWPENG2	F	001	SHRINK WRAP ENGINE ONLY
		I	DECGENE	F	001	DECAL
		I	DPX0002	F	001	DOMESTIC PACK FOR EXPORT

	I	3508B	F	001	3508B PACKAGE GEN SET
	I	RATSPEC	F	001	SPECIAL RATING REQUEST
	I	XLLGENE	F	001	EXTRA LITERATURE
					PART NUMBERS
	I	5Z-3333	00	001	***SPECIAL SETTING REQUEST****
	I	0P-9893		001	FORWARDING CHARGES..
	I	0P-8707		001	PRC REF CUST..QUOTE 0P8707
	<u>NPR</u>	IY <u>140-2175</u>	00	001	CONTROL GP-REMOTE SPEED
	<u>NPR</u>	I 7N-1865	07	001	FLYWHEEL GP
	<u>NPR</u>	ILY <u>7N-7784</u>	08	001	FLYWHEEL GP
	<u>NPR</u>	I 4P-2490	00	001	PUMP GP-PRELUBRICATION
	<u>NPR</u>	I 4P-2097	01	001	LINES GP-OIL SUPPLY
		IL 0V-2319		001	DTO MATERIAL FOR QUOTES
	<u>NPR</u>	I 216-8347	02	001	REGULATOR GP-OIL LEVEL
		I LL8222	01	001	1341 BHP WOF 1800 RPM LOCOMOTI
		I 0K-6359		001	1000 BKW (1341 BHP) @ 1800 RPM
	<u>NPR</u>	IY <u>107-9524</u>	12	001	TURBOCHARGER GP
		I LA2217	06	001	3508B DITA LOCOMOTIVE ENGINE
	<u>NPR</u>	IY <u>135-1751</u>	10	001	ENGINE AR
	<u>NPR</u>	IY <u>8N-9639</u>	04	001	GUARD GP-DAMPER
	<u>NPR</u>	IY <u>151-9212</u>	04	001	WIRING GP-ENGINE
	<u>NPR</u>	IY <u>151-9216</u>	01	001	CONNECTION GP-ELECTRICAL
	<u>NPR</u>	IY <u>151-9218</u>	05	001	BOX GP-JUNCTION
		I LA2214	00	001	AIR CLEANER-ENGINE MOUNTED-10"
	<u>NPR</u>	IY <u>7N-6782</u>	08	001	INDICATOR GP-AIR FILTER CHANGE
	<u>NPR</u>	IY <u>8N-9302</u>	07	001	AIR CLEANER GP
		I PA1147	08	001	AIR CLEANER - DUAL ELEMENT
	<u>NPR</u>	IY <u>5N-7822</u>	03	001	AIR CLEANER GP
	<u>NPR</u>	IY <u>7N-8549</u>	06	001	ADAPTER GP-AIR CLEANER
	<u>NPR</u>	IY <u>5R-7425</u>	04	001	BARRING GP
	<u>NPR</u>	IY <u>102-8627</u>	01	001	MODULE GP-SYSTEM COMMUNICATION
	<u>NPR</u>	IY <u>4P-4691</u>	00	001	CONNECTION GP-WATER
	<u>NPR</u>	IY <u>7W-6372</u>	03	001	CONNECTION GP-WATER
	<u>NPR</u>	IY <u>5N-4830</u>	14	001	VALVE GP-EXPLOSION RELIEF
	<u>NPR</u>	IY <u>5N-2438</u>	05	001	LINES GP-FLEXIBLE FUEL
		I LA1058	06	001	FLYWHEEL & HOUSING SAE NO. 0

	<u>NPR</u>	IY	<u>107-7177</u>	06	001	HOUSING GP-FLYWHEEL
	<u>NPR</u>	IY	<u>138-0505</u>	01	001	COVER GP-FLYWHEEL HOUSING
	<u>NPR</u>	IY	<u>127-7106</u>	10	001	PUMP GP-FUEL PRIMING
		I	LA1061	05	001	FUMES DISPOSAL
	<u>NPR</u>	IY	<u>9Y-5563</u>	02	001	FUMES DISPOSAL GP
	<u>NPR</u>	IY	<u>120-9818</u>	06	001	FUMES DISPOSAL GP
	<u>NPR</u>	IY	<u>235-7172</u>	00	001	SHIELD GP-EXHAUST
		I	PA5309	06	001	LUBRICATING OIL
	<u>NPR</u>	I	5P-2586	04	001	OIL
		I	PA4159	03	001	FILLER GP-RH
	<u>NPR</u>	IY	<u>4P-3327</u>	00	001	FILLER GP-ENGINE OIL
	<u>NPR</u>	IY	<u>4P-3328</u>	08	001	COVER GP-CYLINDER BLOCK
	<u>NPR</u>	IY	<u>147-3738</u>	01	001	VALVE GP-FLUID SAMPLING
	<u>NPR</u>	IY	<u>233-7973</u>	01	001	SEPARATOR GP-WATER
		I	5N-9582		001	LOW BSFC - 3500B SERIES.
		I	LA1311	06	001	EEC D.O.I.
		I	5N-9622		001	NOTE-EEC (ENGINE)
		I	0P-100X		001	EXTRA LITERATURE
		I	PL3001	10	001	LITERATURE GP
		I	8N-2577	02	001	LITERATURE GP
		I	0V-1075		001	END USE: LOCOMOTIVE EPG
		I	0P-7577		001	SHRINK WRAP PROTECTION - 3508
		I	0P-7001		001	DECAL
		I	0P-1914		001	DOMESTIC PACK FOR EXPORT
		I	5Z-3333	00	001	***SPECIAL SETTING REQUEST****
						SHIPPED LOOSE
	<u>NPR</u>	S	0L-1143		002	BOLT
	<u>NPR</u>	S	0L-1351		002	BOLT
	<u>NPR</u>	S	0S-1590		002	BOLT
	<u>NPR</u>	S	0S-1594		008	BOLT
	<u>NPR</u>	S	0S-1618		004	BOLT
	<u>NPR</u>	S	1A-2029		007	BOLT
	<u>NPR</u>	S	1S-4435		001	CONNECTOR
	<u>NPR</u>	S	1S-5772		001	GASKET
	<u>NPR</u>	S	1V-7753		004	SPACER
	<u>NPR</u>	S	1W-0431		008	STRIP

	NPR	S	1W-0432	004	STRIP
	NPR	S	1W-0433	008	STRIP
	NPR	S	1W-0434	004	STRIP
	NPR	S	1W-0494	008	STRIP
	NPR	S	1W-4820	001	HOSE AS
	NPR	S	2G-6303	001	SEAL
	NPR	S	2G-6304	001	STRAINER AS
	NPR	S	2L-8074	004	TERMINAL-RING
	NPR	S	2L-8075	004	TERMINAL-RING
	NPR	S	2N-8037	001	ELBOW
	NPR	S	2N-8928	004	CLIP
	NPR	S	3B-6491	001	COUPLING-PIPE
	NPR	S	3B-7255	001	BUSHING-REDUCING
	NPR	S	3B-7741	002	NIPPLE-PIPE
	NPR	S	3J-7352	001	CONNECTOR
	NPR	S	3J-7354	001	SEAL-O-RING
	NPR	S	3L-6008	001	SPACER
	NPR	S	3N-6504	001	HOSE AS
	NPR	S	3R-1937	001	TOOL-BARRING
	NPR	S	3T-3848	001	HOSE AS
	NPR	S	4H-7869	001	GASKET
	NPR	S	4L-9600	002	SPACER
	NPR	S	4M-6425	084	BOLT
	NPR	S	4P-2093	001	PLATE
	NPR	S	4P-2094	001	BOX GP-JUNCTION
	NPR	S	4P-2095	001	BRACKET AS
	NPR	S	4P-2096	001	PLATE
	NPR	S	4P-4931	001	BODY-ELBOW
	NPR	S	5F-5990	002	CLIP
	NPR	S	5M-2894	002	WASHER-HARD
	NPR	S	5P-0597	001	CLAMP-HOSE
	NPR	S	5P-0598	008	CLAMP-HOSE
	NPR	S	5P-0599	004	CLAMP-BAND
	NPR	S	5P-1472	290	HOSE
	NPR	S	5P-4116	008	WASHER-HARD
	NPR	S	5P-5846	002	SEAL-O-RING

	NPR	S	5P-7620	009	CONDUIT-FLEXIBLE
	NPR	S	5P-8245	004	WASHER-HARD
	NPR	S	5P-9617	001	ADAPTER
	NPR	S	5R-7326	001	BUSHING-REDUCER
	NPR	S	5S-0003	004	NUT
	NPR	S	5T-9136	001	HOSE AS
	NPR	S	6K-1972	001	ELBOW-FLARED
	NPR	S	6K-9194	001	ELBOW-FLARED
	NPR	S	6N-8744	003	MOUNT
	NPR	S	6V-5048	002	SEAL-O-RING
	NPR	S	6V-8189	084	NUT
	NPR	S	6V-8801	004	NUT
	NPR	S	7C-7534	002	HOSE
	NPR	S	7D-4493	084	TUBE
	NPR	S	7D-8793	001	ELBOW-FLARED
	NPR	S	7G-7917	040	PLUG-SEAL
	NPR	S	7G-7918	002	PLUG-SEAL
	NPR	S	7G-7920	002	PLUG-SEAL
	NPR	S	7K-3116	012	BOLT-12 POINT HEAD
	NPR	S	7N-7416	002	ADAPTER-AIR CLEANER
	NPR	S	7W-1841	001	LINE-FUEL
	NPR	S	7W-4979	001	VALVE-CHECK
	NPR	S	7W-6492	002	PLUG-PIPE
	NPR	S	7X-7731	001	PLUG-PIPE
	NPR	S	8F-8306	001	BUSHING-REDUCER
	NPR	S	8L-3282	001	CONNECTOR
	NPR	S	8L-4275	001	VALVE-CHECK
	NPR	S	8M-2773	001	CLIP
	NPR	S	8N-1186	001	HOSE AS
	NPR	S	8N-1514	001	PLUG AS-CONNECTOR
	NPR	S	8N-1521	001	BELL AS-END
	NPR	S	8N-1533	001	PLUG AS-CONNECTOR
	NPR	S	8N-1535	001	BELL AS-END
	NPR	S	8N-1539	040	SOCKET-CONNECTOR
	NPR	S	8N-1541	004	SOCKET-CONNECTOR
	NPR	S	8N-1543	004	SOCKET-CONNECTOR

	NPR	S	8N-1663	001	BOOT
	NPR	S	8N-6432	001	ADAPTER
	NPR	S	8N-9885	001	GASKET-COVER
	NPR	S	8S-9089	002	BOLT
	NPR	S	8T-4224	168	WASHER-HARD
	NPR	S	8T-4896	004	WASHER-HARD
	NPR	S	9B-7237	008	BOLT
	NPR	S	9L-3749	001	FLANGE
	NPR	S	9L-9132	003	WASHER
	NPR	S	9M-6739	001	BUSHING
	NPR	S	9S-1374	002	BOLT
	NPR	S	9S-7296	001	ELBOW-FLARED
	NPR	S	9S-8752	003	NUT-FULL
	NPR	S	9X-0263	002	ADAPTER
	NPR	S	9X-2223	001	PLUG-BUTTON
	NPR	S	9X-3872	001	HOSE
	NPR	S	9Y-6016	001	PUMP GP-PRELUBRICATION
		S	9Y-8469	001	ELBOW
	NPR	S	001-6301	001	ELBOW
	NPR	S	004-3099	001	CONNECTOR
	NPR	S	005-8615	001	NIPPLE-PIPE
	NPR	S	006-5707	001	ELBOW-PIPE
	NPR	S	032-1267	001	CONNECTOR
	NPR	S	033-6042	001	SEAL-O-RING
	NPR	S	113-9001	001	HOSE AS
	NPR	S	122-3201	001	NIPPLE-PIPE
	NPR	S	138-1957	001	COVER
	NPR	SY	140-2175	001	CONTROL GP-REMOTE SPEED
	NPR	SY	151-9216	001	CONNECTION GP-ELECTRICAL
	NPR	SY	151-9218	001	BOX GP-JUNCTION
	NPR	SY	163-8492	002	SENSOR GP-PRESSURE
	NPR	SRV	164-8940	001	MODULE GP-SYSTEM COMMUNICATION
	NPR	S	169-7326	001	VALVE-BALL
	NPR	S	213-6133	001	REGULATOR AS
	NPR	S	214-3091	001	BRACKET AS
	NPR	S	216-8359	001	HOSE AS



NPR

SY	<u>233-7973</u>	001	SEPARATOR GP-WATER
S	SEBU6874	001	S.I.
S	SERP2795	002	PTSCD
S	SFBU6251	001	LUBE CAB2 D2 (A)
S	SFBU7179	002	OMM
S	SMBU6908	001	NO FRGN OMM LAN
S	ESO	001	(PRNT ESO COPY)
S	PML	001	*REQUIRED DECALS

Key:

I Installed

Y Separate Illustration

L Less Indicator

S Shipped Loose

R REMFG PART MAY BE AVAILABLE