

C32 MARINE ENGINE

Engine Serial Prefix - SLT (Build Date - unknown, Test Date - unknown, Ship Date - unknown)

▼ ENGINE - ENTIRE GROUP (SLT)

<u>Qty.</u>	<u>NPR</u>	<u>Note</u>	<u>Part No.</u>	<u>Change Level</u>	<u>Req. Qty</u>	<u>Part Name</u>
						<b>FEATURE CODES</b>
		I	C32MC35	F	001	C32 DITTA MAR PROP-PORT 35
		S	CGTPS08	F	001	THROTTLE SENSOR PRE-CAL 100VM
		I	COMMFIN	F	001	COMMERCIAL FINISH
		I	CATYLLW	F	001	CAT YELLOW PAINT
		I	ALT2440	F	001	CHARGING ALTERNATOR 24V 60 AMP
		S	EXCEL07	F	001	ELBOW-DUAL 203 MM (8 IN)
		S	EXCFF09	F	001	FLEXIBLE FITTING
		I	CHE0024	F	001	HEX FUEL COOLER (B RATING)
		S	FWS0002	F	001	PRIMARY FUEL/ WATER SEPARATOR
		I	MARGOGG	F	001	MARINE GEAR OIL GAUGE
		S	MPD0000	F	001	MAR POWER DISPLAY W SENSORS
		S	MPD0001	F	001	MARINE POWER DISPLAY
		S	WIRGP00	F	001	ADDITIONAL WIRING GROUPS (1-7)
		S	VIBIS13	F	001	VIBRATION ISOLATION MOUNTING
		I	ELSM LH1	F	001	ELEC START MTR-LH 24 V
		S	BAT2401	F	001	24V BAT SET-DRY-CCA 1300
		I	BELTGD4	F	001	BELT GUARD
		I	FWHSAE0	F	001	STD SAE #0 FLYWHEEL HOUSING
		I	CSTHEXC	F	001	HEAT EXCHANGER COOLED
		I	RPM2100	F	001	APPLICATION SPEED-2100 RPM
		I	HIPERFM	F	001	MARINE PROPULSION HI-PERF ENG
		I	VLT0024	F	001	24 VOLT
		S	LITPAPR	F	001	EXTRA ENG LIT - PAPER (1 - 6)
		I	SRP0011	F	001	PRESERVATION GP ENGINE - 3412
		I	LWPENG1	F	001	ENGINE PROTECTIVE COVER
		I	MSCMA13	F	001	OCEANGOING
		I	MWCODEA	F	001	PRIMARY DRIVE
		I	HPM1115	F	001	1115 MHP @ 2100 RPM "B" RATING

	I	MSMARPR	F	001	MARINE PROPULSION COMMERCIAL
	I	DPX0002	F	001	DOMESTIC PACK FOR EXPORT
	I	IMONONE	F	001	NO IMO GL CERTIFICATION REQ'D
	I	TVANONE	F	001	NO TVA REPORT
	I	MARCOMM	F	001	MARINE PROP-COMMERCIAL
	I	GERNONE	F	001	NO GERMAN FLAG IMO CERT
	I	MARINEB	F	001	MARINE HEAVY DUTY "B" RATING
	I	HPDOPTN	F	001	HYDRAULIC PUMP DRIVE-OPTIONAL
	I	PORTSID	F	001	PORT SIDE (RH SERVICE)
	I	TWINENG	F	001	TWIN ENGINE INSTALLATION
	I	DBWLOIL	F	001	DOUBLE WALL OIL LINES
	I	FLAGNO	F	001	NON GERMAN FLAGGED VESSELS
					<b>PART NUMBERS</b>
	I	MC0222	03	001	C32 DITTA MAR PROP-PORT 35
	<a href="#">NPR</a>	IY <a href="#">310-7385</a>	01	001	ENGINE AR-COMplete
	<a href="#">NPR</a>	IY <a href="#">4N-2388</a>	09	001	COOLER GP-ENGINE OIL
	<a href="#">NPR</a>	IY <a href="#">4N-5837</a>	11	001	PUMP GP-WATER
	<a href="#">NPR</a>	IY <a href="#">4N-6925</a>	10	001	FILTER GP-FUEL
	<a href="#">NPR</a>	IY <a href="#">4P-7478</a>	12	001	MANIFOLD GP-EXHAUST
		S 5P-2506	00	001	LITERATURE GP
		IY <a href="#">6L-4502</a>	35	001	CHART-PLATE & FILM
	<a href="#">NPR</a>	SY <a href="#">102-9220</a>	04	001	RECOVERY GP-COOLANT
	<a href="#">NPR</a>	IY <a href="#">145-8855</a>	04	001	PUMP GP-FUEL PRIMING
	<a href="#">NPR</a>	IY <a href="#">156-6900</a>	04	001	WIRING GP-ENGINE
	<a href="#">NPR</a>	IY <a href="#">168-2502</a>	02	001	MOUNTING GP-INSTRUMENT PANEL
	<a href="#">NPR</a>	IY <a href="#">168-4420</a>	02	001	PANEL GP-INSTRUMENT
	<a href="#">NPR</a>	IY <a href="#">196-4098</a>	01	001	LINES GP-AIR
	<a href="#">NPR</a>	IY <a href="#">197-3865</a>	07	001	WIRING GP-ENGINE
	<a href="#">NPR</a>	SY <a href="#">204-2536</a>	01	001	AIR CLEANER GP
	<a href="#">NPR</a>	IY <a href="#">209-8292</a>	01	001	MOUNTING GP-CONTROL
	<a href="#">NPR</a>	I 234-6127	01	001	PRESERVATION GP
	<a href="#">NPR</a>	IY <a href="#">246-0694</a>	02	001	DAMPER & PULLEY GP
	<a href="#">NPR</a>	IY <a href="#">250-5754</a>	00	001	LINES GP-WATER
	<a href="#">NPR</a>	IY <a href="#">264-1492</a>	01	001	FILTER GP-ENGINE OIL
	<a href="#">NPR</a>	IY <a href="#">264-7810</a>	00	001	PUMP GP-AUXILIARY SEA WATER
	<a href="#">NPR</a>	IY <a href="#">304-6650</a>	01	001	CONTROL GP-AUTO START/STOP

	<a href="#">NPR</a>	IY	<a href="#">309-7023</a>	01	001	HEATER GP-JACKET WATER
	<a href="#">NPR</a>	IY	<a href="#">310-7929</a>	00	001	FASTENER GP-EXHAUST MANIFOLD
	<a href="#">NPR</a>	IY	<a href="#">310-7933</a>	02	001	LINES GP-WATER
	<a href="#">NPR</a>	IY	<a href="#">311-2038</a>	00	001	GAUGE GP-OIL LEVEL (DIPSTICK)
	<a href="#">NPR</a>	I	311-2130	00	001	COVER GP-SHIPPING
	<a href="#">NPR</a>	IY	<a href="#">318-0719</a>	03	001	LINES GP-AUXILIARY SEA WATER
	<a href="#">NPR</a>	IY	<a href="#">319-9090</a>	03	001	FASTENER GP-VALVE COVER
	<a href="#">NPR</a>	IY	<a href="#">238-4513</a>	01	001	DRAIN GP-ENGINE OIL
	<a href="#">NPR</a>	SY	<a href="#">121-7028</a>	03	001	CONTROL GP-ENGINE ELECTRONIC
		I	314-5852	00	001	PAINT-FINISH (COMMERCIAL)
	<a href="#">NPR</a>	I	131-5443	01	001	PAINT GP
		I	PA7011	02	001	CHARGING ALTERNATOR 24V 60 AMP
	<a href="#">NPR</a>	IY	<a href="#">4N-3986</a>	18	001	ALTERNATOR GP-CHARGING
	<a href="#">NPR</a>	IY	<a href="#">141-6175</a>	03	001	CIRCUIT BREAKER GP
	<a href="#">NPR</a>	IY	<a href="#">155-8737</a>	01	001	MOUNTING GP-CIRCUIT BREAKER
	<a href="#">NPR</a>	IY	<a href="#">156-6925</a>	05	001	MOUNTING GP-ALTERNATOR
		I	PQ0623	04	001	ELBOW-DUAL 203 MM (8 IN)
	<a href="#">NPR</a>	SY	<a href="#">6N-4432</a>	04	002	ELBOW GP-EXHAUST
		I	PQ0605	03	001	FITTING GP-EXHAUST
	<a href="#">NPR</a>	SY	<a href="#">2W-7848</a>	01	002	FITTING GP-EXHAUST
		I	PQ0848	00	001	EXCHANGER GP-HEAT-FUEL COOLED
	<a href="#">NPR</a>	IY	<a href="#">239-3005</a>	02	001	HEAT EXCHANGER GP-SEA WATER
	<a href="#">NPR</a>	IY	<a href="#">239-6231</a>	04	001	LINES GP-FUEL FILTER
	<a href="#">NPR</a>	SY	<a href="#">2W-4234</a>	01	001	SEPARATOR GP-WATER
	<a href="#">NPR</a>	IY	<a href="#">3N-9011</a>	08	001	GAUGE GP-MARINE GEAR OIL
		I	PA7562	04	001	MARINE POWER DISPLAY SYSTEM
	<a href="#">NPR</a>	SY	<a href="#">100-3055</a>	04	001	SENSOR GP-TEMPERATURE
	<a href="#">NPR</a>	SY	<a href="#">118-9476</a>	03	001	ADAPTER GP-SENSOR
	<a href="#">NPR</a>	SY	<a href="#">161-9932</a>	05	001	SENSOR GP-PRESSURE
	<a href="#">NPR</a>	SY	<a href="#">165-0199</a>	01	001	WIRING GP-INSTRUMENT PANEL
	<a href="#">NPR</a>	SY	<a href="#">267-8623</a>	02	002	DISPLAY GP-MONITOR
	<a href="#">NPR</a>	SY	<a href="#">267-8623</a>	02	001	DISPLAY GP-MONITOR
	<a href="#">NPR</a>	SY	<a href="#">193-5582</a>	00	001	WIRING GP-PANEL
	<a href="#">NPR</a>	SY	<a href="#">174-9897</a>	01	001	MOUNTING GP-ENGINE FLEXIBLE
	<a href="#">NPR</a>	IY	<a href="#">4N-1061</a>	17	001	STARTING MOTOR GP-ELECTRIC
	<a href="#">NPR</a>	SY	<a href="#">7L-7872</a>	09	001	BATTERY GP

	<a href="#">NPR</a>	IY	<a href="#">144-4580</a>	01	001	GUARD GP-DAMPER
		S	0V-1672		001	EXTRA ENG LIT - PAPER (1 - 6)
	<a href="#">NPR</a>	I	2W-5167	03	001	PLATE & FILM GP
		I	0V-1984		001	ENGINE PROTECT COVER 3412/C30
		I	PP5462	00	001	1100 BHP 821 KW WOF 2100 RPM '
		I	0K-6685	00	001	821 BKW (1100 BHP) @ 2100 RPM
		I	0V-1045		001	END USE: MAR PROPULSION
		I	0P-1914		001	DOMESTIC PACK FOR EXPORT
						<b>SHIPPED LOOSE</b>
		S			003	PACK IN CARTON ONLY INFO(A)
		S	ESO		001	(PRNT ESO COPY)
		S	PML		001	*REQUIRED DECALS
	<a href="#">NPR</a>	S	0S-1594		008	BOLT
	<a href="#">NPR</a>	S	1B-5357		016	NUT-FULL
	<a href="#">NPR</a>	S	1P-4278		002	CLAMP-HOSE
	<a href="#">NPR</a>	S	1W-2043		002	HOSE AS
	<a href="#">NPR</a>	S	2N-3323		002	INDICATOR-AIR FILTER CHANGE
	<a href="#">NPR</a>	S	2R-6806		001	CONNECTOR-O-RING
	<a href="#">NPR</a>	S	2V-7397		001	CABLE AS
	<a href="#">NPR</a>	SY	<a href="#">2W-4234</a>		001	SEPARATOR GP-WATER
	<a href="#">NPR</a>	SY	<a href="#">2W-7848</a>		001	FITTING GP-EXHAUST
		S	2W-9999		002	BOOT
	<a href="#">NPR</a>	S	3J-1907		004	SEAL-O-RING
	<a href="#">NPR</a>	S	3J-5389		004	PLUG
	<a href="#">NPR</a>	S	3J-7354		002	SEAL-O-RING
	<a href="#">NPR</a>	S	4L-6454		004	BOLT
	<a href="#">NPR</a>	S	4N-4352		002	ELBOW-EXHAUST
	<a href="#">NPR</a>	S	5L-3773		002	GASKET-EXHAUST ELBOW
		S	5P-2506		001	LITERATURE GP
	<a href="#">NPR</a>	S	5P-3860		004	CLAMP-HOSE
	<a href="#">NPR</a>	S	5P-5855		016	BOLT-12 POINT HEAD
	<a href="#">NPR</a>	S	5P-9617		002	ADAPTER
	<a href="#">NPR</a>	S	6D-4246		001	CLIP
	<a href="#">NPR</a>	S	6K-9194		002	ELBOW-FLARED
		SY	<a href="#">6L-4502</a>		001	CHART-PLATE & FILM
	<a href="#">NPR</a>	S	6N-0561		008	CLIP

	<a href="#">NPR</a>	SY	<a href="#">6N-4432</a>	001	ELBOW GP-EXHAUST
	<a href="#">NPR</a>	S	6V-5048	001	SEAL-O-RING
	<a href="#">NPR</a>	S	6V-5049	001	SEAL-O-RING
	<a href="#">NPR</a>	S	6V-8801	005	NUT
	<a href="#">NPR</a>	S	7F-3400	001	BAG-POLYETHYLENE
	<a href="#">NPR</a>	SY	<a href="#">7L-7872</a>	001	BATTERY GP
	<a href="#">NPR</a>	S	7X-0293	001	BOLT
	<a href="#">NPR</a>	S	8C-3681	200	HOSE
	<a href="#">NPR</a>	S	8L-8413	002	STRAP-CABLE
	<a href="#">NPR</a>	S	8M-9124	008	WASHER
	<a href="#">NPR</a>	S	8R-1496	001	SPACER
	<a href="#">NPR</a>	S	8T-2502	001	BOLT
	<a href="#">NPR</a>	S	8T-4896	010	WASHER-HARD
	<a href="#">NPR</a>	S	8T-8730	002	SOCKET-CONNECTOR
	<a href="#">NPR</a>	S	9G-0003	002	COVER AS-TERMINAL
	<a href="#">NPR</a>	S	9G-0004	002	COVER AS-TERMINAL
	<a href="#">NPR</a>	S	9M-2564	002	CLAMP-TUBE
	<a href="#">NPR</a>	S	9X-0263	001	ADAPTER
	<a href="#">NPR</a>	S	9X-3271	001	ADAPTER
	<a href="#">NPR</a>	SY	<a href="#">9X-9730</a>	002	BATTERY GP
	<a href="#">NPR</a>	S	030-7942	001	ELBOW
	<a href="#">NPR</a>	SY	<a href="#">100-3055</a>	001	SENSOR GP-TEMPERATURE
	<a href="#">NPR</a>	SY	<a href="#">102-9220</a>	001	RECOVERY GP-COOLANT
	<a href="#">NPR</a>	S	102-9223	001	TANK GP-COOLANT
	<a href="#">NPR</a>	SY	<a href="#">118-9476</a>	001	ADAPTER GP-SENSOR
	<a href="#">NPR</a>	SY	<a href="#">121-7028</a>	001	CONTROL GP-ENGINE ELECTRONIC
	<a href="#">NPR</a>	SY	<a href="#">121-7029</a>	001	CONTROL GP-ENGINE ELECTRONIC
	<a href="#">NPR</a>	S	124-6265	004	CLAMP-HOSE
	<a href="#">NPR</a>	S	125-7876	010	TUBE-HEAT SHRINK
	<a href="#">NPR</a>	S	133-0969	001	CONNECTOR-SOCKET
	<a href="#">NPR</a>	S	133-0970	001	RECEPTACLE AS-CONNECTOR
	<a href="#">NPR</a>	S	133-0974	001	WEDGE-PLUG LOCK
	<a href="#">NPR</a>	S	133-4076	001	PLUG AS
	<a href="#">NPR</a>	S	134-2540	001	RESISTOR AS-CONNECTION
	<a href="#">NPR</a>	SY	<a href="#">161-9932</a>	001	SENSOR GP-PRESSURE
	<a href="#">NPR</a>	SY	<a href="#">165-0199</a>	001	WIRING GP-INSTRUMENT PANEL

	<a href="#">NPR</a>	S	165-0200	001	CABLE AS
	<a href="#">NPR</a>	S	165-0201	001	CABLE AS
	<a href="#">NPR</a>	S	174-5516	002	MOUNT-ENGINE
	<a href="#">NPR</a>	S	174-5517	002	MOUNT AS-ENGINE
	<a href="#">NPR</a>	SY	<a href="#">174-9897</a>	001	MOUNTING GP-ENGINE FLEXIBLE
	<a href="#">NPR</a>	S	177-7374	002	VALVE-CHECK
	<a href="#">NPR</a>	SY	<a href="#">193-5582</a>	001	WIRING GP-PANEL
	<a href="#">NPR</a>	SY	<a href="#">204-2536</a>	001	AIR CLEANER GP
	<a href="#">NPR</a>	SY	<a href="#">205-1675</a>	001	AIR CLEANER GP
	<a href="#">NPR</a>	SY	<a href="#">205-1676</a>	001	AIR CLEANER GP
	<a href="#">NPR</a>	S	205-8653	001	HOSE
	<a href="#">NPR</a>	S	205-8654	001	HOSE
	<a href="#">NPR</a>	S	205-8673	002	HOSE
	<a href="#">NPR</a>	S	214-6045	002	BELLOWS AS
	<a href="#">NPR</a>	S	255-6863	002	GASKET
	<a href="#">NPR</a>	SY	<a href="#">267-8623</a>	001	DISPLAY GP-MONITOR
		S	LEBM0189	002	OPERN
		S	LERM8401	001	SOFT
		S	LEXM3062	001	TECH FILE
		S	REHS1187	001	S.I.
		S	SEBU6251	001	LUBE 140019B2(A)
		S	SEBU7908	001	OMM 1400 (A)
		S	SEBU7920	001	EMISSIONS
		S	SELF5419	001	WARRANTY
		S	SENR5002	001	DISPLAY INSTAL
		S	SERP4017	001	PTSCD 1400 (A)

Key:

I Installed

S Shipped Loose

Y Separate Illustration