

C18 INDUSTRIAL ENGINE

Engine Serial Prefix - WJH (Build Date - 06/2006, Test Date - 06/2006, Ship Date - unknown)

▼ ENGINE - ENTIRE GROUP (WJH)

Qty.	NPR	Note	Part No.	ChangeReq. Level	Qty	Part Name
						<b>FEATURE CODES</b>
		I	C18DI01	F	001	C18 DIT-ATAAC IND ENGINE 01
		S	CGTPS04	F	001	REMOTE SPEED CONT-HAND KNOB
		I	FLYHG11	F	001	FLYWHEEL HOUSING SAE NO. 1
		I	ACGOV00	F	001	AIR COMPRESSOR GOVERNOR
		I	AIRLG04	F	001	AIR LINES-45 DEG
		I	ALT1211	F	001	CHARGING ALT 12V 115 AMP
		I	FDV0012	F	001	FAN DRIVE 0.800 RATIO
		I	CLS0001	F	001	COOLANT LEVEL SENSOR
		I	EXCCON1	F	001	EXHAUST CONN - HALF MARMON
		I	EXCDE02	F	001	DRY ELBOW 152.4 MM (6 IN)
		S	MES0001	F	001	MESSENGER DISPLAY
		S	GIPCNT2	F	001	CONTROL 12V
		I	LUBOIL3	F	001	LUBRICATING OIL 3
		I	FRSUP05	F	001	FRONT ENGINE SUPPORT-NARROW
		I	ACLDE05	F	001	AIR CLEANER - DUAL ELEMENT 05
		S	FLN0003	F	001	FLEX FUEL LINES-SL
		I	ACLIN00	F	001	AIR COMPRESSOR LINES
		I	2100RPM	F	001	2100 RPM
		I	AIRCP01	F	001	AIR COMPRESSOR (BA-921)
		I	ALMT03	F	001	ALTERNATOR MOUNTING RH 03
		I	ELSM121	F	001	ELEC START MOTOR LH 12V 21
		I	EXHFRNT	F	001	FRONT FACING EXHAUST
		I	FLYAD01	F	001	FLYWHEEL ADAPTER -SAE NO. 1
		I	FNH0431	F	001	FAN HEIGHT-431.8 MM (17.00 IN)
		I	INDUSTC	F	001	INDUST INTERMITTENT C RATING
		I	INDUSTR	F	001	INDUSTRIAL ENGINE
		I	NOBRAKE	F	001	NO COMPRESSION BRAKE
		I	PFFWS02	F	001	PR FUEL FILTER/WATER SEP
		I	VLT0012	F	001	12 VOLT

	I	MSPETWS	F	001	PETRO WELL SERVICING
	S	PBKHCD1	F	001	PARTS BOOK-PAPER & ELEC
	I	PSD05	F	001	WHSLE ENG MERCHANDISING PRGM
	I	MSCP20	F	001	COMPLETION STIMULATION
	I	MWCODED	F	001	MECHANICAL DRIVE
	I	HP00630	F	001	630 BHP (470 BKW) W/O FAN
	I	CERTIF5	F	001	EPA/CARB TIER 3, EC STG IIIA

**PART NUMBERS**

	I	PQ0093	14	001	ENGINE AR-C18 DIT ATAAC
	<u>NPR</u>	IY <u>237-1955</u>	08	001	ENGINE AR-CORE
	<u>NPR</u>	IY <u>237-4286</u>	02	001	DAMPER & PULLEY GP
	S	5P-2506	00	001	LITERATURE GP
	<u>NPR</u>	I 107-4447	03	001	INSTRUCTION-TURBOCHARGER
	<u>NPR</u>	IY <u>107-6736</u>	01	001	COVER GP-CYLINDER BLOCK
	<u>NPR</u>	IY <u>107-6737</u>	01	001	COVER GP-CYLINDER BLOCK
	<u>NPR</u>	IY <u>108-2312</u>	02	001	FITTING GP-QUICK DISCONNECT
	<u>NPR</u>	IY <u>109-3287</u>	08	001	PAN GP-OIL
	<u>NPR</u>	IY <u>109-3290</u>	01	001	FASTENER GP-OIL PAN
	<u>NPR</u>	IY <u>109-1657</u>	01	001	FASTENER GP-VALVE MECHANISM
	<u>NPR</u>	IY <u>255-9250</u>	00	001	PLUG GP-WATER LINES
	<u>NPR</u>	IY <u>109-2373</u>	01	001	FASTENER GP-WATER PUMP
	<u>NPR</u>	IY <u>109-4202</u>	04	001	ELBOW GP-AIR INLET
	<u>NPR</u>	IY <u>111-2088</u>	01	001	LIFTING GP-ENGINE
	<u>NPR</u>	I 121-0499	02	001	COVER GP-STORAGE
	<u>NPR</u>	IY <u>124-0657</u>	01	001	SHIELD GP-MANIFOLD
	<u>NPR</u>	IY <u>127-0564</u>	00	001	LIFTING GP-ENGINE
	<u>NPR</u>	IY <u>140-9746</u>	00	001	COVER GP-CYLINDER BLOCK
	<u>NPR</u>	IY <u>150-4279</u>	05	001	PUMP & MTG GP-FUEL TRANSFER
	<u>NPR</u>	IY <u>151-5366</u>	00	001	FASTENER GP-ENGINE
	<u>NPR</u>	IY <u>255-9251</u>	00	001	PLUG GP-WATER LINES
	<u>NPR</u>	IY <u>159-6159</u>	05	001	COVER GP-FRONT HOUSING
	<u>NPR</u>	IY <u>159-9107</u>	05	001	CONNECTION GP-ELECTRICAL
	<u>NPR</u>	IY <u>159-9362</u>	07	001	FUMES DISPOSAL GP
	<u>NPR</u>	IY <u>237-4291</u>	03	001	MANIFOLD GP-EXHAUST
	<u>NPR</u>	IY <u>171-2094</u>	01	001	FILLER GP-ENGINE OIL
	<u>NPR</u>	IY <u>172-7120</u>	01	001	FASTENER GP-ENGINE

	NPR	IY	<a href="#">269-2509</a>	02	001	HOUSING GP-FRONT
	NPR	IY	<a href="#">187-0673</a>	01	001	GUIDE GP-OIL LEVEL GAUGE
	NPR	IY	<a href="#">255-4649</a>	00	001	COVER GP-VALVE MECHANISM
	NPR	IY	<a href="#">191-5054</a>	02	001	PUMP GP-FUEL PRM & SEC FILTER
	NPR	IY	<a href="#">236-1780</a>	02	001	CONTROL & MTG GP-ENGINE ELEK
	NPR	IY	<a href="#">237-4294</a>	06	001	WIRING GP-ENGINE
	NPR	IY	<a href="#">194-3967</a>	02	001	MOUNTING GP-SENSOR
	NPR	SY	<a href="#">240-6054</a>	02	001	CONNECTION GP-ELECTRICAL
	NPR	IY	<a href="#">200-2852</a>	00	001	FASTENER GP-WATER LINES
	NPR	IY	<a href="#">201-6631</a>	01	001	FITTING GP-FUEL LINES
	NPR	IY	<a href="#">212-1487</a>	01	001	LINES GP-TURBOCHARGER OIL
	NPR	IY	<a href="#">234-9184</a>	00	001	PLUG GP-CYLINDER HEAD
	NPR	IY	<a href="#">234-9706</a>	01	001	PLUG GP-CYLINDER BLOCK
	NPR	IY	<a href="#">247-8211</a>	00	001	PLUG GP-CYLINDER BLOCK
	NPR	IY	<a href="#">227-9495</a>	01	001	SUPPORT GP-ENGINE
	NPR	IY	<a href="#">238-9384</a>	01	001	FASTENER GP-WIRING HARNESS
		I	255-4218	01	001	INSTRUCTIONS
	NPR	IY	<a href="#">237-4281</a>	04	001	TURBOCHARGER GP
	NPR	IY	<a href="#">255-9246</a>	02	001	LINES GP-WATER
	NPR	I	211-4834	03	001	PLATE & FILM GP
	NPR	IY	<a href="#">268-6625</a>	00	001	FILTER GP-ENGINE OIL
	NPR	IY	<a href="#">255-9252</a>	00	001	PLUG GP-WATER LINES
	NPR	IY	<a href="#">275-3979</a>	01	001	SHIELD GP-HEAT
	NPR	IY	<a href="#">286-9120</a>	00	001	FASTENER GP-WIRING HARNESS
	NPR	IY	<a href="#">282-6846</a>	00	001	FASTENER GP-FRONT COVER
	NPR	IY	<a href="#">285-8628</a>	00	001	FASTENER GP-FRONT COVER
	NPR	IY	<a href="#">180-4367</a>	00	001	FASTENER GP-FRONT COVER
	NPR	SY	<a href="#">134-0670</a>	01	001	CONTROL GP-ENGINE SPEED
		I	PQ0198	02	001	HOUSING GP-FLYWHEEL-SAE #1
	NPR	IY	<a href="#">141-8953</a>	00	001	FASTENER GP-FUEL LINES
	NPR	IY	<a href="#">135-7634</a>	04	001	HOUSING GP-FLYWHEEL
	NPR	IY	<a href="#">9N-3889</a>	03	001	COVER GP-FLYWHEEL HOUSING
	NPR	IY	<a href="#">127-5728</a>	00	001	COVER GP-FLYWHEEL HOUSING
	NPR	IY	<a href="#">135-8015</a>	00	001	PLUG GP-FLYWHEEL HOUSING
		I	PQ0207	03	001	PRIMARY FUEL FILTER / WATER SE
		IY	<a href="#">212-9431</a>	00	001	FILTER GP-WATER SEP & FUEL

	NPR	IY	<a href="#">237-4290</a>	02	001	LINES GP-FUEL FILTER
		I	PQ0209	02	001	COMPRESSOR GP-AIR 15.7 CFM
	NPR	IY	<a href="#">192-3219</a>	00	001	MANIFOLD GP-FUEL
	NPR	IY	<a href="#">222-2879</a>	07	001	AIR COMPRESSOR GP
	NPR	IY	<a href="#">224-0875</a>	01	001	FITTING GP-WATER LINES
	NPR	I	278-0026	00	001	PLUG GP-AIR COMPRESSOR
	NPR	IY	<a href="#">224-4501</a>	02	001	GOVERNOR GP-AIR COMPRESSOR
	NPR	IY	<a href="#">126-0079</a>	02	001	ADAPTER GP-TURBOCHARGER AIR
	NPR	IRY	<a href="#">121-4134</a>	02	001	ALTERNATOR GP-CHARGING
		I	PQ0212	06	001	ALTERNATOR MOUNTING RH
	NPR	IY	<a href="#">118-3419</a>	02	001	MOUNTING GP-ALTERNATOR
	NPR	IY	<a href="#">135-6940</a>	00	001	FASTENER GP-ALTERNATOR
		I	PA6453	03	001	FAN DRIVE .800 RATIO
	NPR	IY	<a href="#">120-4232</a>	03	001	DRIVE GP-FAN
		I	PA7160	08	001	COOLANT LEVEL SENSOR
	NPR	SY	<a href="#">165-6634</a>	03	001	SENSOR GP-COOLANT LEVEL
	NPR	IY	<a href="#">257-7276</a>	00	001	CONNECTION GP-EXHAUST
	NPR	IY	<a href="#">6L-2927</a>	08	001	ELBOW GP-EXHAUST
		I	PQ0495	01	001	FLYWHEEL GP - ADAPTER
	NPR	IY	<a href="#">148-8808</a>	01	001	ADAPTER GP-FLYWHEEL
	NPR	SY	<a href="#">243-3820</a>	04	001	MODULE GP-DISPLAY
		I	PA7774	03	001	START STOP CONTROL
		S	195-0126	01	001	DIAGRAM-WIRING
	NPR	SY	<a href="#">195-0131</a>	00	001	WIRING GP-ENGINE
	NPR	SY	<a href="#">205-8657</a>	00	001	CONTROL GP-AUTO START/STOP
		I	0P-9400		001	LUBRICATING OIL
		I	PQ0444	01	001	FRONT ENGINE SUPPORT
	NPR	IY	<a href="#">244-8681</a>	01	001	SUPPORT GP-ENGINE
		I	PQ0490	00	001	MOTOR GP-STARTING (12V) (LH)
	NPR	IY	<a href="#">153-7290</a>	00	001	STARTING MOTOR GP-ELECTRIC
		I	PQ0575	02	001	AIR CLEANER - DUAL ELEMENT
	NPR	SY	<a href="#">232-6182</a>	00	001	PRECLEANER GP
	NPR	IY	<a href="#">266-0763</a>	01	001	AIR CLEANER GP
	NPR	SY	<a href="#">267-3482</a>	00	001	LINES GP-FLEXIBLE FUEL
		I	PQ0771	00	001	EXPANSION CHAMBER FOR SINGLE
	NPR	IY	<a href="#">270-3935</a>	01	001	LINES GP-FUEL FILTER

	<u>NPR</u>	IY	<u>270-8453</u>	02	001	LINES GP-AIR COMPRESSOR
		I	283-1612	00	001	INSTRUCTION-FAN
		I	0V-1590		001	END USE: PETRO WELL SERVICING
		S	0V-1766		001	PARTS BOOK - PAPER & ELECTRONI
		I	PP5362	01	001	630 BHP WOF 2100 RPM IND "B"
		I	0K-4932		001	470 KW (630 BHP) @ 2100 RPM
						<b>SHIPPED LOOSE</b>
		S+	0V-1766		001	PARTS BOOK - PAPER & ELECTRONI
	<u>NPR</u>	S	1M-3419		001	SEAL-O-RING
	<u>NPR</u>	S	5P-9074		001	WIRE-ELECTRICAL
	<u>NPR</u>	S	7C-2644		001	CLIP
	<u>NPR</u>	S	7N-6114		001	BUSHING-PILOT
	<u>NPR</u>	S	7W-7536		001	HOSE AS
	<u>NPR</u>	S	8C-3334		002	RIVET-TUBULAR
	<u>NPR</u>	S	8C-6354		001	CAP-RECEPTACLE
	<u>NPR</u>	S	8S-6823		001	HOOD AS
	<u>NPR</u>	S	8S-6824		001	CLAMP AS
	<u>NPR</u>	S	8T-8732		001	RECEPTACLE-CONNECTOR
	<u>NPR</u>	S	8T-8736		001	RECEPTACLE-CONNECTOR
	<u>NPR</u>	S	8T-8737		068	PLUG-SEAL
	<u>NPR</u>	S	9W-0844		003	SOCKET-CONNECTOR
	<u>NPR</u>	S	9W-0852		002	PIN-CONNECTOR
	<u>NPR</u>	S	9Y-6089		001	GASKET
		S	LEBM3227		001	MESSENGER GUIDE 140021D3(A)
		S	SEBP3816		001	PTSBK 1400 (A)
		S	SEBU6251		001	LUBE 140019B2(A)
		S	SEBU7899		001	OMM 1400 (A)
		S	SELF5397		001	WARRANTY
		S	SERP3816		001	PTSCD 1400 (A)
		S	SMBU6981		001	SUPP
	<u>NPR</u>	S	013-8307		012	BOLT-SOCKET HEAD
	<u>NPR</u>	S	113-3155		001	BODY
	<u>NPR</u>	S	133-0967		001	PIN-CONNECTOR
	<u>NPR</u>	S	133-0969		001	CONNECTOR-SOCKET
	<u>NPR</u>	SY	<u>134-0670</u>		001	CONTROL GP-ENGINE SPEED
	<u>NPR</u>	S	151-6320		002	TOOL-WIRE REMOVAL

	<u>NPR</u>	S	160-7689	001	PLUG AS-CONNECTOR
	<u>NPR</u>	SY	<u>165-6634</u>	001	SENSOR GP-COOLANT LEVEL
	<u>NPR</u>	S	180-9339	007	PIN-CONNECTOR
	<u>NPR</u>	S	180-9340	069	SOCKET-CONNECTOR
		S+	195-0126	001	DIAGRAM-WIRING
	<u>NPR</u>	SY	<u>195-0131</u>	001	WIRING GP-ENGINE
	<u>NPR</u>	SY	<u>205-8657</u>	001	CONTROL GP-AUTO START/STOP
	<u>NPR</u>	S	206-6308	001	HOSE AS
	<u>NPR</u>	SY	<u>243-3820</u>	001	MODULE GP-DISPLAY

Key:

I Installed

S Shipped Loose

Y Separate Illustration

R REMFG PART MAY BE AVAILABLE