

**As SHIPPED [8KN]**

**JUNE 13, 2012**

For Help Desk Phone Numbers [Click here](#)

**Sales Model:** 3516 DITA

**Build Date:** 1997-02

---

<b>Part Numbers</b>						
<b>Reference Number</b>	<b>Eng Chg</b>	<b>Quantity</b>	<b>ASM LESS</b>	<b>Set Type</b>	<b>Description</b>	<b>BreakDown</b>
LA0271	07	1	I		3516B DITA SCAC MAR PROP ENG	<a href="#">BreakDown...</a>
- 1008318	07	1	I		3516 ENGINE AR - BASIC	<a href="#">BreakDown...</a>
- 4P0558	00	1	I		CLEANER GP - AIR-B	<a href="#">BreakDown...</a>
- 5N9582		1	I		LOW BSFC - 3500B SERIES.	<a href="#">BreakDown...</a>
- 5P2506	00	1	I		LITERATURE GP - ENGLISH	<a href="#">BreakDown...</a>
- 7N8650	03	1	I		RAIL GP - ENGINE SUPPORT	<a href="#">BreakDown...</a>
- 8N9639	04	1	I		GUARD GP-DAMPER	<a href="#">BreakDown...</a>
- 9X9647	01	1	I		ROTARY SENSOR CONTROL	<a href="#">BreakDown...</a>
- 1072855	03	1	I		MOUNTING GP - INSTRUMENT	<a href="#">BreakDown...</a>
- 1153634	00	1	I		FILTER-SOOT	<a href="#">BreakDown...</a>
- 1269191	02	1	I		MOUNTING GP - ALTERNATOR	<a href="#">BreakDown...</a>
- 1119377	03	1	I		MTG GP-ACL	<a href="#">BreakDown...</a>
- 1155164	01	1	I		BOX GP - MTG	<a href="#">BreakDown...</a>
7N4885	10	1	I		WATER LEVEL SWITCH GAUGE	<a href="#">BreakDown...</a>
1240121	00	1	I		COOLANT LEVEL SENSOR	<a href="#">BreakDown...</a>
LA1051	00	1	I		KEEL COOLING CONVERSION	<a href="#">BreakDown...</a>
- 3N2652	08	1	I		KEEL COOLING CONNECTIONS	<a href="#">BreakDown...</a>
5N9527	01	1	I		FLEXIBLE FITTING	<a href="#">BreakDown...</a>
5N8529	00	1	I		ELBOW, 356 MM (14 IN)	<a href="#">BreakDown...</a>
PA0941	07	1	I		FLANGE AND EXHAUST EXPANDER	<a href="#">BreakDown...</a>
- 1W9488	01	1	I		FLANGE	<a href="#">BreakDown...</a>
- 1W9487	01	1	I		FITTING GP - EXHAUST	<a href="#">BreakDown...</a>

1151065	01	1	I	FUEL PRIMING PUMP LH	<a href="#">BreakDown...</a>
5N2438	05	1	I	FLEXIBLE FUEL LINES	<a href="#">BreakDown...</a>
1028627	00	1	I	CUST COMMUNICATIONS MODULE-CCM	<a href="#">BreakDown...</a>
LA0339	03	1	I	ENGINE PREMIUM PANEL LH	<a href="#">BreakDown...</a>
- 1204492	01	1	I	WIRING GP	<a href="#">BreakDown...</a>
- 1204498	01	1	I	THERMOCOUPLE GP	<a href="#">BreakDown...</a>
- 1204504	01	1	I	PYROMETER GP	<a href="#">BreakDown...</a>
- 1262221	03	1	I	BOX GP - INSTRUMENT	<a href="#">BreakDown...</a>
- 1340072	00	1	I	WIRING GP - ENGINE	<a href="#">BreakDown...</a>
LA0172	01	1	I	PREMIUM PILOT HOUSE PANEL	<a href="#">BreakDown...</a>
- 1238212	01	1	I	PANEL GP- INSTRUMENT	<a href="#">BreakDown...</a>
LA1021	04	1	I	MARINE GEAR SENSORS	<a href="#">BreakDown...</a>
- 1305173	00	1	I	SENSOR GP- PRESSURE	<a href="#">BreakDown...</a>
- 1305174	00	1	I	SENSOR GP- TEMPERATURE	<a href="#">BreakDown...</a>
9Y7876	00	1	I	OIL PAN DRAIN VALVE	<a href="#">BreakDown...</a>
PA1669	08	1	I	SUMP PUMP RH	<a href="#">BreakDown...</a>
- 7W9703	03	1	I	PUMP GP - SUMP	<a href="#">BreakDown...</a>
- 3N4868	05	1	I	HOSE ASSM.	<a href="#">BreakDown...</a>
LA0367	02	1	I	ELECTRIC PRELUBE PUMP 24 VOLT	<a href="#">BreakDown...</a>
- 4P4926	01	1	I	PUMP GP - PRELUBE	<a href="#">BreakDown...</a>
- 1204513	00	1	I	BOX GP. JUNCTION	<a href="#">BreakDown...</a>
- 1346313	00	1	I	HARNES GP-WRG (PRELUBE)	<a href="#">BreakDown...</a>
LA0416	01	1	I	AIR INLET OVERSPEED SHUTOFF	<a href="#">BreakDown...</a>
- 1186677	04	1	I	AIR INLET OVERSPEED SHUTOFF	<a href="#">BreakDown...</a>
- 1346315	00	1	I	HARNES GP- WIRING(AIR SHUTOFF)	<a href="#">BreakDown...</a>
PA0284	06	1	I	ALARM CONTACTORS OP/WT	<a href="#">BreakDown...</a>
- 4W2767	00	1	I	CONTACTOR GP	<a href="#">BreakDown...</a>

- 7E6469	02	1	I	MOUNTING GP - CONTACTOR	<a href="#">BreakDown...</a>
8N8510	04	1	I	EXPLOSION RELIEF VALVE	<a href="#">BreakDown...</a>
LA0325	04	1	I	AIR STARTING MOTOR RH	<a href="#">BreakDown...</a>
- 7C0330	04	1	I	ELECTRIC AIR START CONTROL RH	<a href="#">BreakDown...</a>
- 7C3371	00	1	I	MOTOR GP - AIR STG	<a href="#">BreakDown...</a>
- 7W9269	03	1	I	LINES GP - AIR	<a href="#">BreakDown...</a>
8N8483	05	1	I	AIR PRESSURE REGULATOR RH	<a href="#">BreakDown...</a>
LA0256	04	1	I	AIR START SILENCER	<a href="#">BreakDown...</a>
- 1126597	02	1	I	SILENCER GROUP- AIR STARTING	<a href="#">BreakDown...</a>
7W0408	01	1	I	BATTERY CHARGER 10 AMP	<a href="#">BreakDown...</a>
7L7872	08	1	I	24 VOLT BATTERY SET - DRY	<a href="#">BreakDown...</a>
3N7056	00	1	I	BATTERY RACK	<a href="#">BreakDown...</a>
LA1315	04	1	I	REMOTE INSTR. PANEL MOUNT KIT	<a href="#">BreakDown...</a>
- 1204516	00	1	I	MOUNTING GP- INSTRUMENT	<a href="#">BreakDown...</a>
- 1214112	01	1	I	WIRING GP-7.6 METER (25 FT)	<a href="#">BreakDown...</a>
- 1213325	03	1	I	MOUNTING GP - INSTRUMENT	<a href="#">BreakDown...</a>
- 1410717	00	1	I	HARNESS AS - EXTENSION (25')	<a href="#">BreakDown...</a>
1204501	02	1	I	DUPLEX OIL FILTER	<a href="#">BreakDown...</a>
LA0999	02	1	I	DUPLEX FUEL FILTER	<a href="#">BreakDown...</a>
- 1210470	02	1	I	DUPLEX FUEL FILTER	<a href="#">BreakDown...</a>
- 1257088	01	1	I	HARNESS AS. - WIRING	<a href="#">BreakDown...</a>
0P7975		1	I	MARINE PROPULSION ANALYSIS	<a href="#">BreakDown...</a>
0P9714		2	I	EXTRA LITERATURE - ENGLISH	<a href="#">BreakDown...</a>
0P7925		1	I	ABS ENGINE CERTIFICATION	<a href="#">BreakDown...</a>
0P7579		1	I	SHRINK WRAP PROTECTION - 3516	<a href="#">BreakDown...</a>
PP3159	01	1	I	2000 BHP WOF 1600 RPM MARINE "	<a href="#">BreakDown...</a>

- 2T7848	00	1	I	1491.5 KW @ 1600RPM (2000 BHP) <a href="#">BreakDown...</a>
- 1315257	00	1	I	SOFTWARE GP- ELECTRONIC