

3508B INDUSTRIAL ENGINE

Engine Serial Prefix - CBB (Build Date - 01/2002, Test Date - 01/2002, Ship Date - 01/2002)

▼ ENGINE - ENTIRE GROUP (CBB)

Qty.	NPR	Note	Part No.	ChangeReq. Level	Req. Qty	Part Name
						FEATURE CODES
		I	508DP02	F	001	3508B DITA SCAC LAND MECH ENG
		I	ALT2412	F	001	CHARGING ALT 24V 60 AMP
		I	CLS0001	F	001	COOLANT LEVEL SENSOR
		I	CLCNTC0	F	001	TORQUE CONV COOLING CONNECTION
		I	PFF0001	F	001	PRIMARY FUEL FILTER
		I	FUMDIS1	F	001	FUMES DISPOSAL
		I	OPADRC1	F	001	OIL PAN DRAIN COVER
		I	LUBOIL1	F	001	LUBRICATING OIL
		I	MSPETIN	F	001	PETROLEUM INDUSTRIAL
		I	LMCHENG	F	001	LAND MECHANICAL ENGINE
		I	3508B	F	001	3508B DIESEL ENGINE
		I	HP00760	F	001	760 BHP (567 BKW) W/O FAN
		I	PCKNONE	F	001	NO PACKING REQUIRED
						PART NUMBERS
		I	0P-8910		001	POST SALE SPAR
		I	5N-9999		001	STANDARD SETTING REQUEST
		I	LL5404	00	001	760 BHP WOF @ 1200 RPM - OIL F
		I	0K-3604		001	567 BKW (760 BHP) @ 1200 RPM
		I	LA3564	05	001	3508B DITA SCAC LAND MECH ENG
	<u>NPR</u>	IY	<u>191-8388</u>	06	001	ENGINE AR
	<u>NPR</u>	IY	<u>4W-2767</u>	00	001	CONTACTOR GP
	<u>NPR</u>	IY	<u>5N-2438</u>	05	001	LINES GP-FLEXIBLE FUEL
	<u>NPR</u>	IY	<u>5N-2457</u>	03	001	FITTING GP-EXHAUST
		I	5N-7558		001	ASSEMBLY INST. LH SERVICE
		I	5N-9635		001	CONVENIENCE NUM
		I	5P-2506	00	001	LITERATURE GP
	<u>NPR</u>	IY	<u>7C-0330</u>	04	001	CONTROL GP-AIR STARTING
	<u>NPR</u>	IY	<u>7E-6469</u>	05	001	MOUNTING GP-CONTACTOR
	<u>NPR</u>	IY	<u>7N-6782</u>	08	001	INDICATOR GP-AIR FILTER CHANGE

	NPR	IY	<u>7N-6962</u>	06	001	FLANGE GP-EXHAUST
	NPR	IY	<u>7N-6968</u>	05	001	FITTING GP-EXHAUST
	NPR	IY	<u>8N-9303</u>	08	001	AIR CLEANER GP
	NPR	IY	<u>8N-9639</u>	04	001	GUARD GP-DAMPER
	NPR	IY	<u>9Y-0845</u>	00	001	RAIL GP-ENGINE SUPPORT
	NPR	IY	<u>107-2855</u>	04	001	MOUNTING GP-INSTRUMENT PANEL
	NPR	IY	<u>112-6597</u>	02	001	SILENCER GP-AIR STARTING
	NPR	IY	<u>115-1064</u>	02	001	PUMP GP-FUEL PRIMING
	NPR	IY	<u>115-5164</u>	02	001	BOX & MOUNTING GP
	NPR	IY	<u>115-7841</u>	14	001	FILTER GP-ENGINE OIL
	NPR	IY	<u>115-7842</u>	07	001	FILTER GP-FUEL
	NPR	IY	<u>207-4476</u>	00	001	LINES GP-AIR STARTING
	NPR	IY	<u>118-6676</u>	06	001	SHUTOFF GP-AIR
	NPR	IY	<u>125-7089</u>	08	001	BOX GP-INSTRUMENT PANEL
	NPR	IY	<u>132-3793</u>	04	001	WIRING GP-ENGINE
	NPR	IY	<u>134-6315</u>	00	001	WIRING GP-PANEL
	NPR	IY	<u>134-6323</u>	01	001	WIRING GP-PANEL
	NPR	IY	<u>8N-8476</u>	05	001	STARTING MOTOR GP-AIR
	NPR	IY	<u>176-1673</u>	00	001	REGULATOR GP-TEMPERATURE
		I	LA1661	03	001	CHARGING ALTERNATOR 24V 60 AMP
	NPR	IY	<u>7E-2858</u>	00	001	ALTERNATOR GP-CHARGING
	NPR	IY	<u>7E-4836</u>	06	001	MOUNTING GP-ALTERNATOR
	NPR	IY	<u>7W-5780</u>	04	001	GUARD GP-BELT
	NPR	IY	<u>166-4357</u>	00	001	DRIVE GP-ACCESSORY
	NPR	IY	<u>111-3794</u>	01	001	SENSOR GP-COOLANT LEVEL
	NPR	IY	<u>5N-7770</u>	06	001	CONNECTION GP-TORQUE CONV CLR
	NPR	IY	<u>8N-6435</u>	02	001	FILTER GP-PRIMARY FUEL
		I	LA1061	05	001	FUMES DISPOSAL
	NPR	IY	<u>9Y-5563</u>	02	001	FUMES DISPOSAL GP
	NPR	IY	<u>120-9818</u>	05	001	FUMES DISPOSAL GP
	NPR	IY	<u>2W-5616</u>	04	001	COVER GP-OIL PAN
		I	PA5309	06	001	LUBRICATING OIL
	NPR	I	5P-2586	03	001	OIL
		I	0V-1060		001	END USE: PET INDUSTRIAL
						SHIPPED LOOSE
	NPR	S	0S-1571	008		BOLT

	NPR	S	0S-1588	008	BOLT
	NPR	S	0S-1590	008	BOLT
	NPR	S	0S-1591	008	BOLT
	NPR	S	1H-7666	002	GASKET
	NPR	S	1L-3769	001	RING-RETAINING
	NPR	S	1S-5772	002	GASKET
	NPR	S	1W-0531	001	BASE-PRIMARY FUEL FILTER
	NPR	S	2H-3429	001	RING-RETAINING
	NPR	S	2J-0157	001	SEAL-O-RING
	NPR	S	2N-8928	004	CLIP
	NPR	S	3N-6504	001	HOSE AS
	NPR	S	3V-3308	008	WASHER-HARD
	NPR	S	5F-5990	002	CLIP
	NPR	S	5L-3773	001	GASKET-EXHAUST ELBOW
	NPR	S	5L-6297	001	ADAPTER AS-FLEXIBLE
	NPR	S	5M-2894	012	WASHER-HARD
	NPR	S	5N-7772	001	ORIFICE AS
	NPR	S	5P-0597	001	CLAMP-HOSE
	NPR	S	5P-1472	290	HOSE
	NPR	S	6V-6866	002	PLUG
	NPR	S	6V-8801	004	NUT
	NPR	S	7H-9678	001	RETAINER-ELEMENT
	NPR	S	7N-1628	001	NUT
	NPR	S	7N-5971	001	ADAPTER
	NPR	S	7N-6954	001	FLANGE
	NPR	S	7N-6957	001	GASKET
	NPR	S	7S-9323	001	SPRING
	NPR	S	8H-2778	001	SEAL-RING
	NPR	S	8H-7202	001	CASE AS-FUEL FILTER
	NPR	S	8N-1186	001	HOSE AS
	NPR	S	8N-1663	001	BOOT
	NPR	S	8N-2555	002	FILTER-SOOT
	NPR	S	8T-4896	004	WASHER-HARD
	NPR	S	8T-6762	001	PLUG-PIPE
	NPR	S	9B-7237	008	BOLT
	NPR	S	9M-2342	001	FILTER ELEMENT-FUEL

	<u>NPR</u>	S	9S-8752	008	NUT-FULL
	<u>NPR</u>	SY	<u>111-3794</u>	001	SENSOR GP-COOLANT LEVEL
		S	SEBP3216	001	PTSBK
		S	SEBU6251	001	LUBE 140019B2(A)
		S	SEBU6984	001	SUPP
		S	SEBU7455	001	OMM
		S	SELF5238	001	WARRANTY
		S	SMBU6981	001	SUPP
		S	ESO	001	(PRNT ESO COPY)
		S	PML	001	*REQUIRED DECALS

Key:

I Installed

Y Separate Illustration

S Shipped Loose