

C18 INDUSTRIAL ENGINE  
 Engine Serial Prefix - WJH (Build Date - 10/2007, Test Date - 10/2007)

♥ ENGINE - ENTIRE GROUP (WJH)

Qty.	NPR	Note	Part No.	ChangeReq. Level	Qty	Part Name
						<b>FEATURE CODES</b>
		I	C18DI02	F	001	C18 DIT-ATAAC IND ENGINE 02
		S	CGTPS04	F	001	REMOTE SPEED CONT-HAND KNOB
		I	FLYHG11	F	001	FLYWHEEL HOUSING SAE NO. 1
		S	PFFWS04	F	001	PR FUEL FILTER/WATER SEP SL
		I	ALT2412	F	001	CHARGING ALT 24V 60 AMP
		I	ALMT01	F	001	ALTERNATOR MOUNTING LH 01
		I	FDV0012	F	001	FAN DRIVE 0.800 RATIO
		S	EXCEL02	F	001	ELBOW 203 MM (8 IN)
		I	FLY0012	F	001	FLYWHEEL - SAE NO. 1 12
		S	MES0001	F	001	MESSENGER DISPLAY
		S	GIPCNT0	F	001	CONTROL 24V
		I	LUBOIL3	F	001	LUBRICATING OIL 3
		I	FRSUP05	F	001	FRONT ENGINE SUPPORT-NARROW
		I	ENGSUP8	F	001	REAR ENGINE SUPPORT
		I	ELSML11	F	001	ELEC START MTR LH 24V 11
		S	ACLDE03	F	001	SL AIR CLEANER-DUAL ELEMENT 03
		S	FLN0003	F	001	FLEX FUEL LINES-SL
		I	FNH0482	F	001	FAN HEIGHT-482.6 MM (19.00 IN)
		I	2100RPM	F	001	2100 RPM
		I	INDUSTC	F	001	INDUST INTERMITTENT C RATING
		I	INDUSTR	F	001	INDUSTRIAL ENGINE
		I	NOBRAKE	F	001	NO COMPRESSION BRAKE
		I	VLT0024	F	001	24 VOLT
		S	PBKHCD1	F	001	PARTS BOOK-PAPER & ELEC
		I	MSCIK38	F	001	PUMPS (NON-FIRE/IRR/PTR)
		I	MWCODEB	F	001	PUMP
		I	HP00700	F	001	700 BHP (522 BKW) W/O FAN
		I	MSINDOE	F	001	INDUSTRIAL/OEM
		I	CERTIF5	F	001	EPA/CARB TIER 3, EC STG IIIA

	NPR	NY	<a href="#">260-1548</a>	F	001	COOLER GP-FUEL
		I	PQ0094	20	001	ENGINE AR-C18 DIT ATAAC
	NPR	IY	<a href="#">241-0021</a>	07	001	ENGINE AR-CORE
	NPR	IY	<a href="#">237-4286</a>	02	001	DAMPER & PULLEY GP
		S	5P-2506	00	001	LITERATURE GP
	NPR	I	107-4447	03	001	INSTRUCTION-TURBOCHARGER
	NPR	IY	<a href="#">107-6737</a>	01	001	COVER GP-CYLINDER BLOCK
	NPR	IY	<a href="#">108-2312</a>	03	001	FITTING GP-QUICK DISCONNECT
	NPR	IY	<a href="#">109-1657</a>	01	001	FASTENER GP-VALVE MECHANISM
	NPR	IY	<a href="#">109-3287</a>	08	001	PAN GP-OIL
	NPR	IY	<a href="#">109-3290</a>	01	001	FASTENER GP-OIL PAN
	NPR	IY	<a href="#">255-9250</a>	02	001	PLUG GP-WATER LINES
	NPR	IY	<a href="#">109-2373</a>	02	001	FASTENER GP-WATER PUMP
	NPR	IY	<a href="#">109-4202</a>	05	001	ELBOW GP-AIR INLET
	NPR	IY	<a href="#">111-2088</a>	01	001	LIFTING GP-ENGINE
	NPR	I	260-1545	01	001	COVER GP
	NPR	IY	<a href="#">127-0564</a>	01	001	LIFTING GP-ENGINE
	NPR	IY	<a href="#">150-4279</a>	08	001	PUMP & MTG GP-FUEL TRANSFER
	NPR	IY	<a href="#">255-9251</a>	01	001	PLUG GP-WATER LINES
	NPR	IY	<a href="#">159-6159</a>	06	001	COVER GP-FRONT HOUSING
	NPR	IY	<a href="#">192-0772</a>	03	001	MANIFOLD GP-EXHAUST
	NPR	IY	<a href="#">171-2094</a>	01	001	FILLER GP-ENGINE OIL
	NPR	IY	<a href="#">172-7120</a>	01	001	FASTENER GP-ENGINE
	NPR	IY	<a href="#">269-2509</a>	02	001	HOUSING GP-FRONT
	NPR	IY	<a href="#">187-0673</a>	01	001	GUIDE GP-OIL LEVEL GAUGE
	NPR	IY	<a href="#">255-4650</a>	00	001	COVER GP-VALVE MECHANISM
	NPR	IY	<a href="#">255-9246</a>	03	001	LINES GP-WATER
	NPR	IY	<a href="#">255-0654</a>	03	001	LINES GP-FUEL FILTER
	NPR	IY	<a href="#">191-0583</a>	00	001	MANIFOLD GP-FUEL
	NPR	IY	<a href="#">191-5054</a>	02	001	PUMP GP-FUEL PRM & SEC FILTER
	NPR	IY	<a href="#">236-1780</a>	03	001	CONTROL & MTG GP-ENGINE ELEK
	NPR	IY	<a href="#">237-4294</a>	07	001	WIRING GP-ENGINE
	NPR	IY	<a href="#">194-3967</a>	03	001	MOUNTING GP-SENSOR
	NPR	SY	<a href="#">240-6054</a>	02	001	CONNECTION GP-ELECTRICAL
	NPR	IY	<a href="#">200-2852</a>	00	001	FASTENER GP-WATER LINES

## PART NUMBERS

	<a href="#">NPR</a>	IY	<a href="#">201-6631</a>	01	001	FITTING GP-FUEL LINES
	<a href="#">NPR</a>	IY	<a href="#">234-9184</a>	00	001	PLUG GP-CYLINDER HEAD
	<a href="#">NPR</a>	IY	<a href="#">234-9706</a>	01	001	PLUG GP-CYLINDER BLOCK
	<a href="#">NPR</a>	IY	<a href="#">234-9776</a>	01	001	PLUG GP-ENGINE
	<a href="#">NPR</a>	IY	<a href="#">229-5519</a>	05	001	COVER GP-CYLINDER BLOCK
	<a href="#">NPR</a>	IY	<a href="#">227-9495</a>	01	001	SUPPORT GP-ENGINE
	<a href="#">NPR</a>	IY	<a href="#">229-9965</a>	00	001	FASTENER GP-FRONT HOUSING
	<a href="#">NPR</a>	IY	<a href="#">229-9966</a>	00	001	FASTENER GP-FRONT HOUSING
	<a href="#">NPR</a>	IY	<a href="#">238-9384</a>	01	001	FASTENER GP-WIRING HARNESS
		I	255-4219	00	001	INSTRUCTIONS
	<a href="#">NPR</a>	IY	<a href="#">232-1829</a>	03	001	LINES GP-EXHAUST
	<a href="#">NPR</a>	IY	<a href="#">256-0370</a>	00	001	FITTING GP-FUEL LINES
	<a href="#">NPR</a>	IY	<a href="#">260-1550</a>	02	001	LINES GP-TURBOCHARGER OIL
	<a href="#">NPR</a>	IY	<a href="#">266-0050</a>	00	001	PLUG GP-CYLINDER BLOCK
	<a href="#">NPR</a>	IY	<a href="#">212-2765</a>	04	001	FUMES DISPOSAL GP
	<a href="#">NPR</a>	I	211-4834	03	001	PLATE & FILM GP
	<a href="#">NPR</a>	IY	<a href="#">268-6625</a>	01	001	FILTER GP-ENGINE OIL
	<a href="#">NPR</a>	IY	<a href="#">255-9248</a>	00	001	FASTENER GP-WATER PUMP
	<a href="#">NPR</a>	IY	<a href="#">255-9252</a>	01	001	PLUG GP-WATER LINES
	<a href="#">NPR</a>	IY	<a href="#">286-9120</a>	00	001	FASTENER GP-WIRING HARNESS
	<a href="#">NPR</a>	IY	<a href="#">285-0028</a>	00	001	FASTENER GP-WIRING HARNESS
	<a href="#">NPR</a>	IY	<a href="#">227-9864</a>	01	001	FASTENER GP-FRONT COVER
	<a href="#">NPR</a>	IY	<a href="#">285-8628</a>	00	001	FASTENER GP-FRONT COVER
	<a href="#">NPR</a>	IY	<a href="#">180-4367</a>	01	001	FASTENER GP-FRONT COVER
	<a href="#">NPR</a>	IY	<a href="#">311-1441</a>	00	001	PLUG GP-WATER LINES
	<a href="#">NPR</a>	SY	<a href="#">134-0670</a>	02	001	CONTROL GP-ENGINE SPEED
		I	PQ0198	03	001	HOUSING GP-FLYWHEEL-SAE #1
	<a href="#">NPR</a>	IY	<a href="#">141-8953</a>	01	001	FASTENER GP-FUEL LINES
	<a href="#">NPR</a>	IY	<a href="#">135-7634</a>	04	001	HOUSING GP-FLYWHEEL
	<a href="#">NPR</a>	IY	<a href="#">9N-3889</a>	04	001	COVER GP-FLYWHEEL HOUSING
	<a href="#">NPR</a>	IY	<a href="#">127-5728</a>	01	001	COVER GP-FLYWHEEL HOUSING
	<a href="#">NPR</a>	I	204-5325	01	001	COVER GP-SHIPPING
	<a href="#">NPR</a>	IY	<a href="#">135-8015</a>	01	001	PLUG GP-FLYWHEEL HOUSING
		SY	<a href="#">212-9431</a>	00	001	FILTER GP-WATER SEP & FUEL
	<a href="#">NPR</a>	IY	<a href="#">4N-3986</a>	15	001	ALTERNATOR GP-CHARGING
		I	PQ1214	00	001	ALTERNATOR MTG (LH, NARROW SUP

	NPR	IY	<u>286-8179</u>	00	001	MOUNTING GP-ALTERNATOR
		I	PA6453	03	001	FAN DRIVE .800 RATIO
	NPR	IY	<u>120-4232</u>	03	001	DRIVE GP-FAN
	NPR	SY	<u>5L-7520</u>	03	001	ELBOW-EXHAUST
	NPR	IY	<u>107-3847</u>	02	001	FLYWHEEL GP
	NPR	SY	<u>243-3820</u>	06	001	MODULE GP-DISPLAY
		I	PA7677	05	001	CONTROL
	NPR	SY	<u>195-0131</u>	00	001	WIRING GP-ENGINE
	NPR	SY	<u>195-1345</u>	00	001	CONTROL GP-AUTO START/STOP
		I	0P-9400		001	LUBRICATING OIL
		I	PQ0444	01	001	FRONT ENGINE SUPPORT
	NPR	IY	<u>244-8681</u>	01	001	SUPPORT GP-ENGINE
	NPR	IY	<u>4N-4286</u>	07	001	SUPPORT GP-ENGINE
		I	PA6446	02	001	ELECTRIC STARTING MOTOR 24V LH
	NPR	IY	<u>120-9100</u>	03	001	STARTING MOTOR GP-ELECTRIC
		I	PQ0776	00	001	AIR CLEANER GP
	NPR	SY	<u>232-6182</u>	00	002	PRECLEANER GP
	NPR	SY	<u>271-1745</u>	00	001	AIR CLEANER GP
	NPR	SY	<u>267-3482</u>	00	001	LINES GP-FLEXIBLE FUEL
		I	283-1605	00	001	INSTRUCTIONS
		S	0V-1766		001	PARTS BOOK - PAPER & ELECTRONI
		I	0V-1085		001	END USE: INDUSTRIAL/OEM
		I	PP5949	00	001	700 BHP (522 BKW) WOF 2100 RPM
		I	0K-7487	00	001	SETTING
						<b>SHIPPED LOOSE</b>
		S+	0V-1766		001	PARTS BOOK - PAPER & ELECTRONI
	NPR	S	1M-3419		002	SEAL-O-RING
	NPR	S	3B-6552		002	ELBOW-PIPE
	NPR	S	4F-3714		008	WASHER
	NPR	S	4L-6454		004	BOLT
	NPR	S	4W-7731		002	HOSE-REDUCER
	NPR	SY	<u>5L-7520</u>		001	ELBOW-EXHAUST
	NPR	S	5P-1075		005	WASHER-HARD
	NPR	S	5P-9074		001	WIRE-ELECTRICAL
	NPR	S	5S-7379		001	BOLT
	NPR	S	7C-2644		001	CLIP

	<a href="#">NPR</a>	S	7W-7536	001	HOSE AS
	<a href="#">NPR</a>	S	8C-3334	002	RIVET-TUBULAR
	<a href="#">NPR</a>	S	8C-6354	001	CAP-RECEPTACLE
	<a href="#">NPR</a>	S	8M-0547	001	ELBOW-FLARED
	<a href="#">NPR</a>	S	8S-0948	001	CLIP
	<a href="#">NPR</a>	S	8S-4951	001	CAP
	<a href="#">NPR</a>	S	8S-6823	002	HOOD AS
	<a href="#">NPR</a>	S	8S-6824	002	CLAMP AS
	<a href="#">NPR</a>	S	8T-8732	001	RECEPTACLE-CONNECTOR
	<a href="#">NPR</a>	S	8T-8736	001	RECEPTACLE-CONNECTOR
	<a href="#">NPR</a>	S	8T-8737	068	PLUG-SEAL
	<a href="#">NPR</a>	S	8T-8915	004	BOLT
	<a href="#">NPR</a>	S	9W-0844	003	SOCKET-CONNECTOR
	<a href="#">NPR</a>	S	9W-0852	002	PIN-CONNECTOR
		S	LEBM3227	001	MESSENGER GUIDE 140021D3(A)
		S	SEBP3816	001	PTSBK 1400 (A)
		S	SEBU6251	001	LUBE 140019B2(A)
		S	SEBU7899	001	OMM 1400 (A)
		S	SELF5391	001	WARRANTY
		S	SERP3816	001	PTSCD 1400 (A)
		S	SMBU6981	001	SUPP
	<a href="#">NPR</a>	S	113-3155	002	BODY
	<a href="#">NPR</a>	S	129-5429	001	CORE AS-FUEL COOLER
	<a href="#">NPR</a>	S	133-0967	001	PIN-CONNECTOR
	<a href="#">NPR</a>	S	133-0969	001	CONNECTOR-SOCKET
	<a href="#">NPR</a>	SY	<a href="#">134-0670</a>	001	CONTROL GP-ENGINE SPEED
	<a href="#">NPR</a>	S	135-6260	002	CLAMP-HOSE
	<a href="#">NPR</a>	S	135-6261	002	CLAMP
	<a href="#">NPR</a>	S	141-1060	008	MOUNT-ISOLATION
	<a href="#">NPR</a>	S	145-4211	002	ADAPTER-FILTER
	<a href="#">NPR</a>	S	145-4212	002	INDICATOR-AIR FILTER CHANGE
	<a href="#">NPR</a>	S	151-6320	002	TOOL-WIRE REMOVAL
	<a href="#">NPR</a>	S	160-7689	001	PLUG AS-CONNECTOR
	<a href="#">NPR</a>	SY	<a href="#">163-0820</a>	002	AIR CLEANER GP
	<a href="#">NPR</a>	S	180-9339	007	PIN-CONNECTOR
	<a href="#">NPR</a>	S	180-9340	069	SOCKET-CONNECTOR

	<u>NPR</u>	SY	<u>195-0131</u>	001	WIRING GP-ENGINE
	<u>NPR</u>	SY	<u>195-1345</u>	001	CONTROL GP-AUTO START/STOP
	<u>NPR</u>	S	206-6308	001	HOSE AS
		SY	<u>212-9431</u>	001	FILTER GP-WATER SEP & FUEL
	<u>NPR</u>	SY	<u>243-3820</u>	001	MODULE GP-DISPLAY
	<u>NPR</u>	S	260-1549	001	BRACKET AS
	<u>NPR</u>	S	260-1553	001	HOSE AS
	<u>NPR</u>	S	277-6240	001	BRACKET AS

Key:

I Installed

S Shipped Loose

Y Separate Illustration

N Not Installed