

3508C PETROLEUM ENGINE

Engine Serial Prefix - LLE (Build Date - 03/2009, Test Date - 03/2009)

▼ ENGINE - ENTIRE GROUP (LLE)

<u>Qty.</u>	<u>NPR</u>	<u>Note</u>	<u>Part No.</u>	<u>Change Level</u>	<u>Req. Qty</u>	<u>Part Name</u>
						FEATURE CODES
		I	508DP09	F	001	3508C LAND MECHANICAL ENGINE
		I	CLCNTC0	F	001	TORQUE CONV COOLING CONNECTION
		S	CLS0001	F	001	COOLANT LEVEL SENSOR
		S	PFF0001	F	001	PRIMARY FUEL FILTER
		S	FUMDIS1	F	001	FUMES DISPOSAL
		I	ALT2412	F	001	CHARGING ALT 24V 60 AMP
		S	EXCEL10	F	001	ELBOW, 254 MM (10 IN)
		I	LUBOI18	F	001	LUBRICATING OIL, 500 HR PAN
		I	1200RPM	F	001	1200 RPM
		I	MWCODED	F	001	MECHANICAL DRIVE
		I	MSCP12	F	001	DRILLING
		I	DM8276A	F	001	900 BHP (671 BKW) W/O FAN.
		I	MSPETDR	F	001	PETRO DRILLING
		I	3508C	F	001	3508C DIESEL ENGINE
		I	EPAT2NR	F	001	EPA TIER 2
		I	HP00900	F	001	900 BHP (671 BKW) W/O FAN 01
		I	LMCHENG	F	001	LAND MECHANICAL ENGINE
			OEM	F	001	OEM
						PART NUMBERS
		I	LA4512	09	001	3508C LAND MECHANICAL DRILLING
	<u>NPR</u>	IY	<u>264-4644</u>	19	001	ENGINE AR
	<u>NPR</u>	IY	<u>4W-2767</u>	00	001	CONTACTOR GP
	<u>NPR</u>	SY	<u>5N-2438</u>	05	001	LINES GP-FLEXIBLE FUEL
	<u>NPR</u>	SY	<u>5N-2457</u>	06	001	FITTING GP-EXHAUST
	<u>NPR</u>	IY	<u>8N-8477</u>	10	001	STARTING MOTOR GP-AIR
		S	5P-2506	00	001	LITERATURE GP
	<u>NPR</u>	IY	<u>7C-0330</u>	08	001	CONTROL GP-AIR STARTING
	<u>NPR</u>	IY	<u>7E-6469</u>	11	001	MOUNTING GP-CONTACTOR
	<u>NPR</u>	IY	<u>7N-6782</u>	08	001	INDICATOR GP-AIR FILTER CHANGE
	<u>NPR</u>	SY	<u>7N-6962</u>	06	001	FLANGE GP-EXHAUST
	<u>NPR</u>	SY	<u>7N-6968</u>	06	001	FITTING GP-EXHAUST
	<u>NPR</u>	IY	<u>8N-8486</u>	05	001	SILENCER GP-AIR STARTING
	<u>NPR</u>	IY	<u>8N-9303</u>	10	001	AIR CLEANER GP

	NPR	IY	8N-9639	05	001	GUARD GP-DAMPER
	NPR	IY	9Y-0845	01	001	RAIL GP-ENGINE SUPPORT
	NPR	IY	107-2855	06	001	MOUNTING GP-INSTRUMENT PANEL
	NPR	IY	8N-8481	14	001	LINES GP-AIR STARTING
	NPR	IY	115-5164	02	001	BOX & MOUNTING GP
	NPR	IY	115-7841	19	001	FILTER GP-ENGINE OIL
	NPR	IY	125-7089	15	001	BOX GP-INSTRUMENT PANEL
	NPR	IY	134-6315	03	001	WIRING GP-PANEL
	NPR	IY	163-1462	02	001	SENSOR & MTG GP-ELECTRIC
	NPR	IY	210-6112	03	001	DRAIN GP-ENGINE OIL
	NPR	IY	253-7393	03	001	WIRING GP-ENGINE
	NPR	IY	274-5749	02	001	SHUTOFF GP-AIR
	NPR	IY	287-8244	00	001	WIRING GP-PANEL
	NPR	IY	285-8634	01	001	PUMP GP-FUEL PRIMING
	NPR	IY	285-9159	02	001	FILTER GP-FUEL
		I	LA4814	00	001	TORQUE CONV COOLING CONNECTION
	NPR	IY	5N-7770	07	001	CONNECTION GP-TORQUE CONV CLR
	NPR	SY	204-2518	01	001	SENSOR GP-LIQUID LEVEL
	NPR	SY	8N-6435	03	001	FILTER GP-PRIMARY FUEL
		I	LA1061	05	001	FUMES DISPOSAL
	NPR	NY	9Y-5563	03	001	FUMES DISPOSAL GP
	NPR	IY	120-9818	06	001	FUMES DISPOSAL GP
		I	LA4780	03	001	CHARGING ALTERNATOR 24V 60A
	NPR	IY	7E-2858	08	001	ALTERNATOR GP-CHARGING
	NPR	IY	7E-4836	10	001	MOUNTING GP-ALTERNATOR
	NPR	IY	7W-5780	06	001	GUARD GP-BELT
	NPR	IY	166-4357	01	001	DRIVE GP-ACCESSORY
	NPR	IY	134-6317	01	001	WIRING GP-PANEL
	NPR	SY	5N-2458	03	001	ELBOW-EXHAUST
		I	LA5044	00	001	LUBRICATING OIL
	NPR	I	8T-9548	05	227	OIL
		I	LL5721	01	001	900 BHP WOF 1200 RPM OIL FIELD
		I	0K-7019		001	671 BKW (900 BHP) @ 1200 RPM
		I	0V-3462		001	EPA TIER II - NONROAD
		I	0V-2787		001	END USE: PETRO DRILLING
						SHIPPED LOOSE
		S			001	
		S	ESO		001	(PRNT ESO COPY)
		S	PML		001	*REQUIRED DECALS
	NPR	S	0S-1571		008	BOLT

	NPR	S	0S-1588	008	BOLT
	NPR	S	0S-1590	008	BOLT
	NPR	S	0S-1591	008	BOLT
	NPR	S	0S-1594	008	BOLT
	NPR	S	1H-7666	002	GASKET
	NPR	S	1L-3769	001	RING-RETAINING
	NPR	S	1S-5772	001	GASKET
	NPR	S	1W-0531	001	BASE-PRIMARY FUEL FILTER
	NPR	S	2H-3429	001	RING-RETAINING
	NPR	S	2J-0157	001	SEAL-O-RING
	NPR	S	2N-8928	004	CLIP
	NPR	S	3N-6504	001	HOSE AS
	NPR	S	3V-3308	008	WASHER-HARD
	NPR	S	5F-5990	002	CLIP
	NPR	S	5L-3773	001	GASKET-EXHAUST ELBOW
	NPR	S	5M-2894	012	WASHER-HARD
	NPR	SY	5N-2438	001	LINES GP-FLEXIBLE FUEL
	NPR	SY	5N-2457	001	FITTING GP-EXHAUST
	NPR	SY	5N-2458	001	ELBOW-EXHAUST
	NPR	SY	5N-7770	001	CONNECTION GP-TORQUE CONV CLR
	NPR	S	5N-7772	001	ORIFICE AS
	NPR	S	5P-0597	001	CLAMP-HOSE
	NPR	S	5P-1472	290	HOSE
		S	5P-2506	001	LITERATURE GP
	NPR	S	6F-5985	001	HOSE AS
		SY	6L-4502	001	CHART-PLATE & FILM
	NPR	S	6V-6866	002	PLUG
	NPR	S	6V-8801	004	NUT
	NPR	S	7H-9678	001	RETAINER-ELEMENT
	NPR	S	7N-1628	001	NUT
	NPR	S	7N-5971	001	ADAPTER
	NPR	S	7N-6954	001	FLANGE
	NPR	S	7N-6957	001	GASKET
	NPR	SY	7N-6962	001	FLANGE GP-EXHAUST
	NPR	SY	7N-6968	001	FITTING GP-EXHAUST
	NPR	S	7S-9323	001	SPRING
	NPR	S	8H-2778	001	SEAL-RING
	NPR	S	8H-7202	001	CASE AS-FUEL FILTER
	NPR	S	8N-1186	001	HOSE AS
	NPR	S	8N-1663	001	BOOT

NPR	S	8N-2555	002	FILTER-SOOT
NPR	S	8N-6432	001	ADAPTER
NPR	SY	8N-6435	001	FILTER GP-PRIMARY FUEL
NPR	SY	8N-8481	001	LINES GP-AIR STARTING
NPR	SY	8N-9303	001	AIR CLEANER GP
NPR	S	8T-4896	008	WASHER-HARD
NPR	S	8T-6762	001	PLUG-PIPE
NPR	S	9B-7237	004	BOLT
NPR	S	9M-2342	001	FILTER ELEMENT-FUEL
NPR	S	9S-8752	008	NUT-FULL
NPR	SY	9Y-5563	001	FUMES DISPOSAL GP
NPR	SY	125-7089	001	BOX GP-INSTRUMENT PANEL
NPR	SY	204-2518	001	SENSOR GP-LIQUID LEVEL
NPR	S	214-6045	001	BELLOWS AS
NPR	S	245-3512	001	GASKET
	S	REN1243	001	SMGP
	S	REN7678	001	SCHEMATIC
	S	SEBU8101	001	OMM
	S	SELF5419	001	WARRANTY
	S	SERP4465	001	PTSCD