

C32 INDUSTRIAL ENGINE  
 Engine Serial Prefix - TLD (Built 2011)

▼ ENGINE - ENTIRE GROUP (TLD)

<u>Qty.</u>	<u>NPR</u>	<u>Note</u>	<u>Part No.</u>	<u>Change Level</u>	<u>Req. Qty</u>	<u>Part Name</u>
						<b>FEATURE CODES</b>
		I	C32DI07	F	001	C32 ACERT DIT-ATAAC IND ENG 07
		I	NOEUCRT	F	001	NO EU CERT REQUEST-SEE DETAILS
		I	FLYHG00	F	001	FLYWHEEL HSG SAE NO. 0
		I	FLY0000	F	001	FLYWHEEL-SAE NO. 0
		I	ALT2466	F	001	CHARGING ALT 24V 150 A
		I	ALTM02	F	001	ALTERNATOR MOUNTING RH 02
		I	CBM0007	F	001	CIRCUIT BREAKER MTG 07
		S	CLS0001	F	001	COOLANT LEVEL SENSOR
		I	ENGSUP2	F	001	FRONT ENGINE SUPPORT - 205 MM
		I	STRSB02	F	001	STRUCTURAL STEEL BASE-SAE NO.0
		I	INSPN01	F	001	INSTRUMENT PANEL
		I	VLTM024	F	001	VOLTMETER GAUGE 24V-SL
		I	OLGAG01	F	001	OIL LEVEL GAGE LH REAR
		S	WIRGP01	F	001	HARNESS-ECM INTERCONNECT
		S	ACLDE02	F	001	AIR CLEANER - DUAL ELEMENT
		I	OFLH00	F	001	OIL FILLER-LH
		S	MES0001	F	001	MESSENGER DISPLAY
		S	SASETH1	F	001	ETHER STARTING AID
		I	LUBOIL1	F	001	LUBRICATING OIL 1
		I	EXHREAR	F	001	REAR FACING EXHAUST
		I	INDUSTC	F	001	INDUST INTERMITTENT C RATING
		I	INDUSTR	F	001	INDUSTRIAL ENGINE
		I	VLT0024	F	001	24 VOLT
		I	CGTOTH	F	001	THROTTLE POSITION SENSOR-OTHER
		I	1800RPM	F	001	1800 RPM
		I	MSLOCIN	F	001	MARKET SEGMENT
		I	OTHREG0	F	001	OTHER REGULATED AREAS LABEL
		I	MSCRL13	F	001	RAIL MAINTENANCE EQUIPMENT
		I	MWCODEE	F	001	PRIME POWER
		I	HP01125	F	001	1125 BHP (839 BKW) W/O FAN
		I	DPX0002	F	001	DOMESTIC PACK FOR EXPORT
		I	ESCNONE	F	001	NO EXTENDED SERVICE COVERAGE
		I	NONCERT	F	001	NON EPA/CARB/EU CERT

	I	0V-2330	F	001	DTO QUOTE CORRECTION
<a href="#">NPR</a>	ILY	<a href="#">308-1858</a>	F	001	STARTING MOTOR GP-AIR
<a href="#">NPR</a>	SY	<a href="#">308-1858</a>	F	001	STARTING MOTOR GP-AIR
	I	PQ1074	F	001	RADIATOR GP - SUCTION
<a href="#">NPR</a>	IY	<a href="#">305-8951</a>	F	001	FAN GP-SUCTION
<a href="#">NPR</a>	IY	<a href="#">307-9193</a>	F	001	DRIVE GP-FAN
<a href="#">NPR</a>	IY	<a href="#">308-1858</a>	F	001	STARTING MOTOR GP-AIR
	N	0V-8707	F	001	DTO QUOTE DESIGN FEE
	I	0V-1156	F	001	QUOTE NO:
					<b>PART NUMBERS</b>
	I	LE7770	01	001	C32 ACERT DIT-ATAAC IND ENG 07
<a href="#">NPR</a>	IY	<a href="#">350-5525</a>	01	001	ENGINE AR-CORE
<a href="#">NPR</a>	IY	<a href="#">4N-5837</a>	12	001	PUMP GP-WATER
<a href="#">NPR</a>	IY	<a href="#">4N-6866</a>	15	001	COVER GP-CYLINDER BLOCK
<a href="#">NPR</a>	IY	<a href="#">303-3186</a>	02	001	DAMPER GP
<a href="#">NPR</a>	IY	<a href="#">9Y-8809</a>	01	001	PAN GP-OIL
	I	107-4448	02	001	INSTRUCTIONS
<a href="#">NPR</a>	IY	<a href="#">131-3915</a>	03	001	LINES GP-ENGINE OIL
<a href="#">NPR</a>	IY	<a href="#">223-6407</a>	02	001	PLUG GP-CYLINDER HEAD
<a href="#">NPR</a>	IY	<a href="#">223-6421</a>	04	001	PUMP & MTG GP-FUEL TRANSFER
<a href="#">NPR</a>	IY	<a href="#">234-1622</a>	05	001	COVER GP-VALVE MECHANISM
<a href="#">NPR</a>	IY	<a href="#">235-2014</a>	01	001	LIFTING GP-ENGINE
<a href="#">NPR</a>	IY	<a href="#">347-3256</a>	01	001	SUPPORT GP-AFTERCOOLER
<a href="#">NPR</a>	IY	<a href="#">238-8294</a>	05	001	WIRING GP-ENGINE ELECTRONIC
<a href="#">NPR</a>	IY	<a href="#">240-4574</a>	02	001	FASTENER GP-WIRING HARNESS
<a href="#">NPR</a>	IY	<a href="#">241-0072</a>	02	001	CONTROL & MTG GP-ENGINE ELEK
<a href="#">NPR</a>	IY	<a href="#">255-8166</a>	01	001	MANIFOLD GP-INLET
<a href="#">NPR</a>	IY	<a href="#">256-9739</a>	03	001	PLATE GP-ENGINE IDENTIFICATION
<a href="#">NPR</a>	IY	<a href="#">264-1492</a>	01	001	FILTER GP-ENGINE OIL
<a href="#">NPR</a>	IY	<a href="#">269-0304</a>	02	001	FUMES DISPOSAL GP
<a href="#">NPR</a>	IY	<a href="#">269-0307</a>	01	001	LINES GP-TURBOCHARGER OIL
<a href="#">NPR</a>	IY	<a href="#">269-0321</a>	00	001	LINES GP-WATER
<a href="#">NPR</a>	IY	<a href="#">269-4755</a>	00	001	SHIELD GP-HEAT
<a href="#">NPR</a>	IY	<a href="#">269-4754</a>	01	001	MANIFOLD GP-EXHAUST
<a href="#">NPR</a>	IY	<a href="#">269-6430</a>	00	001	MOUNTING GP-FUEL FILTER
<a href="#">NPR</a>	IY	<a href="#">269-6434</a>	09	001	LINES GP-FUEL
<a href="#">NPR</a>	IY	<a href="#">269-6435</a>	05	001	FILTER GP-FUEL
<a href="#">NPR</a>	IY	<a href="#">269-6960</a>	00	001	COVER GP-OIL PAN
<a href="#">NPR</a>	IY	<a href="#">272-6648</a>	00	001	PLUG GP-CYLINDER BLOCK
<a href="#">NPR</a>	IY	<a href="#">272-6645</a>	02	001	PLUG GP-CYLINDER BLOCK

	<a href="#">NPR</a>	IY	<a href="#">272-6669</a>	00	001	LINES GP-WATER
	<a href="#">NPR</a>	IY	<a href="#">277-6226</a>	00	001	PLUG GP-ENGINE
	<a href="#">NPR</a>	IY	<a href="#">277-6227</a>	00	001	PLUG GP-WATER LINES
	<a href="#">NPR</a>	IY	<a href="#">277-6232</a>	01	001	ELBOW GP-AIR INLET
	<a href="#">NPR</a>	IY	<a href="#">279-6021</a>	00	001	PLUG GP-CYLINDER HEAD
	<a href="#">NPR</a>	IY	<a href="#">279-6022</a>	00	001	PLUG GP-CYLINDER HEAD
	<a href="#">NPR</a>	IY	<a href="#">279-6023</a>	00	001	PLUG GP-CYLINDER HEAD
		I	280-7368	02	001	INSTRUCTIONS - R
	<a href="#">NPR</a>	IY	<a href="#">279-6017</a>	00	001	ELBOW GP-WATER
	<a href="#">NPR</a>	IY	<a href="#">272-6649</a>	00	001	COVER GP-ACCESSORY DRIVE
	<a href="#">NPR</a>	IY	<a href="#">282-6849</a>	00	001	SUPPORT GP-BRACE
	<a href="#">NPR</a>	IY	<a href="#">292-6925</a>	00	001	FASTENER GP-WIRING HARNESS
	<a href="#">NPR</a>	IY	<a href="#">301-4107</a>	00	001	SENSOR GP-ENGINE
	<a href="#">NPR</a>	IY	<a href="#">301-4108</a>	01	001	ADAPTER GP-SENSOR
	<a href="#">NPR</a>	IY	<a href="#">344-0480</a>	00	001	SHIELD GP-TURBOCHARGER
	<a href="#">NPR</a>	I	357-1662	01	001	PLATE & FILM GP
		I	PQ0737	00	001	FLYWHEEL HOUSING - SAE 0
	<a href="#">NPR</a>	IY	<a href="#">239-3646</a>	07	001	HOUSING GP-FLYWHEEL
	<a href="#">NPR</a>	IY	<a href="#">224-1213</a>	06	001	GEAR GP-REAR
	<a href="#">NPR</a>	IY	<a href="#">270-8542</a>	02	001	COVER GP-ACCESS
	<a href="#">NPR</a>	IY	<a href="#">270-8580</a>	01	001	COVER GP-REAR HOUSING
	<a href="#">NPR</a>	IY	<a href="#">270-8664</a>	01	001	COVER GP-REAR HOUSING
	<a href="#">NPR</a>	IY	<a href="#">270-9199</a>	00	001	COVER GP-ACCESS
	<a href="#">NPR</a>	IY	<a href="#">270-9200</a>	00	001	COVER GP-ACCESS
	<a href="#">NPR</a>	IY	<a href="#">133-3089</a>	01	001	COVER GP-FLYWHEEL HOUSING
	<a href="#">NPR</a>	IY	<a href="#">127-5728</a>	01	001	COVER GP-FLYWHEEL HOUSING
	<a href="#">NPR</a>	IY	<a href="#">228-0051</a>	05	001	FLYWHEEL GP
	<a href="#">NPR</a>	IRY	<a href="#">306-2174</a>	01	001	ALTERNATOR GP-CHARGING
		I	PQ1065	01	001	ALTERNATOR MOUNTING
	<a href="#">NPR</a>	IY	<a href="#">298-6022</a>	00	001	MOUNTING GP-ALTERNATOR
	<a href="#">NPR</a>	IY	<a href="#">279-6028</a>	00	001	MOUNTING GP-CIRCUIT BREAKER
	<a href="#">NPR</a>	SY	<a href="#">239-9957</a>	02	001	SENSOR GP-LIQUID LEVEL
		I	PQ0756	01	001	FRONT AND REAR ENGINE SUPPORTS
	<a href="#">NPR</a>	IY	<a href="#">4N-4286</a>	08	001	SUPPORT GP-ENGINE
	<a href="#">NPR</a>	IY	<a href="#">7N-9078</a>	01	001	SUPPORT GP-ENGINE
	<a href="#">NPR</a>	IY	<a href="#">305-8937</a>	01	001	BASE GP-ENGINE
		I	PQ0745	00	001	INSTRUMENT PANEL
	<a href="#">NPR</a>	IY	<a href="#">137-7021</a>	01	001	PLUG GP-INSTRUMENT PANEL
	<a href="#">NPR</a>	IY	<a href="#">137-7022</a>	01	001	PLUG GP-INSTRUMENT PANEL
	<a href="#">NPR</a>	IY	<a href="#">137-7023</a>	01	001	PLUG GP-INSTRUMENT PANEL

<input type="checkbox"/>	<a href="#">NPR</a>	IY	<a href="#">269-4760</a>	02	001	PANEL GP-INSTRUMENT
<input type="checkbox"/>	<a href="#">NPR</a>	IY	<a href="#">269-4761</a>	00	001	MOUNTING GP-INSTRUMENT PANEL
<input type="checkbox"/>		I	PA6544	03	001	VOLTMETER GAUGE 24V
<input type="checkbox"/>	<a href="#">NPR</a>	IY	<a href="#">138-3142</a>	01	001	VOLTMETER GP
<input type="checkbox"/>		I	PQ0754	00	001	LEFT SIDE OIL GAGE
<input type="checkbox"/>	<a href="#">NPR</a>	IY	<a href="#">144-4054</a>	03	001	GAUGE GP-OIL LEVEL (DIPSTICK)
<input type="checkbox"/>		I	PQ1072	00	001	WIRING GP (ECM INTERCONNECT)
<input type="checkbox"/>	<a href="#">NPR</a>	SY	<a href="#">200-2310</a>	01	001	CONNECTION GP-ELECTRICAL
<input type="checkbox"/>	<a href="#">NPR</a>	SY	<a href="#">278-5672</a>	02	001	WIRING GP-ELECTRONIC CONTROL
<input type="checkbox"/>	<a href="#">NPR</a>	SY	<a href="#">308-3424</a>	00	001	AIR CLEANER GP
<input type="checkbox"/>		I	PQ1054	01	001	FILLER GP-OIL (LH)
<input type="checkbox"/>	<a href="#">NPR</a>	IY	<a href="#">272-6650</a>	01	001	FILLER GP-ENGINE OIL
<input type="checkbox"/>	<a href="#">NPR</a>	IY	<a href="#">282-6848</a>	01	001	COVER GP-ENGINE
<input type="checkbox"/>	<a href="#">NPR</a>	SY	<a href="#">243-3820</a>	09	001	MODULE GP-DISPLAY
<input type="checkbox"/>	<a href="#">NPR</a>	SY	<a href="#">305-6360</a>	02	001	STARTING AID GP-ETHER
<input type="checkbox"/>		I	PQ0962	01	001	LUBRICANT GP (SHIP WITH OIL)
<input type="checkbox"/>	<a href="#">NPR</a>	I	122-9798	02	001	PLATE & FILM GP
<input type="checkbox"/>		S	140-7705	00	001	LITERATURE GP
<input type="checkbox"/>		I	0V-1080		001	END USE: RAILWAY INDUSTRIAL
<input type="checkbox"/>	<a href="#">NPR</a>	I	361-1878	00	001	CERTIFICATION AR
<input type="checkbox"/>		I	PP5641	00	001	1125 BHP (839 BKW) W/O FAN
<input type="checkbox"/>		I	0K-4957	00	001	839.0KW (1125HP)@1800 RPM 'C'
<input type="checkbox"/>		I	0P-1914		001	DOMESTIC PACK FOR EXPORT
<input type="checkbox"/>		I	0V-2330		001	DTO QUOTE CORRECTION
<input type="checkbox"/>	<a href="#">NPR</a>	SY	<a href="#">308-1858</a>	08	001	STARTING MOTOR GP-AIR
<input type="checkbox"/>		I	PQ1074	01	001	RADIATOR GP - SUCTION
<input type="checkbox"/>	<a href="#">NPR</a>	IY	<a href="#">305-8931</a>	01	001	RADIATOR GP
<input type="checkbox"/>	<a href="#">NPR</a>	IY	<a href="#">305-8943</a>	03	001	LINES GP-AIR
<input type="checkbox"/>	<a href="#">NPR</a>	I	308-5205	02	001	COVER GP-SHIPPING
<input type="checkbox"/>	<a href="#">NPR</a>	IY	<a href="#">308-7693</a>	01	001	LINES GP-FUEL
<input type="checkbox"/>	<a href="#">NPR</a>	IY	<a href="#">305-8951</a>	00	001	FAN GP-SUCTION
<input type="checkbox"/>	<a href="#">NPR</a>	IY	<a href="#">307-9193</a>	03	001	DRIVE GP-FAN
<input type="checkbox"/>		N	0V-8707		001	DTO QUOTE DESIGN FEE
<input type="checkbox"/>		I	0V-1156		001	QUOTE NO:
<input type="checkbox"/>	<b>SHIPPED LOOSE</b>					
<input type="checkbox"/>			<input type="checkbox"/>			
<input type="checkbox"/>		S	PML		001	*REQUIRED DECALS
<input type="checkbox"/>	<a href="#">NPR</a>	S	0S-0509		001	BOLT
<input type="checkbox"/>	<a href="#">NPR</a>	S	0S-1588		002	BOLT

	<a href="#">NPR</a>	S	0S-1594	002	BOLT
	<a href="#">NPR</a>	S	2V-1713	001	TAG-NOTICE
	<a href="#">NPR</a>	S	3L-8993	001	FITTING
	<a href="#">NPR</a>	S	3N-7281	002	HOSE AS
	<a href="#">NPR</a>	S	3P-1823	001	ADAPTER-PIPE
	<a href="#">NPR</a>	S	3S-2093	004	STRAP-CABLE
	<a href="#">NPR</a>	S	3Y-2888	002	CONNECTOR
	<a href="#">NPR</a>	S	4B-5324	004	WASHER
	<a href="#">NPR</a>	S	4L-6454	005	BOLT
	<a href="#">NPR</a>	S	4N-3411	001	VALVE GP-RELAY
	<a href="#">NPR</a>	S	4P-7428	001	CLIP
	<a href="#">NPR</a>	S	4P-7581	007	CLIP
	<a href="#">NPR</a>	S	4P-7582	001	CLIP
	<a href="#">NPR</a>	S	4P-8134	001	CLIP
	<a href="#">NPR</a>	SY	<a href="#">4W-5105</a>	001	STARTING MOTOR GP-AIR
	<a href="#">NPR</a>	S	5B-7643	001	NIPPLE-PIPE
	<a href="#">NPR</a>	S	5B-7661	001	FITTING
	<a href="#">NPR</a>	S	5J-7303	003	ELBOW
	<a href="#">NPR</a>	S	5L-2534	001	U-BOLT
	<a href="#">NPR</a>	S	5M-2894	008	WASHER-HARD
	<a href="#">NPR</a>	S	5N-2728	001	ELBOW
	<a href="#">NPR</a>	S	5N-8743	001	BRACKET
	<a href="#">NPR</a>	S	5P-0600	002	CLAMP-HOSE
	<a href="#">NPR</a>	S	5P-0640	030	WIRE-ELECTRICAL
	<a href="#">NPR</a>	S	5P-6313	003	NUT
	<a href="#">NPR</a>	S	5P-6314	003	SLEEVE
	<a href="#">NPR</a>	S	5P-8245	002	WASHER-HARD
	<a href="#">NPR</a>	S	5P-9135	001	GROMMET
	<a href="#">NPR</a>	S	6B-3685	002	ELBOW
	<a href="#">NPR</a>	S	6F-5985	002	HOSE AS
	<a href="#">NPR</a>	S	6F-8857	001	NIPPLE-PIPE
	<a href="#">NPR</a>	S	6K-1019	001	NIPPLE-PIPE
	<a href="#">NPR</a>	S	6K-1972	001	ELBOW-FLARED
		SY	<a href="#">6L-4502</a>	001	CHART-PLATE & FILM
	<a href="#">NPR</a>	S	6V-4432	002	BOLT
	<a href="#">NPR</a>	S	6V-8801	002	NUT
	<a href="#">NPR</a>	S	7D-1728	002	CLIP
	<a href="#">NPR</a>	S	7K-1181	003	STRAP-CABLE
	<a href="#">NPR</a>	S	7N-0140	001	TUBE AS-COIL
	<a href="#">NPR</a>	S	7N-2059	001	CLAMP AS

	<a href="#">NPR</a>	S	8C-9006	001	TEE-UNION
	<a href="#">NPR</a>	S	8M-2772	001	CLIP
	<a href="#">NPR</a>	S	8N-3536	001	TUBE-STEEL
	<a href="#">NPR</a>	S	8N-8446	001	ELBOW
	<a href="#">NPR</a>	S	8N-8447	001	ELBOW
	<a href="#">NPR</a>	S	8N-8451	001	GASKET
	<a href="#">NPR</a>	S	8N-8452	001	GASKET
	<a href="#">NPR</a>	S	8N-8488	001	SILENCER-AIR STARTING
	<a href="#">NPR</a>	S	8T-4223	002	WASHER-HARD
	<a href="#">NPR</a>	S	8T-4896	007	WASHER-HARD
	<a href="#">NPR</a>	S	8T-6762	001	PLUG-PIPE
	<a href="#">NPR</a>	S	8T-8730	002	SOCKET-CONNECTOR
	<a href="#">NPR</a>	S	8T-8732	001	RECEPTACLE-CONNECTOR
	<a href="#">NPR</a>	S	8T-8737	036	PLUG-SEAL
	<a href="#">NPR</a>	S	8T-9391	006	BOLT
	<a href="#">NPR</a>	S	8T-9834	001	PLUG AS-CONNECTOR
	<a href="#">NPR</a>	S	9S-8752	002	NUT-FULL
	<a href="#">NPR</a>	S	9W-0844	003	SOCKET-CONNECTOR
	<a href="#">NPR</a>	S	9X-3401	003	PIN-CONNECTOR
	<a href="#">NPR</a>	S	9X-3402	039	SOCKET-CONNECTOR
	<a href="#">NPR</a>	S	9X-6258	004	SCREW-MACHINE
	<a href="#">NPR</a>	S	9Y-6089	001	GASKET
	<a href="#">NPR</a>	SY	<a href="#">131-5526</a>	001	FASTENER GP-WIRING HARNESS
	<a href="#">NPR</a>	S	133-0969	001	CONNECTOR-SOCKET
	<a href="#">NPR</a>	S	151-6320	002	TOOL-WIRE REMOVAL
	<a href="#">NPR</a>	S	155-2261	001	WEDGE-PLUG LOCK
	<a href="#">NPR</a>	S	155-2269	001	PLUG AS-CONNECTOR
	<a href="#">NPR</a>	SY	<a href="#">172-0208</a>	001	LUBRICATOR GP-AIR MOTOR
	<a href="#">NPR</a>	S	176-2543	003	BOLT-12 POINT HEAD
	<a href="#">NPR</a>	S	177-2215	001	STRAP-DUAL CLAMP
	<a href="#">NPR</a>	SY	<a href="#">200-2310</a>	001	CONNECTION GP-ELECTRICAL
	<a href="#">NPR</a>	S	214-7568	002	SEAL-O-RING
	<a href="#">NPR</a>	S	230-1437	001	FITTING AS
	<a href="#">NPR</a>	SY	<a href="#">239-1134</a>	001	VALVE GP-ETHER STARTING
	<a href="#">NPR</a>	SY	<a href="#">239-9957</a>	001	SENSOR GP-LIQUID LEVEL
	<a href="#">NPR</a>	SY	<a href="#">243-3820</a>	001	MODULE GP-DISPLAY
	<a href="#">NPR</a>	SY	<a href="#">254-3566</a>	002	AIR CLEANER GP
	<a href="#">NPR</a>	S	254-4293	002	CAP GP-AIR CLEANER
	<a href="#">NPR</a>	S	255-9392	002	PIPE-EXTENSION
	<a href="#">NPR</a>	S	264-2354	001	HARNESS AS-CONTROL

<input type="checkbox"/>	<a href="#">NPR</a>	S	278-5639	001	BRACKET AS
<input type="checkbox"/>	<a href="#">NPR</a>	SY	<a href="#">278-5672</a>	001	WIRING GP-ELECTRONIC CONTROL
<input type="checkbox"/>	<a href="#">NPR</a>	S	280-2562	002	ATOMIZER AS-ETHER
<input type="checkbox"/>	<a href="#">NPR</a>	SY	<a href="#">305-6360</a>	001	STARTING AID GP-ETHER
<input type="checkbox"/>		S	305-6364	001	INSTRUCTIONS
<input type="checkbox"/>	<a href="#">NPR</a>	SY	<a href="#">308-1858</a>	001	STARTING MOTOR GP-AIR
<input type="checkbox"/>	<a href="#">NPR</a>	SY	<a href="#">308-3424</a>	001	AIR CLEANER GP
<input type="checkbox"/>	<a href="#">NPR</a>	S	308-7539	001	TUBE AS
<input type="checkbox"/>	<a href="#">NPR</a>	S	308-9402	001	HARNESS AS-WIRING
<input type="checkbox"/>	<a href="#">NPR</a>	SY	<a href="#">309-9081</a>	001	VALVE AS-SOLENOID
<input type="checkbox"/>	<a href="#">NPR</a>	S	352-6504	001	ELBOW AS
<input type="checkbox"/>		S	LEBM3227	001	MESSENGER GUIDE 140021D3(A)
<input type="checkbox"/>		S	SCBU8097	001	OMM
<input type="checkbox"/>		S	SCLF5471	001	WARRANTY
<input type="checkbox"/>		S	SEBP4150	001	PTSBK