

C15 INDUSTRIAL ENGINE

Engine Serial Prefix - JRE (Build Date - 07/2005, Test Date - 08/2005)

▼ ENGINE - ENTIRE GROUP (JRE)

<u>Qty.</u>	<u>NPR</u>	<u>Note</u>	<u>Part No.</u>	<u>Change Level</u>	<u>Req. Qty</u>	<u>Part Name</u>
						<b>FEATURE CODES</b>
		I	C15DI11	F	001	C15 ACERT DIT-ATAAC IND ENG 11
		I	FLYHG11	F	001	FLY. HSG SAE NO. 1
		I	ACLDE01	F	001	AIR CLEANER - DUAL ELEMENT
		I	ALT2495	F	001	CHG ALTERNATOR 24V 95 AMP
		I	FDV0011	F	001	FAN DRIVE 0.681 RATIO
		I	CLS0001	F	001	COOLANT LEVEL SENSOR
		I	EXCCON1	F	001	EXHAUST CONNECTION
		I	EXCDE02	F	001	DRY ELBOW
		I	GIPCNT0	F	001	CONTROL 24V
		I	OPTDS01	F	001	DEEP SUMP OIL PAN
		I	OILDRN1	F	001	OIL PAN DRAIN VALVE
		I	OLGAG05	F	001	OIL LEVEL GAGE
		I	OFL0000	F	001	OIL FILLER
		I	LUBOIL3	F	001	LUBRICATING OIL
		I	ENGSUP0	F	001	ENGINE SUPPORTS
		I	ELSM10	F	001	ELEC START MTR LH 24V
		I	2100RPM	F	001	2100 RPM
		I	ACGOV00	F	001	AIR COMPRESSOR GOVERNOR
		I	AIRCP03	F	001	AIR COMPRESSOR
		I	ALTM02	F	001	ALTERNATOR MOUNTING
		I	CGTOTH	F	001	THROTTLE POSITION SENSOR-OTHER
		I	EXHFRNT	F	001	FRONT FACING EXHAUST
		I	FLYAD01	F	001	FLYWHEEL ADAPTER
		I	FULIN02	F	001	FUEL LINES LH
		I	INDUSTB	F	001	INDUSTRIAL B RATING
		I	INDUSTR	F	001	APPLICATION
		I	PFFWS02	F	001	PRIMARY FF/WATER SEP
		I	TOC0004	F	001	TRANSMISSION OIL COOLER
		I	VLT0024	F	001	24 VOLT
		I	MSPETIN	F	001	PETROLEUM INDUSTRIAL
		I	PBKHCD1	F	001	**OLD**PARTS BOOK-PAPER & ELEC
		I	TRSENG1	F	001	STD ENGINE TEST CHARGE 3L0436
		I	PSD05	F	001	WHSLE ENG MERCHANDISING PRGM
		I	MSCP12	F	001	DRILLING

	I	MWCODED	F	001	MECHANICAL DRIVE
	I	CERTIF5	F	001	EPA/CARB TIER3 & EC STAGE IIIA
	I	HP00475	F	001	475 BHP (354 BKW) W/O FAN
					<b>PART NUMBERS</b>
	I	PQ0088	05	001	C15 ACERT DIT-ATAAC IND ENG 11
	<a href="#">NPR</a>	IY <a href="#">241-0020</a>	05	001	ENGINE AR-CORE
	<a href="#">NPR</a>	IY <a href="#">4P-5894</a>	05	001	DAMPER & PULLEY GP
	I	5P-2506	00	001	LITERATURE GP
	<a href="#">NPR</a>	I 107-4447	03	001	INSTRUCTION-TURBOCHARGER
	<a href="#">NPR</a>	IY <a href="#">107-6736</a>	01	001	COVER GP-CYLINDER BLOCK
	<a href="#">NPR</a>	IY <a href="#">108-2312</a>	02	001	FITTING GP-QUICK DISCONNECT
	<a href="#">NPR</a>	IY <a href="#">109-1657</a>	01	001	FASTENER GP-VALVE MECHANISM
	<a href="#">NPR</a>	IY <a href="#">255-9250</a>	00	001	PLUG GP-WATER LINES
	<a href="#">NPR</a>	IY <a href="#">109-2373</a>	01	001	FASTENER GP-WATER PUMP
	<a href="#">NPR</a>	IY <a href="#">109-4202</a>	04	001	ELBOW GP-AIR INLET
	<a href="#">NPR</a>	IY <a href="#">111-2088</a>	01	001	LIFTING GP-ENGINE
	<a href="#">NPR</a>	I 121-0499	02	001	COVER GP-STORAGE
	<a href="#">NPR</a>	IY <a href="#">124-0657</a>	01	001	SHIELD GP-MANIFOLD
	<a href="#">NPR</a>	IY <a href="#">127-0564</a>	00	001	LIFTING GP-ENGINE
	<a href="#">NPR</a>	IY <a href="#">150-4279</a>	02	001	PUMP & MTG GP-FUEL TRANSFER
	<a href="#">NPR</a>	IY <a href="#">151-5366</a>	00	001	FASTENER GP-ENGINE
	<a href="#">NPR</a>	IY <a href="#">255-9251</a>	00	001	PLUG GP-WATER LINES
	<a href="#">NPR</a>	IY <a href="#">159-6159</a>	05	001	COVER GP-FRONT HOUSING
	<a href="#">NPR</a>	IY <a href="#">159-9107</a>	04	001	CONNECTION GP-ELECTRICAL
	<a href="#">NPR</a>	IY <a href="#">159-9362</a>	07	001	FUMES DISPOSAL GP
		IY <a href="#">160-8329</a>	00	001	FASTENER GP-OIL PAN
	<a href="#">NPR</a>	IY <a href="#">237-4291</a>	03	001	MANIFOLD GP-EXHAUST
	<a href="#">NPR</a>	IY <a href="#">170-1282</a>	01	001	FILTER GP-ENGINE OIL
	<a href="#">NPR</a>	IY <a href="#">172-7120</a>	01	001	FASTENER GP-ENGINE
	<a href="#">NPR</a>	IY <a href="#">224-1229</a>	04	001	HOUSING GP-FRONT
	<a href="#">NPR</a>	IY <a href="#">255-4649</a>	00	001	COVER GP-VALVE MECHANISM
	<a href="#">NPR</a>	IY <a href="#">191-5054</a>	02	001	PUMP GP-FUEL PRM & SEC FILTER
	<a href="#">NPR</a>	IY <a href="#">236-1780</a>	02	001	CONTROL & MTG GP-ENGINE ELEK
	<a href="#">NPR</a>	IY <a href="#">237-4294</a>	04	001	WIRING GP-ENGINE
	<a href="#">NPR</a>	IY <a href="#">194-3967</a>	02	001	MOUNTING GP-SENSOR
	<a href="#">NPR</a>	IY <a href="#">240-6054</a>	02	001	CONNECTION GP-ELECTRICAL
	<a href="#">NPR</a>	IY <a href="#">200-2852</a>	00	001	FASTENER GP-WATER LINES
	<a href="#">NPR</a>	IY <a href="#">201-6631</a>	01	001	FITTING GP-FUEL LINES
	<a href="#">NPR</a>	IY <a href="#">212-1487</a>	00	001	LINES GP-TURBOCHARGER OIL
	<a href="#">NPR</a>	IY <a href="#">224-0754</a>	00	001	FASTENER GP-OIL COOLER

	<a href="#">NPR</a>	IY	<a href="#">234-9184</a>	00	001	PLUG GP-CYLINDER HEAD
	<a href="#">NPR</a>	IY	<a href="#">234-9706</a>	01	001	PLUG GP-CYLINDER BLOCK
	<a href="#">NPR</a>	IY	<a href="#">247-8211</a>	00	001	PLUG GP-CYLINDER BLOCK
	<a href="#">NPR</a>	IY	<a href="#">227-9495</a>	01	001	SUPPORT GP-ENGINE
	<a href="#">NPR</a>	IY	<a href="#">238-9384</a>	01	001	FASTENER GP-WIRING HARNESS
	<a href="#">NPR</a>	IY	<a href="#">252-9659</a>	01	001	TURBOCHARGER GP
		I	255-4213	00	001	INSTRUCTIONS
	<a href="#">NPR</a>	IY	<a href="#">275-3979</a>	00	001	SHIELD GP-HEAT
		I	PQ0198	02	001	FLYWHEEL HOUSING SAE NO. 1
	<a href="#">NPR</a>	IY	<a href="#">141-8953</a>	00	001	FASTENER GP-FUEL LINES
	<a href="#">NPR</a>	IY	<a href="#">135-7634</a>	04	001	HOUSING GP-FLYWHEEL
	<a href="#">NPR</a>	IY	<a href="#">127-5728</a>	00	001	COVER GP-FLYWHEEL HOUSING
	<a href="#">NPR</a>	IY	<a href="#">135-8015</a>	00	001	PLUG GP-FLYWHEEL HOUSING
		I	PQ0207	01	001	PR FUEL FILTER/WATER SEP
		IY	<a href="#">212-9431</a>	00	001	FILTER GP-WATER SEP & FUEL
	<a href="#">NPR</a>	IY	<a href="#">237-4290</a>	02	001	LINES GP-FUEL FILTER
		I	PQ0210	00	001	AIR COMPRESSOR (BA-922)
	<a href="#">NPR</a>	IY	<a href="#">192-3219</a>	00	001	MANIFOLD GP-FUEL
	<a href="#">NPR</a>	IY	<a href="#">224-0875</a>	01	001	FITTING GP-WATER LINES
	<a href="#">NPR</a>	IY	<a href="#">232-5187</a>	00	001	AIR COMPRESSOR GP
	<a href="#">NPR</a>	IY	<a href="#">234-9775</a>	01	001	PLUG GP-ENGINE
	<a href="#">NPR</a>	IY	<a href="#">224-4501</a>	02	001	GOVERNOR GP-AIR COMPRESSOR
		I	PL4086	01	001	CLEANER GP-AIR
	<a href="#">NPR</a>	IY	<a href="#">141-0809</a>	01	001	AIR CLEANER GP
	<a href="#">NPR</a>	IY	<a href="#">232-6182</a>	00	001	PRECLEANER GP
	<a href="#">NPR</a>	IRY	<a href="#">197-8820</a>	01	001	ALTERNATOR GP-CHARGING
		I	PQ0211	03	001	ALTERNATOR MOUNTING RH
	<a href="#">NPR</a>	IY	<a href="#">135-5077</a>	00	001	MOUNTING GP-ALTERNATOR
	<a href="#">NPR</a>	IY	<a href="#">135-6940</a>	00	001	FASTENER GP-ALTERNATOR
		I	PA6452	03	001	FAN DRIVE .681 RATIO
	<a href="#">NPR</a>	IY	<a href="#">120-4231</a>	03	001	DRIVE GP-FAN
		I	PA7160	07	001	COOLANT LEVEL SENSOR
	<a href="#">NPR</a>	IY	<a href="#">165-6634</a>	02	001	SENSOR GP-COOLANT LEVEL
	<a href="#">NPR</a>	IY	<a href="#">257-7276</a>	00	001	CONNECTION GP-EXHAUST
	<a href="#">NPR</a>	IY	<a href="#">6L-2927</a>	08	001	ELBOW GP-EXHAUST
		I	PQ0495	00	001	FLYWHEEL ADAPTER -SAE NO. 1
	<a href="#">NPR</a>	IY	<a href="#">148-8808</a>	01	001	ADAPTER GP-FLYWHEEL
		I	PQ0221	00	001	LINES GP-FUEL FILTER (LH UPPER
	<a href="#">NPR</a>	IY	<a href="#">255-0656</a>	01	001	LINES GP-FUEL FILTER
		I	PA7677	04	001	CONTROL 24V

	I	195-0126	01	001	DIAGRAM-WIRING
	<a href="#">NPR</a>	IY <a href="#">195-0131</a>	00	001	WIRING GP-ENGINE
	<a href="#">NPR</a>	IY <a href="#">195-1345</a>	00	001	CONTROL GP-AUTO START/STOP
	I	PA7954	03	001	PAN GP-OIL-DEEP SUMP
	<a href="#">NPR</a>	IY <a href="#">4N-1128</a>	14	001	LINES GP-ENGINE OIL
	<a href="#">NPR</a>	IY <a href="#">4W-1873</a>	07	001	PAN GP-OIL
	I	215-3129	00	001	PLATE & FILM GP
	<a href="#">NPR</a>	IY <a href="#">163-1383</a>	00	001	DRAIN GP-ENGINE OIL
	I	PA7959	01	001	GAGE GP-OIL LEVEL
	<a href="#">NPR</a>	IY <a href="#">7W-3603</a>	03	001	GAUGE GP-OIL LEVEL (DIPSTICK)
	I	PA6450	06	001	OIL FILLER
	<a href="#">NPR</a>	IY <a href="#">110-8876</a>	00	001	FILLER GP-ENGINE OIL
	<a href="#">NPR</a>	IY <a href="#">120-9847</a>	00	001	COVER GP-FRONT HOUSING
	I	0P-9400		001	LUBRICATING OIL
	I	PA7641	01	001	ENGINE SUPPORTS
	<a href="#">NPR</a>	IY <a href="#">4N-4286</a>	05	001	SUPPORT GP-ENGINE
	<a href="#">NPR</a>	IY <a href="#">135-4326</a>	02	001	SUPPORT GP-ENGINE
	I	PA6445	02	001	ELECTRIC STARTING MOTOR 24V LH
	<a href="#">NPR</a>	IY <a href="#">120-9099</a>	02	001	STARTING MOTOR GP-ELECTRIC
	I	PQ0450	00	001	TRANSMISSION OIL COOLER
	<a href="#">NPR</a>	IY <a href="#">109-2374</a>	02	001	FASTENER GP-OIL COOLER
	<a href="#">NPR</a>	IY <a href="#">111-7303</a>	02	001	FLANGE GP-XMSN OIL COOLER
	<a href="#">NPR</a>	IY <a href="#">145-9276</a>	01	001	COVER GP-CYLINDER BLOCK
	<a href="#">NPR</a>	IY <a href="#">255-9249</a>	03	001	LINES GP-WATER
	I	0V-1060		001	END USE: PET INDUSTRIAL
	I	0V-1766		001	**OLD**PARTS BOOK-PAPER & ELEC
	I	0P-1852		001	STD ENGINE TEST CHARGE 3L0436
	I	PP5367	00	001	475 BHP (354 BKW) W/O FAN
	I	0K-4921		001	SETTING
					<b>SHIPPED LOOSE</b>
	S+	0V-1766		001	**OLD**PARTS BOOK-PAPER & ELEC
	<a href="#">NPR</a>	S 1M-3419		001	SEAL-O-RING
	<a href="#">NPR</a>	S 3E-7427		001	ADAPTER
	<a href="#">NPR</a>	S 5P-9074		001	WIRE-ELECTRICAL
	<a href="#">NPR</a>	S 7C-2644		001	CLIP
	<a href="#">NPR</a>	S 7E-4761		001	VALVE-DRAIN
	<a href="#">NPR</a>	S 7N-6114		001	BUSHING-PILOT
	<a href="#">NPR</a>	S 8C-3334		002	RIVET-TUBULAR
	<a href="#">NPR</a>	S 8C-6354		001	CAP-RECEPTACLE
	<a href="#">NPR</a>	S 8L-2786		001	SEAL-O-RING

	<a href="#">NPR</a>	S	8S-6823	001	HOOD AS
	<a href="#">NPR</a>	S	8S-6824	001	CLAMP AS
	<a href="#">NPR</a>	S	8T-8732	001	RECEPTACLE-CONNECTOR
	<a href="#">NPR</a>	S	8T-8736	001	RECEPTACLE-CONNECTOR
	<a href="#">NPR</a>	S	8T-8737	068	PLUG-SEAL
	<a href="#">NPR</a>	S	9W-0844	003	SOCKET-CONNECTOR
	<a href="#">NPR</a>	S	9W-0852	002	PIN-CONNECTOR
	<a href="#">NPR</a>	S	9Y-6089	001	GASKET
		S	SEBP3815	004	PTS BK 14007C2 (A)
		S	SEBU6251	001	LUBE 140019B2(A)
		S	SEBU7902	004	OMM 1400 (A)
		S	SELF5340	001	WARRANTY 140013C2(A)
		S	SERP3815	004	PTSCD 1400 (A)
		S	SMBU6981	001	SUPP
	<a href="#">NPR</a>	S	013-8307	012	BOLT-SOCKET HEAD
	<a href="#">NPR</a>	S	061-9458	002	SEAL-O-RING
	<a href="#">NPR</a>	S	113-3155	001	BODY
	<a href="#">NPR</a>	S	133-0967	001	PIN-CONNECTOR
	<a href="#">NPR</a>	S	133-0969	001	CONNECTOR-SOCKET
	<a href="#">NPR</a>	S	151-6320	002	TOOL-WIRE REMOVAL
	<a href="#">NPR</a>	S	160-7689	001	PLUG AS-CONNECTOR
	<a href="#">NPR</a>	S	165-6170	001	PLUG
	<a href="#">NPR</a>	SY	<a href="#">165-6634</a>	001	SENSOR GP-COOLANT LEVEL
	<a href="#">NPR</a>	S	180-9339	007	PIN-CONNECTOR
	<a href="#">NPR</a>	S	180-9340	069	SOCKET-CONNECTOR
		S+	195-0126	001	DIAGRAM-WIRING
	<a href="#">NPR</a>	SY	<a href="#">195-0131</a>	001	WIRING GP-ENGINE
	<a href="#">NPR</a>	SY	<a href="#">195-1345</a>	001	CONTROL GP-AUTO START/STOP