

3512 MARINE ENGINE

Engine Serial Prefix - 66Z (Build Date - 09/1998, Test Date - 09/1998, Ship Date - 09/1998)

▼ ENGINE - ENTIRE GROUP (66Z)

<u>Qty.</u>	<u>NPR</u>	<u>Note</u>	<u>Part No.</u>	<u>Change Level</u>	<u>Req. Qty</u>	<u>Part Name</u>
		I	PA2094	11	001	PART NUMBERS 3512 DITA MARINE ENG.-LOW S
	NPR	IRY	2W-8868	25	001	ENGINE AR
	NPR	IY	8N-9698	05	001	RAIL GP-ENGINE SUPPORT
	NPR	IY	8N-5678	06	001	DRIVE GP-ACCESSORY
	NPR	IY	5N-9304	04	001	WIRING GP-ENGINE
		I	5P-2506	00	001	LITERATURE GP
	NPR	IY	2W-0543	03	001	CONTROL GP-GOVERNOR
	NPR	IY	7E-3159	00	001	TACHOMETER GP-ELECTRIC
	NPR	IY	7N-1896	13	001	CONTACTOR GP
	NPR	IY	7W-9453	05	001	LINES GP-INSTRUMENT PANEL
	NPR	IY	4W-5310	04	001	MOUNTING GP-INSTRUMENT PANEL
	NPR	IY	4W-5309	09	001	PANEL GP-INSTRUMENT
	NPR	IY	2W-9593	05	001	METER GP-SERVICE
	NPR	IY	8N-9639	04	001	GUARD GP-DAMPER
	NPR	IY	7N-6782	07	001	INDICATOR GP-AIR FILTER CHANGE
	NPR	IY	7W-9265	01	001	LINES GP-INSTRUMENT PANEL
	NPR	IY	137-5553	01	001	SUPPORT GP-TURBOCHARGER
	NPR	IY	137-5554	01	001	AIR CLEANER GP
	NPR	IY	7N-4885	10	001	SWITCH GP-COOLANT LEVEL
		I	PA0969	02	001	KEEL COOLING - CONVERSION A
	NPR	IY	5N-2605	12	001	PUMP GP-AUXILIARY WATER
	NPR	IY	3N-2652	08	001	CONNECTION GP-EXPANSION TANK
	NPR	IY	5N-9527	01	001	FITTING GP-EXHAUST
		I	PA0939	09	001	FLANGE AND EXHAUST EXPANDER
	NPR	IY	7N-6967	05	001	FITTING GP-EXHAUST
	NPR	IY	2W-7871	02	001	FLANGE GP-EXHAUST
	NPR	IY	7W-9465	04	001	PUMP GP-FUEL PRIMING
	NPR	IY	5N-2438	05	001	LINES GP-FLEXIBLE FUEL
		I	PL4985	05	001	PILOT HOUSE INSTRUMENT PANE
	NPR	IY	5N-8282	05	001	PANEL GP-INSTRUMENT
	NPR	IY	7E-3156	00	001	TACHOMETER GP-ELECTRIC
	NPR	IY	9Y-7876	01	001	DRAIN GP-ENGINE OIL
		I	PA4090	00	001	SUMP PUMP - LH

	NPR	IY	3N-4868	05	001	HOSE AS
	NPR	IY	7N-7069	10	001	PUMP GP-SUMP
	NPR	IY	9Y-2179	01	001	LINES GP-SUMP
		I	PA5312	03	001	LUBRICATING OIL
	NPR	I	5P-2586	03	001	OIL
		I	PA1180	03	001	ELECTRIC SHUTOFF OS
	NPR	I	7W-9360	06	001	SHUTOFF AR-ELECTRICAL
	NPR	IY	7W-8053	03	001	SHUTOFF GP-ELECTRICAL
	NPR	IY	8N-8510	05	001	VALVE GP-EXPLOSION RELIEF
		I	PA3871	05	001	AIR OR GAS STARTING MOTOR RH
	NPR	IY	8N-8477	06	001	STARTING MOTOR GP-AIR
	NPR	IY	8N-8481	10	001	LINES GP-AIR STARTING
	NPR	IY	8N-8483	05	001	VALVE GP-AIR CONTROL
		I	LA0256	05	001	AIR START SILENCER
	NPR	IY	112-6597	02	001	SILENCER GP-AIR STARTING
	NPR	IY	8N-8490	11	001	CONTROL GP-AIR STARTING
		I	0P-7975		001	MARINE PRO. TORSIONAL ANALYSIS
		I	0P-1581		001	ABS ENGINE CERTIFICATION
		I	0P-9484		001	0P948401JUL98PRC PROPGM641-6
		I	PP3701	00	001	1207 BHP WOF 1200 RPM MARINE "
		I	2T-8632	00	001	900 KW @ 1200 RPM (1207 BHP)
						SHIPPED LOOSE
	NPR	S	0S-1571		012	BOLT
	NPR	S	0S-1588		004	BOLT
	NPR	S	0S-1591		008	BOLT
	NPR	S	1B-5355		012	NUT-FULL
	NPR	S	1B-5357		012	NUT-FULL
	NPR	SY	1L-2073		001	VALVE GP-PRESSURE REDUCING
	NPR	S	2D-7325		002	TEE-PIPE
	NPR	S	2W-7872		001	FLANGE-EXHAUST
	NPR	S	2W-7873		001	GASKET-EXHAUST
	NPR	S	3B-6555		001	ELBOW
	NPR	S	3L-8993		001	FITTING
	NPR	S	3N-4514		001	HOSE AS
	NPR	S	3N-6504		001	HOSE AS
		S	3N-6658		001	DIAGRAM-WIRING
	NPR	S	3P-6061		002	GASKET
	NPR	S	3V-3308		008	WASHER-HARD
	NPR	S	4M-5317		002	BUSHING-REDUCING
	NPR	S	5B-7666		001	ELBOW

	NPR	S	5F-5990	002	CLIP
	NPR	S	5L-3773	001	GASKET-EXHAUST ELBOW
	NPR	S	5L-4398	012	BOLT
	NPR	S	5L-7441	003	RESISTOR UNIT
	NPR	S	5L-7442	001	SENDING UNIT
	NPR	S	5L-7447	001	SHUNT
		S	5L-7535	001	SHEET-INSTRUMENT
	NPR	S	5M-2894	012	WASHER-HARD
		S	5N-5672	001	DIAGRAM-WIRING
	NPR	SY	5N-8282	001	PANEL GP-INSTRUMENT
		S	5N-8749	001	DIAGRAM-WIRING
	NPR	S	5N-9505	001	FITTING AS-EXHAUST
	NPR	S	5P-3422	001	TEE-PIPE
	NPR	S	5P-8245	024	WASHER-HARD
	NPR	S	6B-5072	001	BUSHING-REDUCING
	NPR	S	6B-9081	001	BUSHING-REDUCING
	NPR	SY	6F-5985	001	HOSE AS
		S	7C-1880	001	DIAGRAM WIRING
		S	7L-5393	001	TEMPLATE-PANEL
	NPR	S	7N-6959	001	ADAPTER
	NPR	S	7W-2118	001	SENDER-PRESSURE
	NPR	S	7X-2481	001	ADAPTER
	NPR	S	8N-1186	001	HOSE AS
	NPR	S	8N-2555	002	FILTER-SOOT
	NPR	S	8T-6762	001	PLUG-PIPE
	NPR	S	9G-8010	001	SWITCH AS-PRESSURE
	NPR	S	9L-9132	024	WASHER
	NPR	S	9S-8752	008	NUT-FULL
	NPR	S	9X-1116	001	TACHOMETER
	NPR	S	9X-1124	001	SENDER AS-PRESSURE
		S	SEBP1554	001	PTSBK
		S	SEBU6100	001	OWNMA
		S	SEBU6251	001	LUBE 1632-16 (A)
		S	SEBU6984	001	SUPP 140013B1(A)
		S	SELF5255	001	WARRANTY 140013C1(A)
		S	ESO	001	(PRNT ESO COPY)
		S	PML	001	*REQUIRED DECALS