

3516 INDUSTRIAL ENGINE

Engine Serial Prefix - 71Z (Build Date - 04/2001, Test Date - 05/2001, Ship Date - 05/2001)

▼ ENGINE - ENTIRE GROUP (71Z)

<u>Qty.</u>	<u>NPR</u>	<u>Note</u>	<u>Part No.</u>	<u>Change Level</u>	<u>Req. Qty</u>	<u>Part Name</u>
		I	LA3383	01	001	<b>PART NUMBERS</b> 3516 DITA LAND MECHANICAL ENG
	<a href="#">NPR</a>	IY	<a href="#">4W-0285</a>	25	001	ENGINE AR
	<a href="#">NPR</a>	IY	<a href="#">1W-3941</a>	03	001	LINES GP-OIL SUPPLY
	<a href="#">NPR</a>	IY	<a href="#">1W-4674</a>	03	001	PUMP GP-PRELUBRICATION
	<a href="#">NPR</a>	IY	<a href="#">1W-8109</a>	01	001	FASTENER GP-VALVE MECHANISM
	<a href="#">NPR</a>	IY	<a href="#">2W-0543</a>	03	001	CONTROL GP-GOVERNOR
	<a href="#">NPR</a>	IY	<a href="#">2W-5531</a>	00	001	SHUTOFF GP-MANUAL
	<a href="#">NPR</a>	IY	<a href="#">2W-7871</a>	02	001	FLANGE GP-EXHAUST
	<a href="#">NPR</a>	IY	<a href="#">2W-8810</a>	02	001	GAUGE GP-ENGINE OIL PRESSURE
	<a href="#">NPR</a>	IY	<a href="#">2W-8948</a>	15	001	FASTENER GP-WIRING HARNESS
	<a href="#">NPR</a>	I	2W-9593	05	001	METER GP-SERVICE
	<a href="#">NPR</a>	IY	<a href="#">3N-4416</a>	07	001	PYROMETER GP
		I	3N-8274	00	001	DIAGRAM-WIRING
	<a href="#">NPR</a>	IY	<a href="#">4W-2767</a>	00	001	CONTACTOR GP
	<a href="#">NPR</a>	IY	<a href="#">4W-3048</a>	06	001	SHUTOFF GP-AIR
	<a href="#">NPR</a>	IY	<a href="#">4W-5309</a>	09	001	PANEL GP-INSTRUMENT
	<a href="#">NPR</a>	IY	<a href="#">4W-5310</a>	04	001	MOUNTING GP-INSTRUMENT PANEL
	<a href="#">NPR</a>	IY	<a href="#">4W-6981</a>	05	001	SHUTOFF GP-HYDRAMECHANICAL
	<a href="#">NPR</a>	IY	<a href="#">4W-7078</a>	11	001	FILTER GP-ENGINE OIL
	<a href="#">NPR</a>	IY	<a href="#">4W-7212</a>	04	001	CONTROL GP-AIR STARTING
	<a href="#">NPR</a>	IY	<a href="#">5N-2457</a>	03	001	FITTING GP-EXHAUST
	<a href="#">NPR</a>	IY	<a href="#">5N-5880</a>	06	001	SHUTOFF GP-REMOTE
		I	5N-7558		001	NOTE - ASSEMBLY INSTRUCTIONS
	<a href="#">NPR</a>	IY	<a href="#">5N-8354</a>	05	001	LINES GP-AIR
		I	5P-2506	00	001	LITERATURE GP
	<a href="#">NPR</a>	IY	<a href="#">6I-1457</a>	03	001	LINES GP-FUEL
	<a href="#">NPR</a>	IY	<a href="#">7C-0182</a>	03	001	THERMOCOUPLE GP
	<a href="#">NPR</a>	IY	<a href="#">7C-1883</a>	19	001	HARNESS GP-WIRING
	<a href="#">NPR</a>	IY	<a href="#">7E-3159</a>	01	001	TACHOMETER GP-ELECTRIC
	<a href="#">NPR</a>	IY	<a href="#">7E-6469</a>	03	001	MOUNTING GP-CONTACTOR
	<a href="#">NPR</a>	IY	<a href="#">7N-6782</a>	08	001	INDICATOR GP-AIR FILTER CHANGE
	<a href="#">NPR</a>	IY	<a href="#">7N-6967</a>	05	001	FITTING GP-EXHAUST
	<a href="#">NPR</a>	IY	<a href="#">7W-3355</a>	05	001	SENSOR GP-SPEED

	<a href="#">NPR</a>	IY	<a href="#">7W-3724</a>	04	001	HOUSING GP-FRONT
	<a href="#">NPR</a>	IY	<a href="#">7W-9273</a>	02	001	LINES GP-INSTRUMENT PANEL
	<a href="#">NPR</a>	IY	<a href="#">7W-9452</a>	06	001	LINES GP-INSTRUMENT PANEL
	<a href="#">NPR</a>	IY	<a href="#">7W-9742</a>	09	001	FILTER GP-FUEL
	<a href="#">NPR</a>	IY	<a href="#">8N-6435</a>	02	001	FILTER GP-PRIMARY FUEL
	<a href="#">NPR</a>	IY	<a href="#">8N-6712</a>	13	001	GOVERNOR GP
	<a href="#">NPR</a>	IY	<a href="#">8N-8477</a>	08	001	STARTING MOTOR GP-AIR
	<a href="#">NPR</a>	IY	<a href="#">8N-8486</a>	04	001	SILENCER GP-AIR STARTING
	<a href="#">NPR</a>	IY	<a href="#">8N-8489</a>	10	001	LINES GP-AIR STARTING
	<a href="#">NPR</a>	IY	<a href="#">8N-9303</a>	08	001	AIR CLEANER GP
	<a href="#">NPR</a>	IY	<a href="#">8N-9639</a>	04	001	GUARD GP-DAMPER
	<a href="#">NPR</a>	IY	<a href="#">8N-9642</a>	07	001	COVER GP-FRONT HOUSING
	<a href="#">NPR</a>	IY	<a href="#">9Y-0851</a>	00	001	RAIL GP-ENGINE SUPPORT
	<a href="#">NPR</a>	IY	<a href="#">107-0166</a>	00	001	PUMP GP-FUEL PRIMING
	<a href="#">NPR</a>	IY	<a href="#">5L-6954</a>	04	001	ELBOW-EXHAUST
	<a href="#">NPR</a>	I	8Q-0549	00	001	MUFFLER GP
	<a href="#">NPR</a>	IY	<a href="#">127-8526</a>	00	001	RADIATOR GP
	<a href="#">NPR</a>	IY	<a href="#">7W-5639</a>	03	001	FAN GP-BLOWER
	<a href="#">NPR</a>	IY	<a href="#">7W-3952</a>	09	001	DRIVE GP-FAN
	<a href="#">NPR</a>	IY	<a href="#">7W-5225</a>	00	001	PULLEY GP-FAN DRIVE
		I	LA0183	04	001	FUMES DISPOSAL
	<a href="#">NPR</a>	IY	<a href="#">4W-0472</a>	04	001	FUMES DISPOSAL GP
	<a href="#">NPR</a>	IY	<a href="#">9Y-5563</a>	02	001	FUMES DISPOSAL GP
	<a href="#">NPR</a>	IY	<a href="#">7E-6681</a>	04	001	COOLER GP-FUEL
	<a href="#">NPR</a>	IY	<a href="#">7N-6527</a>	06	001	CONNECTION GP-TORQUE CONV CLR
	<a href="#">NPR</a>	I	7E-9267	02	001	SWITCH GP-COOLANT LEVEL
		I	0V-1060		001	END USE: PETROLEUM IND
		I	0P-1852		001	STD ENGINE TEST CHARGE 3L0436
		I	0P-8707		001	CQ30842-1_____QUOTE NO.
		I	5Z-3333	00	001	***SPECIAL SETTING REQUEST****
		I	PP3570	00	001	1400 BHP WOF 1200 RPM OIL FIEL
		I	2T-8403	00	001	1044 KW @ 1200 RPM (1400 BHP)
						<b>SHIPPED LOOSE</b>
	<a href="#">NPR</a>	S	0S-1571		012	BOLT
	<a href="#">NPR</a>	S	0S-1588		008	BOLT
	<a href="#">NPR</a>	S	0S-1591		008	BOLT
	<a href="#">NPR</a>	S	0S-1594		008	BOLT
	<a href="#">NPR</a>	S	1A-1460		006	BOLT
	<a href="#">NPR</a>	S	1B-5355		012	NUT-FULL
	<a href="#">NPR</a>	S	1B-5357		012	NUT-FULL

	<a href="#">NPR</a>	S	1H-7666	002	GASKET
	<a href="#">NPR</a>	S	1L-3769	001	RING-RETAINING
	<a href="#">NPR</a>	S	1S-5772	002	GASKET
	<a href="#">NPR</a>	S	1W-0531	001	BASE-PRIMARY FUEL FILTER
	<a href="#">NPR</a>	S	2H-3429	001	RING-RETAINING
	<a href="#">NPR</a>	S	2J-0157	001	SEAL-O-RING
	<a href="#">NPR</a>	S	2N-8928	004	CLIP
	<a href="#">NPR</a>	S	2W-7872	001	FLANGE-EXHAUST
	<a href="#">NPR</a>	S	2W-7873	001	GASKET-EXHAUST
	<a href="#">NPR</a>	SY	<a href="#">3N-2451</a>	004	JOINT AS-TUBE
	<a href="#">NPR</a>	S	3N-6504	001	HOSE AS
	<a href="#">NPR</a>	S	3V-3308	008	WASHER-HARD
	<a href="#">NPR</a>	S	4L-6454	022	BOLT
	<a href="#">NPR</a>	S	5L-3773	001	GASKET-EXHAUST ELBOW
	<a href="#">NPR</a>	S	5L-4398	012	BOLT
	<a href="#">NPR</a>	S	5L-6297	001	ADAPTER AS-FLEXIBLE
	<a href="#">NPR</a>	SY	<a href="#">5L-6954</a>	001	ELBOW-EXHAUST
	<a href="#">NPR</a>	S	5M-2894	008	WASHER-HARD
	<a href="#">NPR</a>	S	5P-0597	001	CLAMP-HOSE
	<a href="#">NPR</a>	S	5P-1075	022	WASHER-HARD
	<a href="#">NPR</a>	S	5P-1472	290	HOSE
	<a href="#">NPR</a>	S	5P-8245	024	WASHER-HARD
	<a href="#">NPR</a>	S	6F-5985	001	HOSE AS
	<a href="#">NPR</a>	S	6V-6866	002	PLUG
	<a href="#">NPR</a>	S	7D-3958	001	HOSE AS
	<a href="#">NPR</a>	S	7H-9678	001	RETAINER-ELEMENT
	<a href="#">NPR</a>	S	7N-1628	001	NUT
	<a href="#">NPR</a>	S	7N-6959	001	ADAPTER
	<a href="#">NPR</a>	S	7S-9323	001	SPRING
	<a href="#">NPR</a>	S	8H-2778	001	SEAL-RING
	<a href="#">NPR</a>	S	8H-7202	001	CASE AS-FUEL FILTER
	<a href="#">NPR</a>	S	8N-1663	001	BOOT
	<a href="#">NPR</a>	S	8N-2555	002	FILTER-SOOT
	<a href="#">NPR</a>	S	8N-8535	001	ORIFICE AS
	<a href="#">NPR</a>	S	8Q-0549	001	MUFFLER GP
	<a href="#">NPR</a>	S	8T-6762	001	PLUG-PIPE
	<a href="#">NPR</a>	S	8T-9001	001	JOINT AS-TUBE
	<a href="#">NPR</a>	S	9L-9132	024	WASHER
	<a href="#">NPR</a>	S	9M-2342	001	FILTER ELEMENT-FUEL
	<a href="#">NPR</a>	S	9S-8752	008	NUT-FULL

<input type="checkbox"/>	<a href="#">NPR</a>	S	9Y-7645	002	GUARD AS-FAN
<input type="checkbox"/>	<a href="#">NPR</a>	S	115-1783	001	SPIDER AS-FAN
<input type="checkbox"/>	<a href="#">NPR</a>	SY	<a href="#">127-8525</a>	001	RADIATOR GP
<input type="checkbox"/>		S	SEBP2968	001	PTSBK
<input type="checkbox"/>		S	SEBU6251	001	LUBE
<input type="checkbox"/>		S	SEBU6701	001	OMM
<input type="checkbox"/>		S	SEBU6984	001	SUPP
<input type="checkbox"/>		S	SELF5326	001	WARRANTY
<input type="checkbox"/>		S	ESO	001	(PRNT ESO COPY)
<input type="checkbox"/>		S	PML	001	*REQUIRED DECALS