

## 3512B MARINE AUXILIARY

Engine Serial Prefix - 8EM (Build Date - 08/2003, Test Date - 08/2003)

## ▼ ENGINE - ENTIRE GROUP (8EM)

<u>Qty.</u>	<u>NPR</u>	<u>Note</u>	<u>Part No.</u>	<u>Change Level</u>	<u>Req. Qty</u>	<u>Part Name</u>
						<b>FEATURE CODES</b>
<input type="checkbox"/>	<a href="#">NPR</a>	I	166-3471	F	001	PAN GP-OIL
<input type="checkbox"/>	<a href="#">NPR</a>	I	166-7363	F	001	MOUNTING GP-INSTRUMENT PANEL
<input type="checkbox"/>	<a href="#">NPR</a>	I	167-0870	F	001	CONTACTOR GP-OIL LEVEL
<input type="checkbox"/>	<a href="#">NPR</a>	IY	<a href="#">194-4169</a>	F	001	LINES GP-FUEL
<input type="checkbox"/>	<a href="#">NPR</a>	I	194-4173	F	001	SENSOR GP-TEMPERATURE
<input type="checkbox"/>	<a href="#">NPR</a>	I	197-5666	F	001	CONTACTOR GP-OIL PRESSURE
<input type="checkbox"/>	<a href="#">NPR</a>	I	207-7023	F	001	LINES GP-FUEL
<input type="checkbox"/>	<a href="#">NPR</a>	I	208-1638	F	001	PANEL GP-CONTROL
<input type="checkbox"/>	<a href="#">NPR</a>	I	208-9633	F	001	INSTALLATION GP-ENGINE
<input type="checkbox"/>	<a href="#">NPR</a>	I	217-2715	F	001	WIRING GP-ENGINE
<input type="checkbox"/>		I	219-5836	F	001	PACKAGING AR
<input type="checkbox"/>	<a href="#">NPR</a>	IY	<a href="#">220-2115</a>	F	001	ENGINE AR
<input type="checkbox"/>		I	LA0330	F	001	SEA WATER PUMP REMOVAL
<input type="checkbox"/>	<a href="#">NPR</a>	ILY	<a href="#">101-0836</a>	F	001	HOUSING GP-FLYWHEEL
<input type="checkbox"/>	<a href="#">NPR</a>	ILY	<a href="#">101-1247</a>	F	001	LINES GP-FUEL INJECTION
<input type="checkbox"/>	<a href="#">NPR</a>	ILY	<a href="#">107-2855</a>	F	001	MOUNTING GP-INSTRUMENT PANEL
<input type="checkbox"/>	<a href="#">NPR</a>	ILY	<a href="#">115-5164</a>	F	001	BOX & MOUNTING GP
<input type="checkbox"/>	<a href="#">NPR</a>	ILRY	<a href="#">174-4947</a>	F	001	ENGINE AR
<input type="checkbox"/>	<a href="#">NPR</a>	I	134-6315	F	001	WIRING GP-PANEL
<input type="checkbox"/>		I	512DA02	F	001	3512B DITA MARINE AUX ENGINE
<input type="checkbox"/>		I	EPTMRWH	F	001	MATTERHORN WHITE PAINT
<input type="checkbox"/>		I	DPX0001	F	001	DOMESTIC PACK-EXPORT CONTAINER
<input type="checkbox"/>		I	MSMARAX	F	001	MARINE AUXILIARY COMMERCIAL
<input type="checkbox"/>		I	3512BMA	F	001	3512B IMO CERTIFIED ENGINE
<input type="checkbox"/>		I	1800RPM	F	001	1800 RPM
<input type="checkbox"/>		I	CSTHEXC	F	001	HEAT EXCHANGER COOLED
<input type="checkbox"/>		I	NOMREQD	F	001	MSC CERTIFICATION NOT REQUIRED
						<b>PART NUMBERS</b>
<input type="checkbox"/>	<a href="#">NPR</a>	IY	<a href="#">101-1269</a>	02	001	HOUSING GP-FLYWHEEL
<input type="checkbox"/>	<a href="#">NPR</a>	IY	<a href="#">115-1062</a>	03	001	PUMP GP-FUEL PRIMING
<input type="checkbox"/>	<a href="#">NPR</a>	IY	<a href="#">120-4498</a>	02	012	THERMOCOUPLE GP
<input type="checkbox"/>	<a href="#">NPR</a>	IY	<a href="#">120-4501</a>	09	001	FILTER GP-ENGINE OIL
<input type="checkbox"/>	<a href="#">NPR</a>	IY	<a href="#">121-0470</a>	10	001	FILTER GP-FUEL

	<a href="#">NPR</a>	I	122-0289	00	001	HOSE AS
	<a href="#">NPR</a>	I	132-3802	04	001	WIRING GP-ENGINE
		I	145-3210	01	001	PRESERVATION GP
	<a href="#">NPR</a>	I	165-3804	03	001	STARTING MOTOR GP-AIR
	<a href="#">NPR</a>	I	165-7297	03	001	BARRING & MOUNTING GP
	<a href="#">NPR</a>	I	166-7256	04	001	LINES GP-ENGINE OIL
	<a href="#">NPR</a>	I	166-7707	00	001	ADAPTER GP-FLYWHEEL
	<a href="#">NPR</a>	I	167-0872	02	001	CONNECTION GP-PRELUBRICATION
	<a href="#">NPR</a>	IY	<a href="#">194-4170</a>	01	001	CONTROL & MTG GP-ENGINE ELEK
	<a href="#">NPR</a>	I	194-4176	03	001	SENSOR & MTG GP-PRESSURE
	<a href="#">NPR</a>	I	198-0319	04	001	SENSOR & MTG GP-PRESSURE
	<a href="#">NPR</a>	I	208-1609	02	001	LINES GP-AIR STARTING
	<a href="#">NPR</a>	I	208-1642	02	001	MOUNTING GP-CONTROL PANEL
	<a href="#">NPR</a>	IY	<a href="#">212-1558</a>	03	001	CONVERSION GP-WIRING
	<a href="#">NPR</a>	I	218-5112	00	001	WIRING GP
		I	220-1711	00	001	MTG GP-PAN
	<a href="#">NPR</a>	IY	<a href="#">225-7835</a>	03	001	SHUTOFF GP-AIR
		I	0P-7578		001	SHRINK WRAP PROTECTION - 3512
		I	0P-8707		001	CQ30842-1_____QUOTE NO.
		I	3L-0436		001	CHART-SPECIFICATION
	<a href="#">NPR</a>	IY	<a href="#">4P-5767</a>	02	001	SEPARATOR GP-AIR
	<a href="#">NPR</a>	IY	<a href="#">7W-5848</a>	03	001	CONNECTION GP-WATER
	<a href="#">NPR</a>	IY	<a href="#">8N-8510</a>	16	001	VALVE GP-EXPLOSION RELIEF
		I	8Q-9795	00	001	PACKAGING AR
		I	LA0340	07	001	LOAD SHARE MODULE
	<a href="#">NPR</a>	IY	<a href="#">161-0797</a>	01	001	CONTROL AS-GOVERNOR
		I	LA0573	05	001	CHARGING ALTERNATOR 24V 60 AMP
	<a href="#">NPR</a>	IY	<a href="#">7E-2858</a>	02	001	ALTERNATOR GP-CHARGING
	<a href="#">NPR</a>	IY	<a href="#">7E-4836</a>	08	001	MOUNTING GP-ALTERNATOR
	<a href="#">NPR</a>	IY	<a href="#">7W-5780</a>	04	001	GUARD GP-BELT
	<a href="#">NPR</a>	IY	<a href="#">107-7361</a>	03	001	DRIVE GP-ACCESSORY
	<a href="#">NPR</a>	IY	<a href="#">134-6317</a>	00	001	WIRING GP-PANEL
		I	LL8157	00	001	1509 BHP MARINE AUX IMO CERT.
		I	0K-3621		001	SETTING
	<a href="#">NPR</a>	ILY	<a href="#">101-1172</a>	03	001	CONTROL & MTG GP-ENGINE ELEK
	<a href="#">NPR</a>	ILY	<a href="#">126-7157</a>	10	001	BOX GP-INSTRUMENT PANEL
	<a href="#">NPR</a>	ILY	<a href="#">134-0083</a>	06	001	WIRING GP-ENGINE
	<a href="#">NPR</a>	ILY	<a href="#">7C-9938</a>	06	001	PAN GP-OIL
	<a href="#">NPR</a>	ILY	<a href="#">9Y-0848</a>	02	001	RAIL GP-ENGINE SUPPORT
		I	LA3303	02	001	3512B DITA SCAC MARINE AUX

<input type="checkbox"/>	<a href="#">NPR</a>	IY	<a href="#">4P-0558</a>	02	001	AIR CLEANER GP
<input type="checkbox"/>		I	5N-9635		001	CONVENIENCE NUM
<input type="checkbox"/>		I	5P-2506	00	001	LITERATURE GP
<input type="checkbox"/>	<a href="#">NPR</a>	IY	<a href="#">8N-9639</a>	04	001	GUARD GP-DAMPER
<input type="checkbox"/>	<a href="#">NPR</a>	I	115-3634	01	001	FILTER-SOOT
<input type="checkbox"/>	<a href="#">NPR</a>	IY	<a href="#">162-7687</a>	03	001	MOUNTING GP-AIR CLEANER
<input type="checkbox"/>	<a href="#">NPR</a>	IY	<a href="#">163-1462</a>	00	001	SENSOR & MTG GP-ELECTRIC
<input type="checkbox"/>		I	5N-9949		001	CONVENIENCE NUMB
<input type="checkbox"/>		I	0P-9606		001	PAINT WHITE
<input type="checkbox"/>		I	0P-7824		001	DOMESTIC PACK-EXPORT CONTAINER
<input type="checkbox"/>		I	0V-1050		001	MARINE AUXILIARY COMMERCIAL
						<b>SHIPPED LOOSE</b>
<input type="checkbox"/>	<a href="#">NPR</a>	S	0L-1351		002	BOLT
<input type="checkbox"/>	<a href="#">NPR</a>	S	0S-1588		004	BOLT
<input type="checkbox"/>	<a href="#">NPR</a>	S	0S-1590		008	BOLT
<input type="checkbox"/>	<a href="#">NPR</a>	S	0S-1608		018	BOLT
<input type="checkbox"/>	<a href="#">NPR</a>	S	1A-1460		038	BOLT
<input type="checkbox"/>	<a href="#">NPR</a>	S	1A-2029		012	BOLT
<input type="checkbox"/>	<a href="#">NPR</a>	S	1D-4709		028	BOLT
<input type="checkbox"/>	<a href="#">NPR</a>	SY	<a href="#">1L-2073</a>		001	VALVE GP-PRESSURE REDUCING
<input type="checkbox"/>	<a href="#">NPR</a>	S	1S-5772		002	GASKET
<input type="checkbox"/>	<a href="#">NPR</a>	S	2A-4639		018	BOLT
<input type="checkbox"/>	<a href="#">NPR</a>	S	2K-4973		018	LOCKNUT
<input type="checkbox"/>	<a href="#">NPR</a>	S	2W-2072		001	SEAL-O-RING
<input type="checkbox"/>	<a href="#">NPR</a>	S	3J-7354		003	SEAL-O-RING
<input type="checkbox"/>	<a href="#">NPR</a>	S	3L-8993		001	FITTING
<input type="checkbox"/>	<a href="#">NPR</a>	S	3P-0654		001	SEAL-O-RING
<input type="checkbox"/>	<a href="#">NPR</a>	S	3V-3308		016	WASHER-HARD
<input type="checkbox"/>	<a href="#">NPR</a>	S	4D-3704		012	WASHER-HARD
<input type="checkbox"/>	<a href="#">NPR</a>	SY	<a href="#">4P-0558</a>		002	AIR CLEANER GP
<input type="checkbox"/>	<a href="#">NPR</a>	S	4P-5295		001	SEPARATOR AS-AIR
<input type="checkbox"/>	<a href="#">NPR</a>	S	5B-7666		001	ELBOW
<input type="checkbox"/>	<a href="#">NPR</a>	S	5L-3773		001	GASKET-EXHAUST ELBOW
<input type="checkbox"/>	<a href="#">NPR</a>	S	5M-2894		014	WASHER-HARD
<input type="checkbox"/>	<a href="#">NPR</a>	S	5P-3860		002	CLAMP-HOSE
<input type="checkbox"/>	<a href="#">NPR</a>	S	5P-4869		002	CLAMP-HOSE
<input type="checkbox"/>	<a href="#">NPR</a>	S	5P-7818		001	SEAL-O-RING
<input type="checkbox"/>	<a href="#">NPR</a>	S	5P-8245		038	WASHER-HARD
<input type="checkbox"/>	<a href="#">NPR</a>	S	5P-8250		028	WASHER
<input type="checkbox"/>	<a href="#">NPR</a>	S	5T-4385		001	HOSE AS

	<a href="#">NPR</a>	S	5T-6308	001	HOSE AS
	<a href="#">NPR</a>	S	6G-9581	001	HOSE AS
	<a href="#">NPR</a>	S	6K-1972	001	ELBOW-FLARED
	<a href="#">NPR</a>	S	6V-5101	001	SEAL-O-RING
	<a href="#">NPR</a>	S	6V-8801	016	NUT
	<a href="#">NPR</a>	S	7E-2630	001	GASKET-OIL PAN
	<a href="#">NPR</a>	S	7N-7009	002	FLANGE
	<a href="#">NPR</a>	S	7W-0129	001	FLANGE
	<a href="#">NPR</a>	S	8N-5254	002	HOSE-REDUCER
	<a href="#">NPR</a>	S	8N-9992	001	COVER-CAMSHAFT
	<a href="#">NPR</a>	S	8T-4896	032	WASHER-HARD
	<a href="#">NPR</a>	S	8T-6762	001	PLUG-PIPE
	<a href="#">NPR</a>	S	8T-8730	032	SOCKET-CONNECTOR
	<a href="#">NPR</a>	S	8T-9377	016	BOLT
	<a href="#">NPR</a>	S	9S-8752	008	NUT-FULL
	<a href="#">NPR</a>	S	9X-8880	012	BOLT
	<a href="#">NPR</a>	S	030-7946	003	ELBOW
	<a href="#">NPR</a>	S	115-3634	002	FILTER-SOOT
	<a href="#">NPR</a>	S	122-0289	001	HOSE AS
	<a href="#">NPR</a>	S	155-2270	016	KIT-CONNECTING PLUG
	<a href="#">NPR</a>	SY	<a href="#">161-0797</a>	001	CONTROL AS-GOVERNOR
	<a href="#">NPR</a>	S	162-7689	001	SUPPORT AS
	<a href="#">NPR</a>	S	166-7259	001	CONNECTOR
	<a href="#">NPR</a>	S	167-7500	001	ADAPTER
	<a href="#">NPR</a>	S	208-9538	002	HOSE AS
		S	LEXM0051	001	TECHNICAL DOC.
		S	SEBU6251	001	LUBE
		S	SEBU6916	001	OMM
		S	SEBU6984	001	SUPP
		S	SELF5345	001	WARRANTY
		S	SELS0086	001	S.I.
		S	SERP2446	001	PTSCD
		S	ESO	001	(PRNT ESO COPY)
		S	PML	001	*REQUIRED DECALS