

G3306 GAS ENGINE

Engine Serial Prefix - G6X (Build Date - 08/2008, Test Date - 08/2008)

▼ ENGINE - ENTIRE GROUP (G6X)

| <u>Qty.</u> | <u>NPR</u> | <u>Note</u> | <u>Part No.</u> | <u>Change Level</u> | <u>Req. Qty</u> | <u>Part Name</u> |
|-------------|---------------------|-------------|--------------------------|---------------------|-----------------|--------------------------------|
| | | | | | | FEATURE CODES |
| | | I | 306GI04 | F | 001 | G3306 TA IND 8:1 1800RPM |
| | | I | HEXEXTE | F | 001 | HEAT EXCHANGER + EXP TANK |
| | | I | CNPLC01 | F | 001 | POS LOCK GOV CONTROL LH |
| | | S | EXCFF08 | F | 001 | FLEXIBLE FITTING - 18" LENGTH |
| | | I | LPGCV01 | F | 001 | LOW PRESSURE GAS CONVERSION 01 |
| | | I | SOASS01 | F | 001 | AUTO S. S. SHUTOFF OP/WT |
| | | I | ASMRHA1 | F | 001 | AIR OR GAS STARTING MOTOR RH |
| | | S | APRAG04 | F | 001 | AIR PRESSURE REGULATOR |
| | | S | AIRSI01 | F | 001 | AIR START SILENCER |
| | | S | GIPDT13 | F | 001 | DIGITAL TACHOMETER -SHIP LOOSE |
| | | I | GIPLH02 | F | 001 | INSTRUMENT PANEL LH |
| | | I | LUBOIL8 | F | 001 | LUBRICATING OIL |
| | | I | EXPTTAG | F | 001 | EXPORT TAG |
| | | I | HPW0203 | F | 001 | 203 BHP @1800 RPM (54 DEG AC) |
| | | I | MSPETGC | F | 001 | PETRO GAS COMPRESSION |
| | | I | SWP0016 | F | 001 | SHRINK WRAP PROTECTION - 3306 |
| | | I | DPX0001 | F | 001 | DOMESTIC PACK-EXPORT CONTAINER |
| | | I | MWCODEC | F | 001 | COMPRESSOR |
| | | I | MSCP40 | F | 001 | COMPRESSION |
| | | I | SET3360 | F | 001 | 203 BHP @ 1800 RPM IND |
| | | I | COMRA01 | F | 001 | 8:1 COMPRESSION RATIO |
| | | I | EMISS01 | F | 001 | STANDARD EMISSION LEVEL |
| | | I | INDLAPL | F | 001 | INDUSTRIAL APPLICATION |
| | | I | NONNSPS | F | 001 | NSPS NON-COMPLIANT ENG |
| | | | SOVCU01 | F | 001 | CUST. SUPPLIED SHUT OFF VALVE |
| | | | | | | PART NUMBERS |
| | | I | LA3698 | 02 | 001 | G3306 TA INDUSTRIAL 8:1 RATIO |
| | NPR | IY | 222-9040 | 00 | 001 | ENGINE AR |
| | NPR | IY | 1N-4187 | 16 | 001 | MANIFOLD GP-EXHAUST |
| | NPR | IY | 1N-4874 | 09 | 001 | FUMES DISPOSAL GP |
| | NPR | IY | 1W-5122 | 00 | 001 | SUPPORT GP-ENGINE |
| | NPR | IY | 3N-6695 | 02 | 001 | SUPPORT GP-ENGINE |
| | NPR | IY | 5L-7661 | 14 | 001 | ELBOW GP-EXHAUST |

| | | | | | |
|---------------------|----|--------------------------|----|-----|------------------------------|
| | S | 5P-2506 | 00 | 001 | LITERATURE GP |
| NPR | IY | 7N-4137 | 02 | 001 | FLYWHEEL GP |
| NPR | IY | 7N-4312 | 02 | 001 | INDICATOR GP-TIMING |
| NPR | IY | 7N-6107 | 09 | 001 | CONTROL GP-CARBURETOR |
| NPR | IY | 7N-6109 | 03 | 001 | PUMP GP-AUXILIARY WATER |
| NPR | IY | 7N-6110 | 03 | 001 | DRIVE GP-ACCESSORY |
| NPR | IY | 7N-9261 | 00 | 001 | METER GP-SERVICE |
| NPR | I | 103-0003 | 01 | 001 | PLATE & FILM GP |
| NPR | I | 107-3211 | 04 | 001 | COVER GP-SHIPPING |
| NPR | IY | 230-2608 | 01 | 001 | GOVERNOR AS |
| NPR | IY | 234-4357 | 01 | 001 | MOUNTING GP-GOVERNOR CONTROL |
| NPR | IY | 256-6746 | 03 | 001 | LINES GP-WATER |
| | I | LA1460 | 00 | 001 | AFTERCOOLER |
| NPR | IY | 6N-5960 | 14 | 001 | AFTERCOOLER GP-WATER |
| | I | PL4199 | 10 | 001 | HEAT EXCHANGER & EXP. TANK |
| NPR | IY | 7C-9216 | 02 | 001 | HOUSING & REGULATOR GP |
| NPR | IY | 8N-4252 | 07 | 001 | PUMP GP-WATER |
| NPR | IY | 107-7286 | 02 | 001 | TANK GP-EXPANSION |
| NPR | IY | 107-7287 | 00 | 001 | HEAT EXCHANGER GP-SEA WATER |
| NPR | IY | 4N-3835 | 02 | 001 | CONTROL GP-GOVERNOR |
| NPR | SY | 2W-7846 | 02 | 001 | FITTING GP-EXHAUST |
| | I | LA2572 | 03 | 001 | LOW PRESSURE GAS CONVERSION |
| NPR | IY | 130-3953 | 06 | 001 | TURBOCHARGER GP |
| NPR | IY | 132-1152 | 01 | 001 | REGULATOR GP-GAS PRESSURE |
| NPR | IY | 132-1163 | 03 | 001 | CARBURETOR GP |
| NPR | IY | 132-1166 | 04 | 001 | AIR CLEANER GP |
| NPR | IY | 132-1167 | 00 | 001 | MOUNTING GP-AIR CLEANER |
| NPR | IY | 132-1240 | 00 | 001 | LINES GP-AIR |
| | I | PA4800 | 03 | 001 | AUTO S.S. SHUTOFF OP/WT |
| NPR | IY | 103-0699 | 03 | 001 | WIRING GP-ENGINE |
| NPR | IY | 6I-3975 | 01 | 001 | SHUTOFF GP-ELECTRICAL |
| NPR | IY | 7W-9654 | 02 | 001 | STARTING MOTOR GP-AIR |
| NPR | SY | 1L-5011 | 06 | 001 | VALVE GP-AIR STARTING |
| NPR | SY | 2W-3560 | 02 | 001 | SILENCER GP-AIR STARTING |
| NPR | IY | 107-2394 | 05 | 001 | IGNITION GP-GAS ENGINE |
| NPR | IY | 111-9843 | 01 | 001 | WIRING GP-ENGINE |
| NPR | SY | 7E-3157 | 04 | 001 | TACHOMETER GP-ELECTRIC |
| NPR | IY | 112-4443 | 04 | 001 | PANEL GP-INSTRUMENT |
| | I | PA5047 | 01 | 001 | LUBRICATING OIL |
| NPR | I | 283-0781 | 00 | 048 | OIL |

| | | | | | |
|---------------------|----|-------------------------|----|-----|--|
| | I | 0V-3364 | | 001 | EXPORT TAG |
| | I | 0V-1898 | | 001 | PETRO GAS COMPRESSION |
| | I | 0P-7573 | | 001 | SHRINK WRAP PROTECTION - 3306 |
| | I | 0P-7824 | | 001 | DOMESTIC PACK-EXPORT CONTAINER |
| | I | LL0441 | 00 | 001 | 203 BHP @ 1800 RPM IND |
| | I | 0K-6087 | | 001 | 151 BKW (203 BHP) @ 1800 RPM SHIPPED LOOSE |
| | S | | | 001 | |
| | S | ESO | | 001 | (PRNT ESO COPY) |
| | S | PML | | 001 | *REQUIRED DECALS |
| NPR | S | 1B-5358 | | 004 | NUT-FULL |
| NPR | SY | 1L-5011 | | 001 | VALVE GP-AIR STARTING |
| NPR | S | 1S-9937 | | 001 | CAP AS-AIR CLEANER |
| NPR | SY | 2W-3560 | | 001 | SILENCER GP-AIR STARTING |
| NPR | SY | 2W-7846 | | 001 | FITTING GP-EXHAUST |
| NPR | S | 3N-3015 | | 001 | ADAPTER AS |
| NPR | S | 5L-8484 | | 001 | GASKET |
| | S | 5P-2506 | | 001 | LITERATURE GP |
| NPR | S | 5P-3860 | | 001 | CLAMP-HOSE |
| NPR | S | 5P-8247 | | 008 | WASHER-HARD |
| | SY | 6L-4502 | | 001 | CHART-PLATE & FILM |
| NPR | S | 6L-4757 | | 002 | HOSE |
| NPR | S | 6L-6790 | | 001 | TUBE-EXTENSION |
| NPR | SY | 7E-3157 | | 001 | TACHOMETER GP-ELECTRIC |
| NPR | S | 8S-9092 | | 004 | BOLT |