

3512 GEN SET ENGINE

Engine Serial Number Prefix- 67Z (Build Date - 10/06/2099, Test Date - 12/06/2099, Ship Date - unknown)

ENGINE - ENTIRE GROUP Prefix (67Z)

Qty.	NPR	Note	Part No.	Change
Level	Req.			
Qty			Part Name	

FEATURE CODES

I			KW01000	F	001	1000 EKW W/FAN
I			512DE47	F	001	3512 1000 EKW 60 HZ PGS-PRIME
I			EMCENGU	F	001	ENGLISH DISPLAY UNITS
I			EMCSM02	F	001	SYNCHRONIZING MODULE
I			GOVLS01	F	001	2301A LOAD SHARING GOVERNOR
I			SHREL01	F	001	SPACE HEATER RELAY
I			OPTDS01	F	001	DEEP SUMP OIL PAN
I			VIBIS05	F	001	VIBRATION ISOLATORS
I			VIBIS07	F	001	VIBRATION ISOLATORS - RADIATOR
I			EXCFF12	F	001	FLEXIBLE FITTING
I			EXCEL10	F	001	ELBOW, 254 MM (10 IN)
I			EXCFE03	F	001	FLANGE AND EXHAUST EXPANDER
I			MUF0010	F	001	MUFFLER
I			PYRTC02	F	001	PYROMETER AND THERMOCOUPLES
I			PFF0001	F	001	PRIMARY FUEL FILTER
I			FUMDIS2	F	001	FUMES DISPOSAL

I	OSAMVL1	F	001	OIL SAMPLING VALVE
I	SPMPRH2	F	001	SUMP PUMP RH
I	EXRVAL1	F	001	EXPLOSION RELIEF VALVE
I	BAT2418	F	001	24 VOLT BATTERY SET - DRY
I	BTRCBL1	F	001	BATTERY CABLES
I	BTR0001	F	001	BATTERY RACK
I	ALT2448	F	001	CHARGING ALTERNATOR 24V 60 AMP
I	BARGP01	F	001	ENGINE BARRING GROUP
I	EMCDP02	F	001	DUST-PROOF CONTROL PANEL
I	FPPRH01	F	001	FUEL PRIMING PMP RH MOUNTED
I	RRM0021	F	001	RADIATOR REMOVAL 72/25, 0.455
I	EMCCIM1	F	001	CUSTOMER INTERFACE MODULE-CIM
I	60H-0480	F	001	60HZ 480 VOLTS
I	SWP0002	F	001	SHRINK WRAP PROTECTION - 3512
I	LITENGE	F	001	EXTRA ENGLISH LITERATURE
I	3512MUI	F	001	3512 DIESEL ENGINE
I	60HERTZ	F	001	60 HERTZ
I	PRIMEPA	F	001	PRIME POWER APPLICATION
I	1200RPM	F	001	1200 RPM
I	EMCPTWO	F	001	ELECTRONIC MODULAR CONTROL PNL
I	XLLENGL	F	001	EXTRA ENGLISH LITERATURE
I	NORAD F	001	001	NO RADIATOR

PART NUMBERS

I	PP3821	00	001	1435 BHP 1025 GEN KW WOF 60 HZ
I	LA2451 02	001	001	3512 1000 EKW 60 HZ PGS-PRIME

NPR	IY	2W-8869	29	001	ENGINE AR
	I	3L-0432		001	TEST - PKG GEN SET (EMCP II
	I	3L-0467		001	TWO BEARING GEN ALIGNMENT-3500
NPR	IY	4P-7610	02	001	SENSOR GP-SPEED
NPR	IY	5N-2438	05	001	LINES GP-FLEXIBLE FUEL
	I	5N-7562	00	001	CHART
	I	5P-2506	00	001	LITERATURE GP
NPR	IY	7C-0526	01	001	STARTING MOTOR GP-ELECTRIC
NPR	IY	7N-6782	08	001	INDICATOR GP-AIR FILTER CHANGE
NPR	IY	7W-6669	01	001	GUARD GP-DAMPER
NPR	IY	8N-9302	08	001	AIR CLEANER GP
NPR	IY	8N-9639	04	001	GUARD GP-DAMPER
NPR	I	104-4704	03	001	MOUNTING GP-CONTROL PANEL
NPR	IY	104-6203	04	001	INSTALLATION AR-GENERATOR
NPR	IY	104-9727	04	001	MOUNTING GP-CONTACTOR
NPR	IY	105-7183	02	001	FASTENER GP-WIRING HARNESS
NPR	IY	108-5555	04	001	SWITCH GP-DISCONNECT
NPR	I	116-7142	02	001	RAIL GP-ENGINE SUPPORT
NPR	IY	120-4520	03	001	HARNESS AS-WIRING
NPR	IY	134-3241	01	001	SENSOR GP-TEMP & PRESS
NPR	IY	136-0991	04	001	PANEL GP-CONTROL
NPR	IY	141-1809	01	001	BOX GP-GENERATOR CONNECTION
NPR	IY	158-6416	01	001	GENERATOR AR
NPR	IY	121-8855	06	001	CONNECTION GP-ELECTRICAL
	I	3L-0456		001	PROCEDURE - DVR PROG AND TEST

NPR	IY	121-6202	06	001	REGULATOR GP-VOLTAGE
NPR	I	145-5138	00	001	WIRING GP-ELECTRONIC CONTROL
	I	121-4713	00	001	INSTRUCTIONS
NPR	IY	121-4710	03	001	MODULE GP-SYNCHRONIZING LIGHTS
	I	LA2044 00	001		2301A LOAD SHARING GOVERNOR
NPR	IY	131-5454	02	001	CONTROL AS-GOVERNOR
NPR	I	122-0335	02	001	RELAY GP
	I	PL3089 07	001		DEEP SUMP OIL PAN
NPR	IY	7C-9784	02	001	GAUGE GP-OIL LEVEL (DIPSTICK)
NPR	IY	7C-9938	06	001	PAN GP-OIL
NPR	IY	5N-8877	04	001	MOUNTING GP-ENGINE FLEXIBLE
NPR	IY	9Y-8234	03	001	MOUNTING GP-RADIATOR
NPR	IY	5N-2457	03	001	FITTING GP-EXHAUST
NPR	IY	5N-2458	03	001	ELBOW-EXHAUST
	I	PA0940	09	001	FITTING AR-EXHAUST(10 IN.PIPE)
NPR	IY	7N-6968	05	001	FITTING GP-EXHAUST
NPR	IY	7N-6962	05	001	FLANGE GP-EXHAUST
	I	PL5314 09	001		MUFFLER GP - (SIZE 10 MODUL
NPR	IY	2W-4075	04	001	MUFFLER
NPR	IY	2W-7866	00	001	FLANGE GP-EXHAUST
	I	PL3079 09	001		PYROMETER & THERMOCOUPLES
NPR	IY	3N-8276	01	001	PYROMETER GP
NPR	IY	5N-2126	02	001	CONNECTOR
NPR	IY	5N-9365	03	001	THERMOCOUPLE
NPR	IY	5N-9366	02	001	HARNESS AS-SENSOR

NPR	IY	7C-0182	00	001	THERMOCOUPLE GP
NPR	IY	158-4240	00	001	SWITCH AS-SELECTOR
NPR	IY	8N-6435	02	001	FILTER GP-PRIMARY FUEL
	I	LA0182 05	001		FUMES DISPOSAL
NPR	I	4W-3752	03	001	FUMES DISPOSAL GP
NPR	IY	9Y-5563	00	001	FUMES DISPOSAL GP
NPR	IY	147-3738	00	001	VALVE GP-FLUID SAMPLING
	I	PA1670	10	001	SUMP PUMP RH
NPR	IY	7W-9704	05	001	PUMP GP-SUMP
NPR	IY	3N-4868	05	001	HOSE AS
NPR	IY	8N-8510	06	001	VALVE GP-EXPLOSION RELIEF
	I	PA1788	09	001	24 VOLT BATTERY SET - DRY
NPR	IY	7L-7871	08	001	BATTERY GP
NPR	IY	7W-0825	01	001	CABLE GP-BATTERY
NPR	IY	3N-7056	00	001	SUPPORT GP-BATTERY
	I	PA3389	06	001	CHARGING ALTERNATOR 24V 60AM
NPR	IY	7E-2858	00	001	ALTERNATOR GP-CHARGING
NPR	IY	7E-4836	04	001	MOUNTING GP-ALTERNATOR
NPR	IY	7W-5780	04	001	GUARD GP-BELT
NPR	IY	105-3255	00	001	MOUNTING GP-CIRCUIT BREAKER
NPR	IY	5R-7425	01	001	BARRING GP
NPR	IY	103-8975	00	001	SEAL GP-ENCLOSURE
NPR	IY	7W-9465	04	001	PUMP GP-FUEL PRIMING
	I	LA1279 03	001		RADIATOR REMOVAL 72/25, 0.455
NPR	IY	9Y-6496	02	001	MODULE GP-INTERFACE

I	5N-9597		001	VOLTAGE INDICATOR - 480 VOLT
I	0P-7608		001	SHRINK WRAP PROTECTION - 3512
I	0P-9715		001	EXTRA LITERATURE-G.S. M/AUX
I	PP3821	00	001	1435 BHP 1025 GEN KW WOF 60 HZ
I	2T-8843	00	001	1070 KW @ 1200 RPM (1435 BHP)

SHIPPED LOOSE

NPR	S	0S-1571		008	BOLT
NPR	S	0S-1588		008	BOLT
NPR	S	0S-1591		008	BOLT
NPR	S	1B-5357		024	NUT-FULL
NPR	S	1L-3769		001	RING-RETAINING
NPR	S	1W-0531		001	BASE-PRIMARY FUEL FILTER
NPR	S	2H-3429		001	RING-RETAINING
NPR	S	2J-0157		001	SEAL-O-RING
NPR	S	2N-8928		004	CLIP
NPR	S	2V-7397		002	CABLE AS
NPR	SY	2W-4075		001	MUFFLER
NPR	S	2W-7867		002	FLANGE-EXHAUST
NPR	S	2W-7868		002	GASKET-EXHAUST
NPR	S	3E-3361		001	PLUG AS-CONNECTOR
NPR	S	3E-3362		001	WEDGE-PLUG LOCK
NPR	S	3K-1715		001	CABLE AS
NPR	S	3N-6504		001	HOSE AS
NPR	S	3N-7012		001	PYROMETER GP
NPR	S	3N-7054		001	SUPPORT AS-BATTERY

NPR	S	3N-7055	001	BOARD
	S	3N-8274	001	DIAGRAM-WIRING
NPR	S	3N-8278	002	ADAPTER-SENSOR
NPR	S	3V-3308	008	WASHER-HARD
NPR	S	3V-6785	001	CABLE AS
NPR	S	5F-5990	002	CLIP
NPR	S	5L-3773	001	GASKET-EXHAUST ELBOW
NPR	S	5L-4398	024	BOLT
NPR	S	5L-6297	001	ADAPTER AS-FLEXIBLE
NPR	S	5M-2894	012	WASHER-HARD
NPR	SY	5N-2458	001	ELBOW-EXHAUST
NPR	SY	5N-9365	002	THERMOCOUPLE
NPR	SY	5N-9366	012	HARNESS AS-SENSOR
NPR	S	5P-0597	001	CLAMP-HOSE
NPR	S	5P-1472	290	HOSE
NPR	S	5P-7197	008	WASHER
NPR	S	5P-8245	048	WASHER-HARD
NPR	S	6V-2687	002	SCREW-PAN HEAD
NPR	S	6V-6866	002	PLUG
NPR	S	7H-9678	001	RETAINER-ELEMENT
NPR	S	7N-1628	001	NUT
NPR	S	7N-5274	001	COVER AS-TERMINAL
NPR	S	7N-5971	001	ADAPTER
NPR	S	7N-6954	001	FLANGE
NPR	S	7N-6957	001	GASKET

NPR	S	7S-9323	001	SPRING
NPR	S	8H-2778	001	SEAL-RING
NPR	S	8H-7202	001	CASE AS-FUEL FILTER
NPR	S	8L-8413	004	STRAP-CABLE
NPR	S	8N-0869	001	COVER-TERMINAL
NPR	S	8N-1186	001	HOSE AS
NPR	S	8N-1663	001	BOOT
NPR	S	8N-1725	001	COVER AS-TERMINAL
NPR	S	8T-6762	001	PLUG-PIPE
NPR	S	8T-8730	002	SOCKET-CONNECTOR
NPR	S	9G-0003	004	COVER AS-TERMINAL
NPR	S	9G-0004	004	COVER AS-TERMINAL
NPR	S	9G-8909	001	COVER-TERMINAL
NPR	S	9M-2342	001	FILTER ELEMENT-FUEL
NPR	S	9S-8752	008	NUT-FULL
NPR	SY	9X-0203	001	MODULE GP-RELAY DRIVER
NPR	S	9X-9720	004	BATTERY
NPR	S	9Y-6497	001	BOARD AS-RELAY
	S	9Y-9892	001	INSTRUCTIONS
NPR	SY	131-5454	001	CONTROL AS-GOVERNOR
NPR	S	153-3864	008	MOUNT AS
NPR	S	153-3865	002	MOUNT AS
NPR	SY	158-4240	001	SWITCH AS-SELECTOR
NPR	S	171-6719	001	KIT-PARTS
NPR	SY	171-6721	001	KIT-PARTS

S	SEBP2414	002	PTSBK
S	SEBP2640	002	PTSBK
S	SEBP2922	002	PTSBK
S	SEBP2931	002	PTSBK
S	SEBU6042	002	SUPP
S	SEBU6251	002	LUBE 1632-16 (A)
S	SEBU6701	002	OMM
S	SEBU6918	002	OMM
S	SEBU6984	002	SUPP 140013B1(A)
S	SELF5260	002	NEW WARRANTY 1630-17 (A)
S	SELS0086	002	S.I.
S	SELS0115	001	S.I.
S	SELS0117	002	S.I.
S	SENR4794	002	SCHEMATIC
S	ESO	001	(PRNT ESO COPY)
S	PML	001	*REQUIRED DECALS

Key:

I Installed

Y Separate Illustration

S Shipped Loose