

I	BAT2401	F	001	24 VOLT BATTERY SET - DRY
I	BTRCBL1	F	001	BATTERY CABLES
I	BTR0001	F	001	BATTERY RACK
I	LUBOIL1	F	001	LUBRICATING OIL
I	FANPL03	F	001	FAN PULLEY 0.428 RATIO
I	SPMPRH3	F	001	SUMP PUMP RH
I	ALT2444	F	001	CHARGING ALTERNATOR 24V 60 AMP
I	60H-0480	F	001	60HZ 480 VOLTS
I	MSEPGGN	F	001	GENERAL EPG
I	3516B F	001	001	3516B DIESEL ENGINE
I	CERTIFD	F	001	CERTIFIED
I	60HERTZ	F	001	60 HERTZ
I	PRIMEPA	F	001	PRIME POWER APPLICATION
I	EMCPTWO	F	001	ELECTRONIC MODULAR CONTROL PNL
I	NORAD F	001	001	NO RADIATOR

PART NUMBERS

I	LL5191 01	001	001	2628 BHP 1825 GEN KW W/F 60 HZ	
NPR	IY	121-2479	01	001	SWITCH GP-COOLANT LEVEL
NPR	IY	7C-8790	00	001	GUARD GP-RADIATOR
NPR	I	4P-0559	00	001	AIR CLEANER GP
NPR	IY	6I-1043	03	001	MOUNTING GP-JACKET WTR HEATER
NPR	IY	6I-1044	07	001	MOUNTING GP-JACKET WTR HEATER
NPR	IY	7E-6248	06	002	HEATER GP-JACKET WATER
I	OP-9583		001	001	ENGINE RENTAL INVENTORY PLAN
I	LA3291 01	001	001	001	ENGINE AR-3516B-DITA-PKG GEN

NPR	IY	173-6942	00	001	ENGINE AR
	I	3L-0414		001	SINGLE BEARING GEN ALIGN-3500
	I	3L-0432		001	TEST - PKG GEN SET (EMCP II)
	I	3L-0456		001	PROCEDURE - DVR PROG AND TEST
NPR	IY	5N-2438	05	001	LINES GP-FLEXIBLE FUEL
	I	5P-2506	00	001	LITERATURE GP
NPR	IY	7N-6782	08	001	INDICATOR GP-AIR FILTER CHANGE
NPR	IY	8N-9639	04	001	GUARD GP-DAMPER
NPR	IRY	9X-9591	01	001	CONVERTER GP-ELECTRICAL
NPR	I	104-4704	03	001	MOUNTING GP-CONTROL PANEL
NPR	IY	113-1581	00	001	AIR CLEANER GP
NPR	IY	115-3613	01	001	MOUNTING GP-AIR CLEANER
NPR	IY	115-7182	01	001	RAIL GP-ENGINE SUPPORT
NPR	IY	116-7004	02	001	REGULATOR GP-TEMPERATURE
NPR	IY	121-4450	10	001	PANEL GP-CONTROL
NPR	I	121-6202	06	001	REGULATOR GP-VOLTAGE
NPR	IY	121-8856	06	001	CONNECTION GP-ELECTRICAL
NPR	IY	134-0061	04	001	WIRING GP-ENGINE
NPR	I	141-1809	01	001	BOX GP-GENERATOR CONNECTION
NPR	I	144-1952	01	001	GENERATOR AR
NPR	I	145-5138	00	001	WIRING GP-ELECTRONIC CONTROL
NPR	I	153-0191	02	001	INSTALLATION AR-GENERATOR
	I	5N-9635		001	CONVENIENCE NUM
	IY	158-6167	03	001	CONVERSION AR
	I	121-4713	00	001	INSTRUCTIONS

	I	139-1129	00	001	COOLANT SENSING PROGRAM
NPR	I	122-1194	01	001	BOX & MOUNTING GP
	I	LA3326 00	001		RADIATOR REMOVAL AR
NPR	IY	121-3356	02	001	SENSOR & MTG GP-RADIATOR
NPR	IY	7W-6515	00	001	LINES GP-WATER
NPR	IY	8N-8510	07	001	VALVE GP-EXPLOSION RELIEF
NPR	IY	8N-6435	02	001	FILTER GP-PRIMARY FUEL
NPR	IY	115-1063	02	001	PUMP GP-FUEL PRIMING
	I	LA1060 05	001		FUMES DISPOSAL
NPR	IY	9Y-5563	00	001	FUMES DISPOSAL GP
NPR	IY	120-9818	04	001	FUMES DISPOSAL GP
NPR	IY	9Y-7876	01	001	DRAIN GP-ENGINE OIL
NPR	IY	5N-4659	06	001	REGULATOR GP-OIL LEVEL
	I	PA1772	06	001	ELECTRIC STARTING MOTOR LH
NPR	IY	8N-3896	13	001	STARTING MOTOR GP-ELECTRIC
NPR	IY	7L-7872	08	001	BATTERY GP
NPR	IY	7W-0825	01	001	CABLE GP-BATTERY
NPR	IY	3N-7056	00	001	SUPPORT GP-BATTERY
	I	PA5313	05	001	LUBRICATING OIL
NPR	I	5P-2586	03	001	OIL
NPR	IY	7W-5224	00	001	PULLEY GP-FAN DRIVE
	I	LA1193 03	001		SUMP PUMP RH
NPR	I	3N-4510	04	001	HOSE AS
NPR	IY	7W-9704	05	001	PUMP GP-SUMP
	I	LA1188 05	001		CHARGING ALTERNATOR 24V 60 AMP

NPR	IY	7E-2858	00	001	ALTERNATOR GP-CHARGING
NPR	IY	7E-4836	04	001	MOUNTING GP-ALTERNATOR
NPR	IY	7W-5780	04	001	GUARD GP-BELT
NPR	IY	107-7361	01	001	DRIVE GP-ACCESSORY
	I	5N-9597		001	VOLTAGE INDICATOR 480V, 60HZ
	I	0V-1065		001	0V1065 ENDUSE:GENERAL EPG
	I	LL5191 01	001		2628 BHP 1825 GEN KW W/F 60 HZ
	I	OK-2410		001	1960 KW @ 1800 RPM (2628 BHP)
	I	0V-1074		001	24JAN00 PRC PROTECT PGM852-1

SHIPPED LOOSE

NPR	S	0S-1571		001	BOLT
NPR	S	0S-1588		008	BOLT
NPR	S	0S-1594		003	BOLT
NPR	S	0S-1615		002	BOLT
NPR	S	0S-1619		003	BOLT
NPR	S	1K-6937		001	ELBOW-PIPE
NPR	S	1L-3769		001	RING-RETAINING
NPR	S	1L-4031		001	TEE-SERVICE
NPR	S	1L-8181		006	CLIP
NPR	S	1S-2303		002	SPACER
NPR	S	1W-0531		001	BASE-PRIMARY FUEL FILTER
NPR	S	2H-3429		001	RING-RETAINING
NPR	S	2J-0157		001	SEAL-O-RING
NPR	S	2N-8928		008	CLIP
NPR	S	2N-9768		001	SWITCH-LIQUID LEVEL

NPR	S	2R-7712	001	COUPLING
NPR	S	2V-7397	001	CABLE AS
NPR	S	3D-2824	001	SEAL-O-RING
NPR	S	3E-7430	001	PLUG-PIPE
NPR	S	3K-1715	001	CABLE AS
NPR	S	3N-6504	001	HOSE AS
NPR	S	3N-7054	001	SUPPORT AS-BATTERY
NPR	S	3N-7055	001	BOARD
NPR	S	3P-2021	001	NIPPLE-PIPE
NPR	S	3V-6785	001	CABLE AS
NPR	S	4D-7794	002	CLIP
NPR	S	4L-6454	032	BOLT
NPR	S	4P-0559	001	AIR CLEANER GP
NPR	S	4P-8462	001	HOSE AS
NPR	S	4P-8463	001	HOSE AS
NPR	S	5F-5990	002	CLIP
NPR	S	5F-6371	001	CONNECTOR
NPR	S	5M-2894	006	WASHER-HARD
NPR	S	5P-0537	002	WASHER-HARD
NPR	S	5P-0597	002	CLAMP-HOSE
NPR	S	5P-0598	002	CLAMP-HOSE
NPR	S	5P-1075	050	WASHER-HARD
NPR	S	5P-1472	580	HOSE
NPR	S	5P-8245	006	WASHER-HARD
NPR	S	5P-8250	002	WASHER

NPR	S	6B-9081	002	BUSHING-REDUCING
NPR	S	6F-0496	001	TEE-PIPE
NPR	S	6H-8297	001	ELBOW
NPR	S	6V-6866	002	PLUG
NPR	S	6V-8801	018	NUT
NPR	S	7C-1707	001	BRACKET AS
NPR	S	7D-8793	001	ELBOW-FLARED
NPR	SY	7E-6248	002	HEATER GP-JACKET WATER
NPR	S	7E-9437	001	COVER
NPR	S	7H-9678	001	RETAINER-ELEMENT
NPR	S	7K-1181	007	STRAP-CABLE
NPR	S	7K-3377	003	PIPE
NPR	S	7L-8074	001	ELBOW-REDUCING
NPR	S	7N-1628	001	NUT
NPR	S	7N-4106	001	PULLEY AS-CRANKSHAFT
NPR	S	7N-4945	001	GASKET
NPR	S	7N-5274	001	COVER AS-TERMINAL
NPR	S	7N-7057	001	SHAFT-STUB
NPR	S	7S-9323	001	SPRING
NPR	SY	7W-2035	001	GUARD AS-RADIATOR
NPR	S	7W-5228	001	V-BELT SET
NPR	S	7W-6470	001	PULLEY-FAN DRIVE
NPR	S	7W-6514	001	HOSE
NPR	S	8H-2778	001	SEAL-RING
NPR	S	8H-7202	001	CASE AS-FUEL FILTER

NPR	S	8L-8413	002	STRAP-CABLE
NPR	S	8N-0869	001	COVER-TERMINAL
NPR	S	8N-1186	001	HOSE AS
NPR	S	8N-1663	002	BOOT
NPR	S	8N-1725	001	COVER AS-TERMINAL
NPR	S	8N-8550	001	ELBOW
NPR	S	8S-5107	006	SPACER
NPR	S	8T-6762	001	PLUG-PIPE
NPR	S	9F-8122	006	BOLT
NPR	S	9G-0003	002	COVER AS-TERMINAL
NPR	S	9G-0004	002	COVER AS-TERMINAL
NPR	S	9G-8909	001	COVER-TERMINAL
NPR	S	9L-6961	002	HOSE AS
NPR	S	9M-2342	001	FILTER ELEMENT-FUEL
NPR	S	9S-1368	002	BOLT
NPR	S	9S-8752	003	NUT-FULL
NPR	S	9X-8874	006	BOLT
NPR	SY	9X-9730	002	BATTERY GP
NPR	S	004-3935	002	ELBOW
NPR	S	030-7976	001	ELBOW
NPR	S	032-1268	003	CONNECTOR
NPR	S	034-0728	003	CLIP
NPR	SY	111-3794	001	SENSOR GP-COOLANT LEVEL
NPR	S	118-1656	001	BUSHING-REDUCER
NPR	S	121-2481	001	SUPPORT AS

NPR	S	121-3369	001	HARNESS AS-SENSOR
NPR	S	171-6719	001	KIT-PARTS
NPR	SY	171-6721	001	KIT-PARTS
	S	SEBP2414	001	PTSBK
	S	SEBP2416	001	PTSBK
	S	SEBU6042	001	SUPP
	S	SEBU6251	001	LUBE
	S	SEBU6916	001	OMM
	S	SEBU6918	001	OMM
	S	SEBU6984	001	SUPP
	S	SELF5260	001	WARRANTY 140013C2(A)
	S	SELS0086	001	S.I.
	S	SENR4794	001	SCHEMATIC
	S	SMBU6981	001	SUPP
	S	ESO	001	(PRNT ESO COPY)
	S	PML	001	*REQUIRED DECALS

Key:

I Installed

Y Separate Illustration

R REMFG PART MAY BE AVAILABLE

S Shipped Loose

Copyright 1993 - 2014 Caterpillar Inc.

All Rights Reserved.

Private Network For SIS Licensees.

Wed Dec 17 2014 08:52:34 GMT-0800 (Pacific Standard Time)