



I	JWH0001	F	001	JACKT WTR HTR-120V-1000W
I	BTC1003	F	001	BATTERY CHARGER 10 AMP 03
I	PFF0002	F	001	PRIMARY FUEL FILTER
I	FLN0001	F	001	FLEXIBLE FUEL LINES
I	FWS0001	F	001	PRIMARYFUEL/WATER SEPARATOR
I	FPG0001	F	001	FUEL PRESSURE GAUGE
I	CBK3P13	F	001	600 AMP 3 POLE CIRCUIT BREAKER
I	SHK0001	F	001	SPACE HEATER KIT
I	60H-0480	F	001	60HZ 480 VOLTS
I	MSEPPGN	F	001	GENERAL EPG
I	TRSGEN7	F	001	PGS TEST REPORT @ 0.8 PF
I	STANDBY	F	001	STANDBY POWER APPLICATION
I	CBKRH01	F	001	RH MOUNT CIRCUIT BREAKER
I	CERTIFD	F	001	EPA & CARB NON-ROAD EMIS. CERT
I	EMCPTWO	F	001	ELECTRONIC MODULAR CONTROL PNL

PART NUMBERS

	I	PP3530	01	001	587 BHP 411 GEN KW WOF 60 HZ S
	I	0V-1213		001	01JUL00 PRC PROTPGM641-10
	I	0P-9200		001	0P9200 POSTSALE PPP PGM769-00
	I	CA0526	08	001	3406 480 VOLT 60 HZ PGS
NPR	IY	131-6597	05	001	ENGINE AR
NPR	IY	2W-8198	09	001	SHUTOFF GP-ELECTRICAL
NPR	IY	2W-9666	07	001	GUARD GP-BELT
	I	3L-0432		001	*TEST - PKG GEN SET (EMCP II)*
NPR	IY	4N-1062	09	001	STARTING MOTOR GP-ELECTRIC

NPR	IY	4N-3093	09	001	FAN GP-BLOWER
NPR	IY	4N-9778	04	001	LINES GP-WATER
NPR	IY	4P-7610	03	001	SENSOR GP-SPEED
NPR	IY	4W-1727	00	001	COVER GP-FUEL TRANSFER
	I	5N-7601		001	NOTE-CONT.& PNL CHART 129-4053
	I	5P-2506	00	001	LITERATURE GP
NPR	I	5P-2586	03	001	OIL
NPR	IY	6L-2927	07	001	ELBOW GP-EXHAUST
NPR	IY	8N-6115	03	001	AIR CLEANER GP
NPR	IY	103-1736	01	001	WIRING GP-PANEL
NPR	IY	103-1956	00	001	MOUNTING GP-CONTACTOR
NPR	IY	103-6101	04	001	CONTROL GP-ENGINE MONITORING
NPR	IY	104-4704	03	001	MOUNTING GP-CONTROL PANEL
NPR	IY	109-1532	02	001	FUMES DISPOSAL GP
NPR	IY	111-4421	01	001	ACTUATOR AS-GOVERNOR
NPR	IY	111-7534	02	001	MOUNTING GP-ACTUATOR
NPR	IY	128-5881	01	001	BASE GP-ENGINE & GENERATOR
NPR	IY	129-6803	03	001	CONNECTION GP-ELECTRICAL
NPR	IY	129-7502	01	001	LINES GP-COOLANT DRAIN
NPR	IY	129-7504	01	001	LINES GP-ENGINE OIL DRAIN
NPR	IY	130-3480	02	001	MOUNTING GP-VOLTAGE REGULATOR
NPR	IY	131-3530	01	001	PUMP GP-GOV & FUEL INJ
NPR	IY	131-5455	02	001	CONTROL AS-GOVERNOR
NPR	IY	133-9878	01	001	COUPLING GP-GENERATOR
NPR	IY	1W-7411	02	001	CONTROL GP-GOVERNOR

NPR	IY	7N-9946	14	001	RADIATOR GP
	I	3L-0284		001	*****TEST - PKG GEN SET*****
	I	CA0386	01	001	GENERATOR 450 FRAME PM
NPR	IY	129-1478	01	001	GENERATOR AR
NPR	IY	130-3649	01	001	REGULATOR GP-VOLTAGE
	I	CA0400	01	001	GENERATOR REMOVAL
	I	121-4713	00	001	INSTRUCTIONS
	I	PL4838 04	001		RH MTG OF CONTROL PANEL
	I	5N-7563		001	NOTE- CONTROL PANEL MTG (RH)
NPR	IY	121-4716	01	001	MODULE GP-ALARM
NPR	IY	121-4712	01	001	PANEL GP-ELECTRONIC
NPR	IY	131-1962	01	001	PANEL GP-INSTRUMENT
	I	PA4042	03	001	FAN DRIVE RATIO 0.800
NPR	IY	7N-8840	04	001	DRIVE GP-FAN
	I	CA0563	00	001	EXTENDED LIFE COOLANT
NPR	I	119-5148	01	001	COOLANT-EXTENDED LIFE
NPR	IY	111-3794	00	001	SENSOR GP-COOLANT LEVEL
NPR	IY	7L-7871	08	001	BATTERY GP
NPR	IY	7W-0825	01	001	CABLE GP-BATTERY
NPR	IY	3N-7056	00	001	SUPPORT GP-BATTERY
	I	CA0470	01	001	JACKET WATER HEATER
NPR	IY	7E-6247	03	001	HEATER GP-JACKET WATER
NPR	IY	129-4439	03	001	MOUNTING GP-JACKET WTR HEATER
	I	CA0443	00	001	BATTERY CHARGER - 10 AMP
NPR	IY	111-6138	02	001	BATTERY CHARGER

NPR	IY	130-1983	01	001	FASTENER GP-BATTERY CHARGER
NPR	IY	147-3081	02	001	FILTER GP-FUEL
NPR	IY	9Y-4812	03	001	LINES GP-FLEXIBLE FUEL
NPR	IY	116-1920	00	001	SEPARATOR GP-WATER
NPR	IY	6N-8878	02	001	GAUGE GP-FUEL PRESSURE
	I	CA0415	03	001	CIRCUIT BREAKER W/ST 600 AMP
NPR	IY	6I-3340	00	001	NEUTRAL BUS BAR AS
NPR	IY	105-7185	01	001	HARNES AS-PANEL
NPR	IY	129-5841	00	001	COVER GP-GENERATOR
NPR	IY	130-2572	00	001	BOX GP-EXTENSION TERMINAL
NPR	IY	130-2569	00	001	FASTENER GP-EXTENSION BOX
	I	5N-9693		001	NOTE-CIRCUIT BREAKER TRIP-600A
NPR	IY	169-1839	00	001	CIRCUIT BREAKER GP
NPR	IY	169-1851	00	001	MOUNTING GP-CIRCUIT BREAKER
NPR	IY	4P-5639	05	001	KIT-SPACE HEATER
	I	5N-9597		001	VOLTAGE INDICATOR 480V, 60HZ
	I	0V-1065		001	END USE: GENERAL EPG
	I	0P-1803		001	PGS TEST REPORT @ 0.8 PF
	I	9Y-8156		001	STANDBY POWER APPLICATION
	I	5N-7595		001	NOTE - MOUNT CIRCUIT BKR RH
	I	PP3530	01	001	587 BHP 411 GEN KW WOF 60 HZ S
	I	2T-8143	00	001	438 KW @ 1800 RPM (587 BHP)

SHIPPED LOOSE

NPR	S	2L-3331		001	CONNECTOR-PIPE
NPR	S	2V-7397		001	CABLE AS

NPR	S	3K-1715	001	CABLE AS
NPR	S	3N-6667	001	HOSE AS
NPR	S	3N-7054	001	SUPPORT AS-BATTERY
NPR	S	3N-7055	001	BOARD
NPR	S	3V-6785	001	CABLE AS
NPR	S	6V-4611	001	FILM-WARNING
NPR	S	7N-5274	001	COVER AS-TERMINAL
NPR	S	8L-7979	001	HOSE AS
NPR	S	8L-8413	002	STRAP-CABLE
NPR	S	8N-0869	001	COVER-TERMINAL
NPR	S	8N-1725	001	COVER AS-TERMINAL
NPR	S	9G-0003	002	COVER AS-TERMINAL
NPR	S	9G-0004	002	COVER AS-TERMINAL
NPR	S	9G-8909	001	COVER-TERMINAL
NPR	S	9J-6190	002	UNION-ADAPTER
NPR	S	9X-9720	002	BATTERY
	S	REHS0753	001	WARRANTY DATE RESET140019D2(A)
	S	SEBP2534	001	PT BK(EMCP 11) 1686 2-7(A)
	S	SEBP2541	001	PTSBK SAM (A)
	S	SEBU6042	001	SUPP
	S	SEBU6251	001	LUBE 140019B2(A)
	S	SEBU6918	001	OMM
	S	SEBU6984	001	SUPP
	S	SEBU6999	001	OMM
	S	SELF5308	001	WARRANTY (A)

	S	SENR4794	001	SMGP
	S	SMBU6981	001	SUPP
NPR	SY	131-1962	001	PANEL GP-INSTRUMENT

Key:

I Installed

Y Separate Illustration

S Shipped Loose

Copyright 1993 - 2015 Caterpillar Inc.

All Rights Reserved.