

Engine Serial Number Prefix - EBG (Build Date - 18/09/2007, Test Date - 27/09/2007, Ship Date - unknown)

ENGINE - ENTIRE GROUP PREFIX (EBG)

Qty.	NPR	Note	Part No.	Change	Qty	Part Name
				Level	Req.	
FEATURE CODES						
		I	512DE6C	F	001	3512C, 60HZ, 1800RPM PGS 6C
		I	RPA0310	F	001	697/1B FRAME GEN REML RPA0310
		S	FWS0004	F	001	WATER SEPARATOR
		I	EXRVAL5	F	001	EXPLOSION RELIEF VALVE
		S	VIBRM07	F	001	VIBRATION ISOLATORS REMOVAL 07
		I	BATRM03	F	001	STANDARD BATTERY REMOVAL 01
		I	ELSM246	F	001	HD ELEC STRTNG MOTOR DUAL 24V
		I	JWHD004	F	001	JACKET WATER HEATER-DUAL 02
		S	BAT2417	F	001	24 VOLT BATT SET-DRY-2600 CCA
		I	ALT2491	F	001	CHARGING ALTERNATOR 45 AMP 91
		I	EMCP33A	F	001	EMCP 3.3 CONTROL PANEL - HV
		I	LSMBOXL	F	001	LOAD SHARE MODULE MTG - LH
		I	ANNNFPA	F	001	1ST LOCAL ANN NFPA 110/CSA282
		I	CT30006	F	001	CURRENT TRANSF., 3000:5 RATIO
		I	ACLDE16	F	001	AIR CLEANER - DUAL ELEMENT
		I	SHROUDR	F	001	BOTTOM CABLE ENTRY (SHROUD)

	S	EMCSDP8	F	001	2 SPARE DISCRETE I/O PACKAGES
	I	BUSBL6S	F	001	5000A LV BUS BARS RH NEMA STD
	I	CERTIF2	F	001	EPA & CARB TIER II
	I	CUSTCNR	F	001	CUSTOMER CONNECTION MTG RH STD
	I	NOENCPB	F	001	NO ENCLOSURE REAR (STANDARD)
	I	NOENCPL	F	001	NO ENCLOSURE LEFT (STANDARD)
	I	OLVLRG1	F	001	OIL LEVEL REGULATOR - B & C
	I	UIPBBHS	F	001	CONTROL PANEL MOUNT REAR (STD)
	I	60H-0480	F	001	60HZ 480 VOLTS
	I	TRSGEN7	F	001	PGS TEST REPORT @ 0.8 PF
	S	LITENGE	F	003	EXTRA ENGLISH LITERATURE (1-6)
	I	MSEPGGN	F	001	GENERAL EPG
	I	MSCEC72	F	001	COMMERCIAL BUSINESSES
	I	MWCODEF	F	001	STANDBY POWER
	I	KW01500	F	001	1500 EKW W/FAN
	I	SPLGEN1	F	001	SPECIAL GENERATOR
	I	LANENGO	F	001	ENGLISH LANGUAGE OPTION
	I	3512C F	F	001	DIESEL ENGINE
	I	CERTSTA	F	001	STATIONARY APPLICATION USE
	I	CERTUSA	F	001	INSIDE US EPA LOCATIONS
	I	NONULL	F	001	NON UL 2200 LISTED PKG GEN SET
	I	STANDBY	F	001	STANDBY POWER APPLICATION
NPR	IL	7W-8708	F	001	INSTALLATION AR-GENERATOR
NPR	IL	244-4055	F	001	MOUNTING GP-RAIL
NPR	IY	268-4442	F	001	DRAIN GP-ENGINE OIL

NPR	IY	252-7409	F	001	FASTENER GP-WIRING HARNESS
NPR	I	7W-3754	F	001	RAIL GP-ENGINE SUPPORT
NPR	IY	269-7013	F	001	COVER GP-GENERATOR
NPR	IY	252-7343	F	001	BUS BAR GP-BOX
NPR	IY	260-6666	F	001	CONNECTION GP-GENERATOR LEADS
	N	0V-8707	F	001	DTO QUOTE DESIGN FEE

PART NUMBERS

	I	GP0920	06	001	3512C GLOBAL PKG-1800 RPM
	IY	271-1454	00	001	GENERAL AR
NPR	IY	267-3949	09	001	ENGINE AR
NPR	IY	205-7860	08	001	FILM GP
	I	3L-0284		001	TEST - PKG GEN SET
	I	252-7405	00	001	***** TEST - GEN ELE SYS LE *
NPR	SY	7W-0825	01	002	CABLE GP-BATTERY
NPR	SY	3N-7056	00	002	SUPPORT GP-BATTERY
NPR	IY	240-0740	01	001	SWITCH GP-DISCONNECT
NPR	IY	245-0000	02	001	BOX GP-CONTROL PANEL
NPR	IY	245-0087	05	001	MOUNTING GP-CONTROL PANEL
NPR	IY	245-0082	02	001	CONTROL GP-GENERATOR SET
NPR	IY	252-7367	01	003	MOUNTING GP-PANEL
NPR	IY	245-0092	02	001	WIRING GP-GENERATOR
NPR	IY	245-0003	05	001	BOX GP-EXTENSION TERMINAL
NPR	IY	252-7438	03	002	PLUG GP-BOX
NPR	IY	252-7700	00	001	PLUG GP-BOX
NPR	IY	252-7556	00	001	COVER GP-CONTROL PANEL

NPR	IY	252-7411	09	001	GROUND GP-ELECTRICAL
NPR	IY	245-0001	00	001	COVER GP-CONTROL PANEL
NPR	IY	245-0013	01	001	COVER GP-GENERATOR
NPR	IY	245-0007	01	002	COVER GP-GENERATOR
NPR	IY	245-0023	01	001	COVER GP-CONTROL PANEL
NPR	IY	245-0025	00	001	COVER GP-EXTENSION BOX
NPR	IY	259-2168	03	001	SENSOR GP-TEMPERATURE
NPR	IY	245-0024	00	001	COVER GP-ENCLOSURE
NPR	IY	245-0031	02	001	WIRING GP-ENGINE
	I	252-7392	00	001	INSTRUCTIONS
	I	252-7394	00	001	INSTRUCTIONS
	I	252-7396	02	001	INSTRUCTIONS-GOV
	I	252-7400	01	001	NOTE-BUSS BAR MOUNTING
NPR	IY	212-4694	02	001	DRIVE GP-FAN
NPR	IY	250-9694	04	001	CONVERSION AR-ENGINE
NPR	I	5P-2586	04	333	OIL
NPR	IY	147-3738	02	001	VALVE GP-FLUID SAMPLING
NPR	IY	7N-6782	07	001	INDICATOR GP-AIR FILTER CHANGE
NPR	IY	250-4642	02	001	LINES GP-AIR
NPR	IY	115-1062	05	001	PUMP GP-FUEL PRIMING
NPR	IY	120-9818	06	002	FUMES DISPOSAL GP
NPR	IY	197-9052	00	001	GUARD GP-DAMPER
NPR	IY	7W-6669	01	001	GUARD GP-DAMPER
	S	5P-2506	00	001	LITERATURE GP
NPR	IY	3N-8594	06	005	COVER GP-ENGINE LIFTING EYE

NPR	SY	283-2546	03	001	LINES GP-AFTERCOOLER AIR
NPR	IY	241-0235	00	001	WIRING GP-ELECTRIC STARTING
NPR	SY	286-2584	00	001	LINES GP-FUEL
NPR	SY	283-2549	00	001	FUMES DISPOSAL GP
NPR	IY	270-3503	02	001	RADIATOR GP
NPR	IY	121-3356	07	001	SENSOR & MTG GP-RADIATOR
NPR	IY	284-3741	00	001	GUARD GP-LINES
NPR	I	101-2844	04	099	COOLANT-EXTENDED LIFE
	I	GC4971	00	001	1500S GENERATOR REMOVAL
	I	LE0196 01	001		FUEL WATER SEPARATOR
NPR	SY	233-7973	01	001	SEPARATOR GP-WATER
	I	LE3628 00	001		EXPLOSION RELIEF VALVE CRANKCA
NPR	IY	8N-8510	21	001	VALVE GP-EXPLOSION RELIEF
	I	GZ0281	00	001	VIBRATION ISOLATOR REMOVAL
	I	LE0951 04	001		REMOVAL AR, BATTERIES,
	I	LE0174 02	001		HEAVY DUTY ELECTRIC STARTING
NPR	IY	8N-3896	17	001	STARTING MOTOR GP-ELECTRIC
NPR	IY	242-7068	00	001	WIRING GP-ELECTRIC STARTING
	I	LE0213 01	001		HEATER AR - JACKET WATER
NPR	IY	136-9370	07	001	MOUNTING GP-JACKET WTR HEATER
NPR	IY	166-6653	05	001	MOUNTING GP-JACKET WTR HEATER
NPR	IY	200-6504	02	002	HEATER GP-JACKET WATER
	I	LE7541 00	001		24V BAT SET-DRY 16
NPR	SY	7L-7872	09	002	BATTERY GP
	I	GZ0286	01	001	ALTERNATOR-CHARGING

NPR	IY	107-7361	04	001	DRIVE GP-ACCESSORY
NPR	IRY	5N-5692	12	001	ALTERNATOR GP-CHARGING
NPR	IY	7E-4836	09	001	MOUNTING GP-ALTERNATOR
NPR	IY	271-9270	02	001	GUARD GP-BELT
NPR	IY	126-9191	05	001	GROUND GP-ELECTRICAL
NPR	IY	133-6468	01	001	WIRE AS-GROUND
NPR	IY	241-0241	00	001	WIRING GP-ALTERNATOR
NPR	IY	151-9228	02	001	GUARD GP-BELT
	I	GC3238	01	001	EMCP3.3
NPR	I	254-6368	05	001	ELECTRONICS GP-GENERATOR SET
NPR	IY	245-0030	08	001	PANEL GP-CONTROL
NPR	IY	245-0035	10	001	BOX GP-ELECTRONIC
	S	244-9655	01	001	INSTRUCTIONS
	I	GC2942	00	001	LOAD SHARE MODULE BOX
NPR	IY	252-7369	04	001	CONTROL GP-LOAD SHARE MODULE
	I	GC2959	02	001	NFPA 99-110/CSA 282
NPR	IY	252-7553	01	001	MODULE GP-ALARM
	I	271-4524	00	001	INSTRUCTIONS
NPR	IY	252-7480	00	001	WIRING GP-GENERATOR
	I	GC2902	00	001	MOUNTING GP-CT (3000:5)
NPR	IY	252-7331	03	001	TRANSFORMER GP-CURRENT
	I	LA4522 00	001		3512C AIR CLEANER-DUAL ELEMENT
NPR	IY	250-4645	00	001	MOUNTING GP-AIR CLEANER
	I	GZ0695	01	001	BOTTOM CABLE ENTRY (WITH SHROU
NPR	IY	259-0151	00	001	COVER GP-EXTENSION BOX

	I	252-7502	04	001	INSTRUCTIONS
	I	GC5036	00	001	SPARE DISCRETE I/O PACKAGE
NPR	SY	252-7505	00	002	CONTROL GP-ENGINE MONITORING
NPR	IY	310-8008	00	001	REGULATOR GP-OIL LEVEL
	I	5N-9597		001	VOLTAGE INDICATOR 480V, 60HZ
	I	0P-1793		001	PGS TEST REPORT @ 0.8 PF
	S	0P-9715		003	EXTRA ENGLISH LITERATURE (1-6)
	I	0V-1065		001	END USE: GENERAL EPG
	I	GG0288	01	001	2206 BHP 1500 GEN KW W/F 60 HZ
	I	0K-7015		001	1645 BKW (2206 BHP) @ 1800 RPM
	I	0V-3462		001	EPA TIER II - NONROAD
	I	0V-1589		001	SPECIAL GEN REQUEST SPLGEN1
	I	CA0866	07	001	LANGUAGE MARKINGS-ENGLISH
	I	0V-2330		002	DTO QUOTE CORRECTION
NPR	IY	245-8721	01	001	RAIL GP-ENGINE SUPPORT
NPR	IY	244-4064	02	001	MOUNTING GP-RAIL
NPR	IY	269-3488	02	001	COVER GP-GENERATOR
NPR	IY	252-5590	02	001	FASTENER GP-GENERATOR COUPLING
	I	306-2858	00	001	GENERATOR AR - POWER
NPR	IL	7C-1626	00	001	GENERATOR AR
NPR	IY	268-4441	02	001	DRAIN GP-ENGINE OIL
	I	3L-0414		001	SINGLE BEARING GEN ALIGN-3500
NPR	IY	245-0095	01	001	WIRING GP-GENERATOR
NPR	IY	252-7372	01	001	WIRING GP-GENERATOR
NPR	IY	252-7418	03	001	WIRING GP-GENERATOR

	I	LE0613 01	001	BEARING TEMPERATURE RTD
NPR	I	141-4158	00	001 SENSOR GP-TEMPERATURE
SHIPPED LOOSE				
	S		006	
	S	ESO	001	(PRNT ESO COPY)
	S	PML	001	*REQUIRED DECALS
NPR	S	0S-1594		002 BOLT
NPR	S	1K-6870		032 LOCKNUT
NPR	S	1W-8129		001 SUPPORT
NPR	S	2N-2107		003 CLIP
NPR	S	2N-8928		010 CLIP
NPR	S	2P-1293		002 LOCKNUT
NPR	S	2V-7397		002 CABLE AS
NPR	S	2W-1745		002 SPACER
NPR	S	3K-1715		002 CABLE AS
NPR	S	3N-7054		002 SUPPORT AS-BATTERY
NPR	S	3N-7055		002 BOARD
NPR	SY	3N-7056		001 SUPPORT GP-BATTERY
NPR	S	3V-6785		002 CABLE AS
NPR	S	4L-6454		001 BOLT
NPR	S	4P-0692		002 CLAMP AS
NPR	S	5P-0597		002 CLAMP-HOSE
NPR	S	5P-1076		010 WASHER-HARD
NPR	S	5P-1472		810 HOSE
NPR	S	5P-2228		002 BOLT

NPR	S	5P-2566	002	BOLT
	SY	6L-4502	001	CHART-PLATE & FILM
NPR	S	6V-8188	010	NUT
NPR	S	6V-8189	008	NUT
NPR	S	6V-8801	008	NUT
NPR	S	6V-8997	002	UNION
NPR	S	6V-9746	005	SEAL-O-RING
NPR	S	6V-9853	001	ELBOW
NPR	SY	7L-7872	001	BATTERY GP
NPR	S	7N-5274	002	COVER AS-TERMINAL
NPR	SY	7W-0825	001	CABLE GP-BATTERY
NPR	S	7X-0297	002	BOLT
NPR	S	7X-0368	024	BOLT
NPR	S	7X-0370	008	BOLT
NPR	S	7X-0440	008	BOLT
NPR	S	8L-8413	004	STRAP-CABLE
NPR	S	8N-0869	002	COVER-TERMINAL
NPR	S	8N-1663	002	BOOT
NPR	S	8N-1725	002	COVER AS-TERMINAL
NPR	S	8T-4223	008	WASHER-HARD
NPR	S	8T-4224	016	WASHER-HARD
NPR	S	8T-4896	018	WASHER-HARD
NPR	S	8T-4994	064	WASHER-HARD
NPR	S	8T-8917	006	BOLT
NPR	S	8T-9101	002	BOLT

NPR	S	9B-7237	008	BOLT
NPR	S	9G-0003	002	COVER AS-TERMINAL
NPR	S	9G-0004	002	COVER AS-TERMINAL
NPR	S	9G-8140	001	SPACER
NPR	S	9G-8909	002	COVER-TERMINAL
NPR	SY	9X-9730	004	BATTERY GP
NPR	S	161-1528	003	BRACKET
NPR	S	176-0028	001	BRACKET
NPR	SY	233-7973	001	SEPARATOR GP-WATER
NPR	S	234-0275	002	CONTROL GP-ENGINE MONITORING
NPR	SY	252-7505	001	CONTROL GP-ENGINE MONITORING
NPR	S	255-6264	001	GASKET
NPR	S	282-2602	001	BRACKET
NPR	S	282-6664	002	BELLOWS
NPR	S	282-6678	001	BRACKET
NPR	S	282-6684	001	BRACKET
NPR	S	282-8532	001	BRACKET
NPR	S	282-8535	002	U-BOLT
NPR	SY	283-2546	001	LINES GP-AFTERCOOLER AIR
NPR	SY	283-2549	001	FUMES DISPOSAL GP
NPR	S	285-8515	001	BRACKET
NPR	S	285-9158	001	TUBE AS
NPR	S	286-2182	001	HOSE AS
NPR	S	286-2185	001	HOSE AS
NPR	S	286-2500	001	ADAPTER AS

NPR	SY	286-2584	001	LINES GP-FUEL
	S	SEBU6251	004	LUBE 140019B2(A)
	S	SEBU8111	008	OMM
	S	SELF5405	008	WARRANTY
	S	SERP4370	004	PTSCD

Key:

I Installed

S Shipped Loose

L Less Indicator

Y Separate Illustration

N Not Installed

R REMFG PART MAY BE AVAILABLE

Copyright 1993 - 2015 Caterpillar Inc.

All Rights Reserved.