

CAT 3612 Build Sheet.

**Sales Model:** 3612      **Invoice Number:** 9RC00017      **Dealer:** 9RC0001      **S.O. Number:** 9RC0001      **Build Date:** 1987-02-17

---

**Part Numbers**

Reference Number	Eng Chg	Quantity	ASM LESS	Set Type	Description	BreakDown
1W1012	06	1			3612 -E297 - OEM ENG	<a href="#">BreakDown...</a>

---

**Adjustments**

Reference Number	Eng Chg	Quantity	ASM LESS	Set Type	Description	BreakDown
1N3833	02	1			GEAR AS	<a href="#">BreakDown...</a>
1W0013	04	1			HSG AS-FRT	<a href="#">BreakDown...</a>
1W0021	09	12			HEAD GP-CYL	<a href="#">BreakDown...</a>
1W0023	09	1			HSG GP-FRT	<a href="#">BreakDown...</a>
1W0027	06	8			COVER GP-VALVE	<a href="#">BreakDown...</a>
1W0101	06	12			PISTON GP BASIC	<a href="#">BreakDown...</a>
1W0113	04	1			CRANKSHAFT AS	<a href="#">BreakDown...</a>
1W0789	07	12			MECHANISM GP	<a href="#">BreakDown...</a>
1W0790	04	1			GEAR GP-FRT.	<a href="#">BreakDown...</a>
1W0793	06	1			COVER GP-REAR	<a href="#">BreakDown...</a>
1W0795	03	1			GAGE GP-OIL	<a href="#">BreakDown...</a>
1W0798	11	1			FILTER GP-OIL	<a href="#">BreakDown...</a>
1W0799	06	1			FILLER GP-OIL	<a href="#">BreakDown...</a>
1W0804	07	1			VALVE GP-PRIORIT	<a href="#">BreakDown...</a>
1W0806	03	3			FILTER GP	<a href="#">BreakDown...</a>
1W0848	06	1			BARRING GP	<a href="#">BreakDown...</a>
1W0860	04	1			BLOCK GP	<a href="#">BreakDown...</a>
1W0861	04	1			CRANKSHAFT	<a href="#">BreakDown...</a>
1W0863	03	1			LINES GP	<a href="#">BreakDown...</a>
1W0865	05	1			GEAR GP-REAR	<a href="#">BreakDown...</a>
1W0866	06	12			PISTON GP.	<a href="#">BreakDown...</a>
1W0876	05	1			LINES GP	<a href="#">BreakDown...</a>
1W0878	07	1			LINES GP-FILTER	<a href="#">BreakDown...</a>
1W0879	03	1			LINES GP-TURBO O	<a href="#">BreakDown...</a>
1W0880	05	2			PUMP GP	<a href="#">BreakDown...</a>
1W0881	02	1			COVER GP	<a href="#">BreakDown...</a>
1W0882	07	1			LINES GP-WATER	<a href="#">BreakDown...</a>
1W0884	07	1			COVER GP	<a href="#">BreakDown...</a>

1W0885	07	1	MANIFOLD GP-EXH	<a href="#">BreakDown...</a>
1W0887	02	1	COOLER GP-E.O.	<a href="#">BreakDown...</a>
1W0888	05	1	AFTERCOOLER GP-W	<a href="#">BreakDown...</a>
1W0891	03	1	PUMP GP - FUEL	<a href="#">BreakDown...</a>
1W0892	08	1	CONTROL GP-FUEL	<a href="#">BreakDown...</a>
1W0895	05	1	LINES GP-FUEL IN	<a href="#">BreakDown...</a>
1W0898	02	1	MOUNTING GP	<a href="#">BreakDown...</a>
1W0902	03	1	HOUSING GP	<a href="#">BreakDown...</a>
1W0917	01	1	GEAR GP-FRONT	<a href="#">BreakDown...</a>
1W1012	06	1	ENGINE AR.	<a href="#">BreakDown...</a>
1W1076	01	2	COVER AS	<a href="#">BreakDown...</a>
1W1952	01	2	BRACKET AS	<a href="#">BreakDown...</a>
1W2470	06	12	LIFTER GP	<a href="#">BreakDown...</a>
1W2480	06	12	ARM GP	<a href="#">BreakDown...</a>
1W2758	02	2	SUPPORT AS	<a href="#">BreakDown...</a>
1W3382	06	1	COVER GP	<a href="#">BreakDown...</a>
1W3645	06	5	VALVE GP	<a href="#">BreakDown...</a>
1W4191	03	3	FILTER GP.	<a href="#">BreakDown...</a>
1W4446	04	1	LINES GP	<a href="#">BreakDown...</a>
1W7648	02	1	SHAFT AS	<a href="#">BreakDown...</a>
1W7650	03	4	JOURNAL AS	<a href="#">BreakDown...</a>
1W7652	03	3	JOURNAL AS	<a href="#">BreakDown...</a>
1W7653	03	4	JOURNAL AS	<a href="#">BreakDown...</a>
1W7655	04	1	SHAFT AS.-CAM	<a href="#">BreakDown...</a>
1W8151	03	1	PUMP GP HAND	<a href="#">BreakDown...</a>
1W8260	01	1	BRACKET AS	<a href="#">BreakDown...</a>
1W8410	01	12	SHAFT AS	<a href="#">BreakDown...</a>
1W8490	03	12	PLATE AS	<a href="#">BreakDown...</a>
1W9874	06	2	FITTING GP	<a href="#">BreakDown...</a>
2W0465	06	2	PUMP GP-BSC	<a href="#">BreakDown...</a>
2W0544	04	1	GAGE AS-OIL	<a href="#">BreakDown...</a>
2W2663	03	1	REGULATOR GP	<a href="#">BreakDown...</a>
2W2664	06	1	TANK GP	<a href="#">BreakDown...</a>
2W2677	02	2	CONNECTION GP	<a href="#">BreakDown...</a>
2W2680	02	2	FITTING GP	<a href="#">BreakDown...</a>
2W2681	02	2	FITTING GP	<a href="#">BreakDown...</a>
2W2682	02	2	FLANGE GP	<a href="#">BreakDown...</a>
2W2728	05	1	GAGE GP	<a href="#">BreakDown...</a>
2W2746	00	1	CONTACTOR GP - A	<a href="#">BreakDown...</a>

2W2750	00	1	CONTACTOR GP	<a href="#">BreakDown...</a>
2W2754	01	1	PANEL GP - INSTR	<a href="#">BreakDown...</a>
2W2783	06	1	MOUNTING GP	<a href="#">BreakDown...</a>
2W2791	02	1	LINES GP- INSTRU	<a href="#">BreakDown...</a>
2W2793	01	1	LINES GP-INSTRUM	<a href="#">BreakDown...</a>
2W2801	03	1	LINES GP-INSTR.P	<a href="#">BreakDown...</a>
2W2824	03	1	CONTROL GP	<a href="#">BreakDown...</a>
2W2827	01	1	LINES GP - AIR (	<a href="#">BreakDown...</a>
2W2830	01	1	LINES GP-AIR (AI	<a href="#">BreakDown...</a>
2W2850	07	1	GOVERNOR GP - BA	<a href="#">BreakDown...</a>
2W2977	03	1	LINES GP-AIR	<a href="#">BreakDown...</a>
2W2989	01	1	LINES GP - WATER	<a href="#">BreakDown...</a>
2W3015	01	1	LINES GP - WATER	<a href="#">BreakDown...</a>
2W3329	01	1	LINES GP-OIL	<a href="#">BreakDown...</a>
2W3333	02	2	ELBOW GP	<a href="#">BreakDown...</a>
2W3351	04	1	LINES GP	<a href="#">BreakDown...</a>
2W3355	02	1	PUMP GP-PRELUBE	<a href="#">BreakDown...</a>
2W4556	06	1	LINES GP-FUEL	<a href="#">BreakDown...</a>
2W5577	03	1	PUMP GP	<a href="#">BreakDown...</a>
2W6074	04	1	LINES GP	<a href="#">BreakDown...</a>
2W7118	04	1	CONNECTION GP	<a href="#">BreakDown...</a>
3N7012	03	1	PYROMETER	<a href="#">BreakDown...</a>
3T3679	00	1	PUMP GP-BSC	<a href="#">BreakDown...</a>
4W0012	01	1	MOUNTING GP	<a href="#">BreakDown...</a>
4W0345	04	12	PLUG GP	<a href="#">BreakDown...</a>
4W0359	03	1	MOUNTING GP-ENG	<a href="#">BreakDown...</a>
4W0361	01	1	LINES GP-WATER	<a href="#">BreakDown...</a>
4W0365	01	1	COVER GP	<a href="#">BreakDown...</a>
4W0367	03	12	PLUG GP	<a href="#">BreakDown...</a>
4W0379	00	2	INDICATOR AS.	<a href="#">BreakDown...</a>
4W0543	01	3	COVER GP	<a href="#">BreakDown...</a>
4W0705	02	1	PUMP GP-FUEL	<a href="#">BreakDown...</a>
4W1396	01	1	COUPLING GROUP -	<a href="#">BreakDown...</a>
4W3618	02	2	ADAPTER GP	<a href="#">BreakDown...</a>
4W4623	02	1	PUMP GP-BSC	<a href="#">BreakDown...</a>
4W5451	03	2	CLEANER GP	<a href="#">BreakDown...</a>
4W5482	02	2	CLEANER GP	<a href="#">BreakDown...</a>
4W5982	01	2	GAGE GP	<a href="#">BreakDown...</a>
4W6277	02	4	SUPPORT AS	<a href="#">BreakDown...</a>

4W8250	01	1	CAMSHAFT GP.	<a href="#">BreakDown...</a>
4W8346	00	1	LINES GP	<a href="#">BreakDown...</a>
4W8914	02	1	CAMSHAFT AS.	<a href="#">BreakDown...</a>
4W8916	02	1	CAMSHAFT AS.	<a href="#">BreakDown...</a>
4W9209	01	2	MTG GP - HEAT EX	<a href="#">BreakDown...</a>
4W9652	01	1	HOUSING AS	<a href="#">BreakDown...</a>
5N2126	03	12	ADAPTER	<a href="#">BreakDown...</a>
5P3591	04	3	ADAPTER GP	<a href="#">BreakDown...</a>
7C0012	00	12	HEAD GP	<a href="#">BreakDown...</a>
7C0244	00	12	THERMOCOUPLE	<a href="#">BreakDown...</a>
7C0245	00	12	LEAD AS - THERMO	<a href="#">BreakDown...</a>
7C0461	01	1	LINES GP-AIR FUE	<a href="#">BreakDown...</a>
7C0533	00	8	MOUNTING GP	<a href="#">BreakDown...</a>
7C0845	01	1	LINES GP - AIR	<a href="#">BreakDown...</a>
7C0899	01	1	LINES GP	<a href="#">BreakDown...</a>
7C1124	00	1	TUBE AS	<a href="#">BreakDown...</a>
7C1128	00	2	SHAFT AS	<a href="#">BreakDown...</a>
7C1765	01	1	LINES GP-INSTRUM	<a href="#">BreakDown...</a>
7C1887	00	1	GUARD GROUP - CP	<a href="#">BreakDown...</a>
7C1903	00	12	PUMP GP.-FUEL	<a href="#">BreakDown...</a>
7C1953	01	1	PUMP GP-LINES	<a href="#">BreakDown...</a>
7C2122	00	2	DAMPER GP-BSC	<a href="#">BreakDown...</a>
7C2417	00	1	HOUSING AS	<a href="#">BreakDown...</a>
7C2516	01	1	LINES GP-AIR CON	<a href="#">BreakDown...</a>
7C2517	02	1	LINES GP-INSTR.P	<a href="#">BreakDown...</a>
7C3854	00	12	INJECTOR GP-	<a href="#">BreakDown...</a>
7C5266	00	1	INSTALLATION AR	<a href="#">BreakDown...</a>
7C5803	00	1	SHUT-OFF GP-AIR	<a href="#">BreakDown...</a>
7C5847	00	2	TURBO GP - BASIC	<a href="#">BreakDown...</a>
7C6079	00	1	SHIELD GP	<a href="#">BreakDown...</a>
7C6203	00	1	STARTER - MOTOR	<a href="#">BreakDown...</a>
7C6853	00	1	CONTACTOR GP	<a href="#">BreakDown...</a>
7C6906	00	1	BASE AS.	<a href="#">BreakDown...</a>
7C7797	00	1	CONTACTOR GP - A	<a href="#">BreakDown...</a>
7C7812	00	1	MODULE GROUP - A	<a href="#">BreakDown...</a>
7C7835	00	1	MOUNTING GROUP -	<a href="#">BreakDown...</a>
7C7836	00	1	MOUNTING GROUP -	<a href="#">BreakDown...</a>
7C8074	00	1	EXCHANGER GP-HT	<a href="#">BreakDown...</a>
7C8080	00	1	LINES GP-HEAT EX	<a href="#">BreakDown...</a>

7C9405	00	2	EXCHANGER GP-BSC	<a href="#">BreakDown...</a>
7N4885	08	1	GAGE GP-WATER	<a href="#">BreakDown...</a>
7N7689	01	1	VALVE AS	<a href="#">BreakDown...</a>
7V1073	01	1	HOSE AS	<a href="#">BreakDown...</a>
7W0014	00	1	MOTOR GP - START	<a href="#">BreakDown...</a>
7W0127	02	1	DAMPER GP.	<a href="#">BreakDown...</a>
7W0146	03	1	PAN GP-OIL	<a href="#">BreakDown...</a>
7W0190	00	1	BRACKET AS.	<a href="#">BreakDown...</a>
7W0916	02	1	FASTENER GP-GOV	<a href="#">BreakDown...</a>
7W1281	03	1	PUMP GP.-FUEL	<a href="#">BreakDown...</a>
7W1349	02	1	DRIVE GP - GOVER	<a href="#">BreakDown...</a>
7W1543	04	1	FILTER GP-FUEL	<a href="#">BreakDown...</a>
7W1605	01	1	SWITCH GP	<a href="#">BreakDown...</a>
7W1608	03	1	METER GP	<a href="#">BreakDown...</a>
7W2970	01	1	SUPPORT AS	<a href="#">BreakDown...</a>
7W3555	01	1	SHUT-OFF GP	<a href="#">BreakDown...</a>
7W3606	02	1	HOUSING AS.	<a href="#">BreakDown...</a>
7W5519	01	4	COVER AS	<a href="#">BreakDown...</a>
7W5890	00	1	FILM - ROTATION	<a href="#">BreakDown...</a>
7W5934	00	1	BREATHER GP	<a href="#">BreakDown...</a>
7W6062	00	1	COVER GP	<a href="#">BreakDown...</a>
7W6583	01	1	GUARD GP-DAMPER	<a href="#">BreakDown...</a>
7W6708	00	2	PLATE AS-CAM	<a href="#">BreakDown...</a>
7W6724	01	1	FLYWHEEL GROUP	<a href="#">BreakDown...</a>
7W7654	01	1	DRAIN GP.-OIL	<a href="#">BreakDown...</a>
7W9022	01	1	ADAPTER AS	<a href="#">BreakDown...</a>
7W9242	00	1	SHAFT AS.	<a href="#">BreakDown...</a>
7W9685	00	1	SEAL GP-CRKSFT	<a href="#">BreakDown...</a>
8N8097	02	1	GEAR AS	<a href="#">BreakDown...</a>
8N8486	03	2	SILENCER GP	<a href="#">BreakDown...</a>
8N9071	00	2	VALVE AS	<a href="#">BreakDown...</a>
9Z5290	03	1	CUSTOM AR.-DAVIS	<a href="#">BreakDown...</a>