

G3516 GAS ENGINE
 Engine Serial Prefix- 4EK

▼ ENGINE - ENTIRE GROUP (4EK)

Qty.	NPR	Note	Part No.	ChangeLevel	Req. Qty	Part Name
		I	LA3165	03	001	ENGINE AR-G3516 LE PGS 11:1
	<u>NPR</u>	IY	<u>165-6135</u>	14	001	ENGINE AR
	<u>NPR</u>	IY	<u>2W-5616</u>	06	001	COVER GP-OIL PAN
		I	3L-0456		001	PROCEDURE - DVR PROG AND TEST
		I	3L-0467		001	TWO BEARING GEN ALIGNMENT-3500
		S	5P-2506	00	001	LITERATURE GP
	<u>NPR</u>	IY	<u>7C-0527</u>	05	001	STARTING MOTOR GP-ELECTRIC
	<u>NPR</u>	IY	<u>7E-8228</u>	05	001	AIR CLEANER GP
	<u>NPR</u>	IY	<u>7W-1678</u>	02	001	INDICATOR GP-AIR FILTER CHANGE
	<u>NPR</u>	IY	<u>8N-9639</u>	04	001	GUARD GP-DAMPER
	<u>NPR</u>	IY	<u>9Y-8179</u>	04	001	CONNECTION GP-WATER
	<u>NPR</u>	I	104-6203	09	001	INSTALLATION AR-GENERATOR
	<u>NPR</u>	IY	<u>107-9029</u>	03	001	GAUGE GP-OIL TEMPERATURE
	<u>NPR</u>	IY	<u>108-3854</u>	08	001	GAUGE GP-COOLANT TEMPERATURE
	<u>NPR</u>	IY	<u>108-3921</u>	13	001	GAUGE GP-AIR INLET TEMPERATURE
	<u>NPR</u>	IY	<u>121-6202</u>	10	001	REGULATOR GP-VOLTAGE
	<u>NPR</u>	IY	<u>141-1809</u>	03	001	BOX GP-GENERATOR CONNECTION
	<u>NPR</u>	SY	<u>9Y-6496</u>	01	001	MODULE GP-INTERFACE
	<u>NPR</u>	IY	<u>121-9640</u>	05	001	CONNECTION GP-ELECTRICAL
		I	0V-2329		002	PRODUCTION CORRECTION
	<u>NPR</u>	S	326-2803	00	001	ACTUATOR AS-GOVERNOR
		I	326-2806	00	001	WIRING GROUP
	<u>NPR</u>	S	326-2805	00	001	HARNESS AS-ENGINE
	<u>NPR</u>	IL	244-5524	06	001	SENSOR GP-ENGINE
		I	326-2807	00	001	SENSOR GP (EGS-02)
		I	0V-2330		002	DTO QUOTE CORRECTION
	<u>NPR</u>	ILY	<u>120-9715</u>	07	001	WIRING GP-ENGINE
	<u>NPR</u>	ILY	<u>307-1569</u>	01	001	GUARD GP-BELT
	<u>NPR</u>	I	317-2341	00	001	GUARD GP-BELT
	<u>NPR</u>	IL	187-2043	00	001	WIRING AS

PART NUMBERS

	<u>NPR</u>	ILY	<u>195-7661</u>	02	001	SENSOR GP-SPEED
	<u>NPR</u>	ILY	<u>158-6414</u>	01	001	GENERATOR AR
		I	158-6426	01	001	GENERATOR AR
	<u>NPR</u>	I	153-1031	05	001	RAIL GP-ENGINE & GEN SUPPORT
		I	198-1905	00	001	PAINT
	<u>NPR</u>	IY	<u>202-8640</u>	07	001	DRAIN GP-ENGINE OIL
	<u>NPR</u>	SLY	<u>167-6944</u>	03	001	PANEL GP-CONTROL
		I	243-5333	00	001	INSTRUCTIONS
		I	237-2484	03	001	LINES GP - INSTR EGS01 MAP
		I	237-2485	07	001	CONVERSION AR ESG01 FUEL SYS
	<u>NPR</u>	I	244-5513	03	001	WIRING GP-ENGINE
	<u>NPR</u>	S	244-5514	02	001	HARNESS AS-ENGINE
	<u>NPR</u>	SY	<u>244-5520</u>	03	001	ACTUATOR AS-GOVERNOR
	<u>NPR</u>	ILY	<u>4P-7899</u>	14	001	SENSOR GP-ENGINE
	<u>NPR</u>	SLY	<u>121-6963</u>	03	001	HARNESS AS-PANEL
	<u>NPR</u>	IY	<u>136-6924</u>	18	001	PANEL GP-CONTROL
	<u>NPR</u>	IY	<u>104-4704</u>	04	001	MOUNTING GP-CONTROL PANEL
		I	5N-7562	00	001	CHART
	<u>NPR</u>	IY	<u>121-8855</u>	06	001	CONNECTION GP-ELECTRICAL
	<u>NPR</u>	I	206-0570	01	001	STRIP GP-TERMINAL
	<u>NPR</u>	I	206-0571	01	001	FILM GP
	<u>NPR</u>	I	193-1292	02	001	HARNESS AS-WIRING
	<u>NPR</u>	ILY	<u>4P-8890</u>	02	001	CONTROL GP-ENGINE ELECTRONIC
	<u>NPR</u>	ILY	<u>107-9020</u>	10	001	METER GP-SERVICE
	<u>NPR</u>	ILY	<u>107-9022</u>	14	001	PYROMETER GP
	<u>NPR</u>	IY	<u>241-3378</u>	02	001	WIRING GP-GENERATOR
	<u>NPR</u>	ILY	<u>107-9023</u>	07	001	GAUGE AS-PRESSURE
	<u>NPR</u>	ILY	<u>107-9025</u>	03	001	GAUGE GP-MANIFOLD PRESSURE
	<u>NPR</u>	ILY	<u>107-9026</u>	04	001	GAUGE AS-PRESSURE
	<u>NPR</u>	ILY	<u>107-9031</u>	06	001	GAUGE GP-COOLANT PRESSURE
	<u>NPR</u>	IY	<u>123-6323</u>	02	001	BOX GP-CONTROL PANEL
	<u>NPR</u>	IY	<u>124-3676</u>	16	001	PYROMETER GP
	<u>NPR</u>	IY	<u>130-8164</u>	11	001	GAUGE GP-OIL FILTER PRESS DIFF
	<u>NPR</u>	IY	<u>130-8166</u>	10	001	GAUGE GP-MANIFOLD PRESSURE
	<u>NPR</u>	IY	<u>130-8160</u>	07	001	GAUGE GP-COOLANT PRESSURE
	<u>NPR</u>	IY	<u>130-8169</u>	09	001	GAUGE AS-PRESSURE

	NPR	I	193-5766	01	001	WIRING GP (EIS)
	NPR	IY	175-7731	01	001	WIRING GP-EIS
		I	193-1293	07	001	ENGINE AR
	NPR	IY	167-5103	05	001	SHUTOFF GP-ELECTRICAL
	NPR	IY	126-5667	09	001	IGNITION GP-GAS ENGINE
	NPR	ILY	4P-7489	15	001	IGNITION GP-GAS ENGINE
	NPR	ILY	109-4032	04	001	SHUTOFF GP-ELECTRICAL
		I	185-3516	09	001	CONVERSION AR
	NPR	IY	166-8367	04	001	WIRING GP-GENERATOR
	NPR	I	154-3851	02	001	WIRING GP-ENGINE
	NPR	IY	158-6172	06	001	CONVERSION AR
	NPR	IL	145-5138	01	001	WIRING GP-ELECTRONIC CONTROL
		I	121-4714	00	001	UNITS AS-METERIC
	NPR	SY	7W-0408	01	001	BATTERY CHARGER
		I	LA0463	03	001	LOW VOLTAGE EXTENSION BOX
	NPR	I	122-3487	03	001	CONVERSION GP-GENERATOR
	NPR	I	6I-4906	01	001	SENSOR GP-TEMPERATURE
		I	LA0092	06	001	CHARGING ALTERNATOR 24V 35AMP
	NPR	IY	7E-4836	10	001	MOUNTING GP-ALTERNATOR
	NPR	IY	112-3454	00	001	ALTERNATOR GP-CHARGING
	NPR	IY	118-7862	02	001	METER GP-VOLT
	NPR	IY	271-9270	02	001	GUARD GP-BELT
		I	LA1170	01	001	LUBRICATING OIL
	NPR	I	283-0781	00	401	OIL
	NPR	IY	253-2468	01	001	BARRING GP
	NPR	IY	110-6206	00	001	DRAIN GP-ENGINE OIL
	NPR	SY	5N-2457	06	001	FITTING GP-EXHAUST
		I	PA0939	14	001	FLANGE AND EXHAUST EXPANDER
	NPR	SY	7N-6967	06	001	FITTING GP-EXHAUST
	NPR	SY	2W-7871	03	001	FLANGE GP-EXHAUST
	NPR	IY	8N-8510	22	001	VALVE GP-EXPLOSION RELIEF
	NPR	ILY	134-8621	01	001	SWITCH GP-START
	NPR	IL	115-7046	01	001	RAIL GP-ENGINE SUPPORT
	NPR	ILY	154-3477	03	001	TRANSFORMER GP-POTENTIAL
	NPR	I	178-7193	01	001	TRANSFORMER GP-POTENTIAL
	NPR	IL	144-9057	03	001	TRANSFORMER GP-CURRENT

	<u>NPR</u>	I	144-9063	03	001	TRANSFORMER GP-CURRENT
	<u>NPR</u>	I	141-4160	00	001	SENSOR GP-TEMPERATURE
		IL	LA1106	01	001	JACKET WATER HEATER - SINGLE
		I	LA1105	02	001	JACKET WATER HEATER - SINGLE
	<u>NPR</u>	IY	<u>3E-0264</u>	03	001	SWITCH GP-TEMPERATURE
	<u>NPR</u>	IY	<u>6I-1043</u>	08	001	MOUNTING GP-JACKET WTR HEATER
	<u>NPR</u>	IY	<u>200-6504</u>	02	001	HEATER GP-JACKET WATER
	<u>NPR</u>	I	240-6834	02	001	HARNESS AS-WIRING
	<u>NPR</u>	IY	<u>216-8347</u>	03	001	REGULATOR GP-OIL LEVEL
		I	0V-8707		001	DTO QUOTE - 20000482
		I	5N-9634		001	VARIABLE HARNESS REMOVAL
		I	5N-9599		001	ADAPTER AS
		I	0P-1793		001	GEN SET TEST CHG AT 0.8 PF
		I	0V-1065		001	END USE: GENERAL EPG
		I	208-7482	00	001	TEST - GEN ELE SYS LE
		I	LL9411	00	001	1285 BHP 910 GEN KW 60 HZ CONT
		I	0K-4596		001	856 BKW (1148 BHP) @ 1200 RPM
						SHIPPED LOOSE
		S			001	PRINT OF 9N5308 F.CAB (A)
		S	ESO		001	(PRNT ESO COPY)
		S	PML		001	*REQUIRED DECALS
	<u>NPR</u>	S	0S-1571		012	BOLT
	<u>NPR</u>	S	0S-1588		008	BOLT
	<u>NPR</u>	S	0S-1591		008	BOLT
	<u>NPR</u>	S	1B-5355		012	NUT-FULL
	<u>NPR</u>	S	1B-5357		012	NUT-FULL
	<u>NPR</u>	S	2B-0858		001	PLUG-PIPE
	<u>NPR</u>	SY	<u>2W-7871</u>		001	FLANGE GP-EXHAUST
	<u>NPR</u>	S	2W-7872		001	FLANGE-EXHAUST
	<u>NPR</u>	S	2W-7873		001	GASKET-EXHAUST
	<u>NPR</u>	S	3V-3308		008	WASHER-HARD
	<u>NPR</u>	S	5L-4398		012	BOLT
	<u>NPR</u>	SY	<u>5N-2457</u>		001	FITTING GP-EXHAUST
		S	5P-2506		001	LITERATURE GP
	<u>NPR</u>	S	5P-8245		024	WASHER-HARD
		SY	<u>6L-4502</u>		001	CHART-PLATE & FILM

	NPR	S	6V-2687	002	SCREW-PAN HEAD
	NPR	S	7N-6959	001	ADAPTER
	NPR	SY	<u>7N-6967</u>	001	FITTING GP-EXHAUST
	NPR	SY	<u>7W-0408</u>	001	BATTERY CHARGER
	NPR	S	9L-9132	024	WASHER
	NPR	S	9S-8752	008	NUT-FULL
	NPR	SY	<u>9X-0203</u>	001	MODULE GP-RELAY DRIVER
	NPR	S	9X-6772	007	STRAP-CABLE
	NPR	SY	<u>9Y-6496</u>	001	MODULE GP-INTERFACE
	NPR	S	9Y-6497	001	BOARD AS-RELAY
	NPR	S	104-6202	001	CLIP
		S	121-0121	001	DIAGRAM-WIRING
	NPR	SY	<u>121-8855</u>	001	CONNECTION GP-ELECTRICAL
		S	158-6426	001	GENERATOR AR
	NPR	S	171-6719	001	KIT-PARTS
	NPR	S	171-6721	001	KIT-PARTS
	NPR	S	172-1612	001	HARNESS AS-WIRING
	NPR	S	214-6045	001	BELLOWS AS
	NPR	S	245-3512	001	GASKET
	NPR	S	326-2803	001	ACTUATOR AS-GOVERNOR
	NPR	S	326-2805	001	HARNESS AS-ENGINE
		S	REN7941	002	SMGP
		S	SEBU6400	001	LUBE
		S	SEBU6711	001	OMM
		S	SEBU6918	002	OMM
		S	SEHS9234	001	S.I.
		S	SEHS9769	001	S.I.
		S	SELF5419	001	WARRANTY
		S	SENR4794	001	SCHEMATIC
		S	SERP2185	001	PTSCD
		S	SERP2414	001	PTSCD
		S	SERP2922	001	PTSCD

Key:

I Installed

Y Separate Illustration

S Shipped Loose

L Less Indicator