

Engine Serial Prefix - EBG (Build Date - 09/2007, Test Date - 10/2007)

▼ ENGINE - ENTIRE GROUP (EBG)

Qty.	NPR	Note	Part No.	ChangeReq. Level	Qty	Part Name
						FEATURE CODES
		I	512DE6C	F	001	3512C, 60HZ, 1800RPM PGS 6C
		I	OGNPMK8	F	001	GEN 824 FRAME PM 1 BRG K8
		I	RPA0310	F	001	697/1B FRAME GEN REML RPA0310
		I	ALT2491	F	001	CHARGING ALTERNATOR 45 AMP 91
		I	CT25006	F	001	CURRENT TRANSF., 2500:5 RATIO
		I	ACLDE16	F	001	AIR CLEANER - DUAL ELEMENT
		I	MES1E1B	F	001	CBK UL 3P 1600A LSI EO
		I	PES1D1R	F	001	CBK UL 3P 1200A 100% LSI EO
		I	BUSBL6R	F	001	5000A LV BB REMOVAL-RH (NEMA)
		I	PCB2R0L	F	001	CONNECTION GROUP PCB2R0L_I
		I	SHROUDR	F	001	BOTTOM CABLE ENTRY (SHROUD)
		I	SHROUDB	F	001	BOTTOM CABLE ENTRY (SHROUD)
		I	CBCONN1	F	001	CIRCUIT BREAKER CONNECTION
		I	AUXPNLL	F	001	AUXILIARY PLATE MOUNTING - LH
		I	CERTIF2	F	001	EPA & CARB TIER II
		I	CUSTCNR	F	001	CUSTOMER CONNECTION MTG RH STD
		I	EMCP31	F	001	EMCP 3.1 CONTROL PANEL STD
		I	NOENCPL	F	001	NO ENCLOSURE LEFT (STANDARD)
		I	UIPBBHS	F	001	CONTROL PANEL MOUNT REAR (STD)
		I	60H-0480	F	001	60HZ 480 VOLTS
		S	LITENGE	F	002	EXTRA ENGLISH LITERATURE (1-6)
		I	MSCIK35	F	001	CRUSHERS
		I	MWCODEA	F	001	PRIMARY DRIVE
		I	KW01360	F	001	1360 EKW W/FAN
		I	LANENGO	F	001	ENGLISH LANGUAGE OPTION
		I	MSINDOE	F	001	INDUSTRIAL
		I	3512C	F	001	DIESEL ENGINE
		I	CERTMOB	F	001	MOBILE APPLICATION USE
		I	CERTUSA	F	001	INSIDE US EPA LOCATIONS
		I	NONULL	F	001	NON UL 2200 LISTED PKG GEN SET

	I	PRIMEPA	F	001	PRIME POWER APPLICATION PART NUMBERS
	I	GP0920	06	001	3512C GLOBAL PKG-1800 RPM
	IY	271-1454	00	001	GENERAL AR
	NPR	IY 267-3949	09	001	ENGINE AR
	NPR	IY 205-7860	08	001	FILM GP
	I	3L-0284		001	TEST - PKG GEN SET
	NPR	IY 252-5590	02	001	FASTENER GP-GENERATOR COUPLING
	I	3L-0414		001	SINGLE BEARING GEN ALIGN-3500
	I	252-7405	00	001	***** TEST - GEN ELE SYS LE *
	NPR	SY 7W-0825	01	001	CABLE GP-BATTERY
	NPR	SY 3N-7056	00	001	SUPPORT GP-BATTERY
	NPR	SY 7L-7872	09	001	BATTERY GP
	NPR	IY 7C-0526	03	001	STARTING MOTOR GP-ELECTRIC
	NPR	IY 240-0740	01	001	SWITCH GP-DISCONNECT
	NPR	IY 245-0000	02	001	BOX GP-CONTROL PANEL
	NPR	IY 245-0087	05	001	MOUNTING GP-CONTROL PANEL
	NPR	IY 245-0095	01	001	WIRING GP-GENERATOR
	NPR	IY 245-0082	02	001	CONTROL GP-GENERATOR SET
	NPR	IY 252-7367	01	003	MOUNTING GP-PANEL
	NPR	IY 252-7409	01	001	FASTENER GP-WIRING HARNESS
	NPR	IY 245-0092	02	001	WIRING GP-GENERATOR
	NPR	IY 245-0003	05	001	BOX GP-EXTENSION TERMINAL
	NPR	IY 252-7438	03	002	PLUG GP-BOX
	NPR	IY 252-7372	01	001	WIRING GP-GENERATOR
	NPR	IY 252-7700	00	001	PLUG GP-BOX
	NPR	IY 252-7418	03	001	WIRING GP-GENERATOR
	NPR	IY 252-7556	00	002	COVER GP-CONTROL PANEL
	NPR	IY 252-7411	09	001	GROUND GP-ELECTRICAL
	NPR	IY 245-0001	00	001	COVER GP-CONTROL PANEL
	NPR	IY 245-0007	01	001	COVER GP-GENERATOR
	NPR	IY 245-0023	01	001	COVER GP-CONTROL PANEL
	NPR	IY 245-0027	03	001	COVER GP-ENCLOSURE
	NPR	I 254-6260	04	001	ELECTRONIC GP-ENGINE
	NPR	IY 267-8472	07	001	PANEL GP-CONTROL
	NPR	IY 267-8473	07	001	BOX GP-ELECTRONIC

	NPR	IY	245-0025	00	001	COVER GP-EXTENSION BOX
	NPR	IY	259-2168	03	001	SENSOR GP-TEMPERATURE
	NPR	IY	245-0024	00	001	COVER GP-ENCLOSURE
	NPR	IY	245-0031	02	001	WIRING GP-ENGINE
		I	252-7392	00	001	INSTRUCTIONS
		I	252-7394	00	001	INSTRUCTIONS
		I	252-7396	02	001	INSTRUCTIONS-GOV
		I	252-7400	01	001	NOTE-BUSS BAR MOUNTING
	NPR	IY	212-4694	02	001	DRIVE GP-FAN
	NPR	IY	250-9694	04	001	CONVERSION AR-ENGINE
	NPR	SY	256-3172	02	001	MOUNTING GP-RADIATOR
	NPR	I	5P-2586	04	333	OIL
	NPR	IY	147-3738	02	001	VALVE GP-FLUID SAMPLING
	NPR	IY	7N-6782	07	001	INDICATOR GP-AIR FILTER CHANGE
	NPR	IY	250-4642	02	001	LINES GP-AIR
	NPR	IY	115-1062	05	001	PUMP GP-FUEL PRIMING
	NPR	IY	120-9818	06	002	FUMES DISPOSAL GP
	NPR	SY	256-3166	01	001	MOUNTING GP-ENGINE FLEXIBLE
	NPR	IY	197-9052	00	001	GUARD GP-DAMPER
	NPR	IY	7W-6669	01	001	GUARD GP-DAMPER
		S	5P-2506	00	001	LITERATURE GP
	NPR	IY	3N-8594	06	005	COVER GP-ENGINE LIFTING EYE
	NPR	SY	283-2546	03	001	LINES GP-AFTERCOOLER AIR
	NPR	IY	241-0235	00	001	WIRING GP-ELECTRIC STARTING
	NPR	SY	286-2584	00	001	LINES GP-FUEL
	NPR	SY	283-2549	00	001	FUMES DISPOSAL GP
	NPR	IY	270-3503	02	001	RADIATOR GP
	NPR	IY	121-3356	07	001	SENSOR & MTG GP-RADIATOR
	NPR	IY	284-3741	00	001	GUARD GP-LINES
	NPR	I	101-2844	04	099	COOLANT-EXTENDED LIFE
		I	GC4960	00	001	GLOBAL-1500 GENERATOR 824/1
	NPR	IY	262-8102	00	001	GENERATOR AR
	NPR	IY	245-8721	01	001	RAIL GP-ENGINE SUPPORT
	NPR	IY	244-4064	02	001	MOUNTING GP-RAIL
	NPR	IY	268-4442	02	001	DRAIN GP-ENGINE OIL
	NPR	IY	269-3488	02	001	COVER GP-GENERATOR

	I	GC4971	00	001	1500S GENERATOR REMOVAL	
	I	GZ0286	01	001	ALTERNATOR-CHARGING	
	NPR	IY 107-7361	04	001	DRIVE GP-ACCESSORY	
	NPR	IRY 5N-5692	12	001	ALTERNATOR GP-CHARGING	
	NPR	IY 7E-4836	09	001	MOUNTING GP-ALTERNATOR	
	NPR	IY 271-9270	02	001	GUARD GP-BELT	
	NPR	IY 126-9191	05	001	GROUND GP-ELECTRICAL	
	NPR	IY 133-6468	01	001	WIRE AS-GROUND	
	NPR	IY 241-0241	00	001	WIRING GP-ALTERNATOR	
	NPR	IY 151-9228	02	001	GUARD GP-BELT	
	I	GC2901	00	001	Mounting Gp-CT (2500:5)	
	NPR	IY 252-7330	03	001	TRANSFORMER GP-CURRENT	
	I	LA4522	00	001	3512C AIR CLEANER-DUAL ELEMENT	
	NPR	IY 250-4645	00	001	MOUNTING GP-AIR CLEANER	
	I	GC3180	04	001	REAR MOUNT 1600A, 3P, UL RATED	
	NPR	IY 244-9870	01	001	CIRCUIT BREAKER AS	
	NPR	IY 252-7657	01	001	BUS BAR GP-CIRCUIT BREAKER	
	NPR	IY 272-8427	01	001	COVER GP-ACCESS	
	NPR	IY 252-7643	00	001	COVER GP-CIRCUIT BREAKER	
	NPR	IY 245-0002	02	001	BOX GP-EXTENSION TERMINAL	
	NPR	IY 245-0026	00	001	COVER GP-EXTENSION BOX	
	NPR	IY 252-7350	00	001	MOUNTING GP-BOX	
	I	252-7401	02	001	INSTRUCTIONS	
	NPR	IY 272-8412	02	001	PANEL GP-CIRCUIT BREAKER	
	NPR	IY 272-8430	02	001	BUS BAR GP-CIRCUIT BREAKER	
	NPR	IY 244-9856	04	001	WIRING GP-GENERATOR	
	I	GC2689	01	001	RH 1200A- 3p- UL 100% rated- L	
	NPR	IY 244-9742	02	001	CIRCUIT BREAKER AS	
	NPR	IY 252-7342	03	001	PANEL GP-CIRCUIT BREAKER	
	NPR	IY 252-7608	03	001	BUS BAR GP-CIRCUIT BREAKER	
	NPR	I	274-7196	02	001	BUS BAR GP-CIRCUIT BREAKER
	NPR	IY 252-7491	01	001	COVER GP-EXTENSION BOX	
	NPR	IY 252-7646	01	001	COVER GP-CIRCUIT BREAKER	
	NPR	IY 252-7555	03	001	WIRING GP-PANEL	
	NPR	IY 252-7554	02	001	WIRING GP-PANEL	
	I	GC2908	01	001	BUS BAR REMOVAL-RH LOW VOLTAGE	

	I	GC3031	02	001	CONNECTION GROUP PCB2R0L_I
	<u>NPR</u>	IY <u>252-7602</u>	03	008	CABLE AS
	<u>NPR</u>	IY <u>272-6578</u>	05	010	CONNECTION GP-TERMINAL STRIP
	I	271-8937	01	001	INSTRUCTION
	<u>NPR</u>	IY <u>284-6651</u>	00	002	FILM GP
	I	GZ0695	01	001	BOTTOM CABLE ENTRY (WITH SHROU
	<u>NPR</u>	IY <u>259-0151</u>	00	001	COVER GP-EXTENSION BOX
	I	252-7502	04	002	INSTRUCTIONS
	I	GC2503	01	001	BOTTOM CABLE ENTRY (WITH SHROU
	<u>NPR</u>	IY <u>245-0029</u>	00	001	COVER GP-EXTENSION BOX
	I	GC3256	02	001	CIRCUIT BREAKER CONNECTION
	<u>NPR</u>	IY <u>273-5807</u>	08	001	CONNECTION GP-ELECTRICAL
	I	5N-9597		001	VOLTAGE INDICATOR 480V, 60HZ
	S	0P-9715		002	EXTRA ENGLISH LITERATURE (1-6)
	I	GG0290	01	001	2012 BHP 1360 GEN KW W/F 60 HZ
	I	0K-7017		001	1500 BKW (2012 BHP) @ 1800 RPM
	I	0V-3462		001	EPA TIER II - NONROAD
	I	CA0866	07	001	LANGUAGE MARKINGS-ENGLISH
	I	0V-1085		001	END USE: INDUSTRIAL
					SHIPPED LOOSE
	S			006	
	S	ESO		001	(PRNT ESO COPY)
	S	PML		001	*REQUIRED DECALS
	<u>NPR</u>	S 0S-1594		002	BOLT
	<u>NPR</u>	S 1K-6870		032	LOCKNUT
	<u>NPR</u>	S 1W-8129		001	SUPPORT
	<u>NPR</u>	S 2N-2107		003	CLIP
	<u>NPR</u>	S 2N-8928		010	CLIP
	<u>NPR</u>	S 2P-1293		002	LOCKNUT
	<u>NPR</u>	S 2V-7397		001	CABLE AS
	<u>NPR</u>	S 2W-1745		002	SPACER
	<u>NPR</u>	S 3K-1715		001	CABLE AS
	<u>NPR</u>	S 3N-7054		001	SUPPORT AS-BATTERY
	<u>NPR</u>	S 3N-7055		001	BOARD
	<u>NPR</u>	SY <u>3N-7056</u>		001	SUPPORT GP-BATTERY
	<u>NPR</u>	S 3V-6785		001	CABLE AS

	NPR	S	4L-6454	001	BOLT
	NPR	S	4P-0692	002	CLAMP AS
	NPR	S	5P-0597	002	CLAMP-HOSE
	NPR	S	5P-1076	010	WASHER-HARD
	NPR	S	5P-1472	810	HOSE
	NPR	S	5P-2228	002	BOLT
	NPR	S	5P-2566	002	BOLT
		SY	6L-4502	001	CHART-PLATE & FILM
	NPR	S	6V-8188	010	NUT
	NPR	S	6V-8189	008	NUT
	NPR	S	6V-8801	008	NUT
	NPR	S	6V-8997	002	UNION
	NPR	S	6V-9746	005	SEAL-O-RING
	NPR	S	6V-9853	001	ELBOW
	NPR	SY	7L-7872	001	BATTERY GP
	NPR	S	7N-5274	001	COVER AS-TERMINAL
	NPR	SY	7W-0825	001	CABLE GP-BATTERY
	NPR	S	7X-0297	002	BOLT
	NPR	S	7X-0368	024	BOLT
	NPR	S	7X-0370	008	BOLT
	NPR	S	7X-0440	008	BOLT
	NPR	S	8L-8413	002	STRAP-CABLE
	NPR	S	8N-0869	001	COVER-TERMINAL
	NPR	S	8N-1663	002	BOOT
	NPR	S	8N-1725	001	COVER AS-TERMINAL
	NPR	S	8T-4131	008	NUT
	NPR	S	8T-4223	008	WASHER-HARD
	NPR	S	8T-4224	016	WASHER-HARD
	NPR	S	8T-4896	018	WASHER-HARD
	NPR	S	8T-4994	064	WASHER-HARD
	NPR	S	8T-8917	006	BOLT
	NPR	S	8T-9101	002	BOLT
	NPR	S	9B-7237	008	BOLT
	NPR	S	9G-0003	001	COVER AS-TERMINAL
	NPR	S	9G-0004	001	COVER AS-TERMINAL
	NPR	S	9G-8140	001	SPACER

	<u>NPR</u>	S	9G-8909	001	COVER-TERMINAL
	<u>NPR</u>	SY	<u>9X-9730</u>	002	BATTERY GP
	<u>NPR</u>	S	161-1528	003	BRACKET
	<u>NPR</u>	S	168-7790	008	BOLT
	<u>NPR</u>	S	176-0028	001	BRACKET
	<u>NPR</u>	S	177-1452	008	WASHER-HARD
	<u>NPR</u>	S	255-6264	001	GASKET
	<u>NPR</u>	SY	<u>256-3166</u>	001	MOUNTING GP-ENGINE FLEXIBLE
	<u>NPR</u>	SY	<u>256-3172</u>	001	MOUNTING GP-RADIATOR
		S	259-2174	008	MOUNT-ISOLATION
	<u>NPR</u>	S	282-2602	001	BRACKET
	<u>NPR</u>	S	282-6664	002	BELLOWS
	<u>NPR</u>	S	282-6678	001	BRACKET
	<u>NPR</u>	S	282-6684	001	BRACKET
	<u>NPR</u>	S	282-8532	001	BRACKET
	<u>NPR</u>	S	282-8535	002	U-BOLT
	<u>NPR</u>	SY	<u>283-2546</u>	001	LINES GP-AFTERCOOLER AIR
	<u>NPR</u>	SY	<u>283-2549</u>	001	FUMES DISPOSAL GP
	<u>NPR</u>	S	285-8515	001	BRACKET
	<u>NPR</u>	S	285-9158	001	TUBE AS
	<u>NPR</u>	S	286-2182	001	HOSE AS
	<u>NPR</u>	S	286-2185	001	HOSE AS
	<u>NPR</u>	S	286-2500	001	ADAPTER AS
	<u>NPR</u>	SY	<u>286-2584</u>	001	LINES GP-FUEL
		S	SEBU6251	003	LUBE 140019B2(A)
		S	SEBU8111	006	OMM
		S	SELF5405	006	WARRANTY
		S	SERP4370	003	PTSCD

Key:

I Installed

S Shipped Loose

Y Separate Illustration

R REMFG PART MAY BE AVAILABLE