

3516B GEN SET ENGINE

Engine Serial Number - 6HN (Build Date - 05/1999, Test Date - 05/1999, Ship Date - 05/1999)

[View Latest Kit Information](#)

▼ ENGINE - ENTIRE GROUP (6HN)

Qty.	NPR	Note	Part No.	Change Level	Req. Qty	Part Name
						FEATURE CODES
		I	KW02000	F	001	2000 EKW W/FAN
		I	516DE63	F	001	3516B 2000 EKW 60 HZ EMISSIONS
		I	OGNPM97	F	001	GENERATOR 825 FRAME PM
		I	RPA0069	F	001	825 FRAME GENERATOR REMOVAL
		I	EMCENGU	F	001	ENGLISH DISPLAY UNITS
		I	CSA0001	F	001	CSA CERTIFICATION
		I	EMCAM06	F	001	ALARM MODULE - NFPA 99
		I	EMCPLAR	F	001	PANEL LIGHTS/AUXILIARY RELAY
		I	EMCCIM1	F	001	CUSTOMER INTERFACE MODULE-CIM
		I	RRM0039	F	001	RADIATOR REMOVAL 72/25, 0.428
		I	EXCYA04	F	001	Y ADAPTER
		I	PFF0001	F	001	PRIMARY FUEL FILTER
		I	FUMDIS4	F	001	FUMES DISPOSAL
		I	OPADR4	F	001	OIL PAN DRAIN VALVE
		I	OLVLRG1	F	001	OIL LEVEL REGULATOR
		I	LUBOIL1	F	001	LUBRICATING OIL
		I	BAT2418	F	001	24 VOLT BATTERY SET - DRY
		I	BTRCBL1	F	001	BATTERY CABLES
		I	BTR0001	F	001	BATTERY RACK
		I	JWHD001	F	001	JACKET WATER HEATER - DUAL
		I	BARGP01	F	001	ENGINE BARRING GROUP
		I	TSPCSA5	F	001	NEUTRAL GROUNDING CONNECTION
		I	FPPRH04	F	001	FUEL PRIMING PUMP
		I	60H-4160	F	001	60HZ 4160 VOLTS
		I	EXB0010	F	001	BOX FOR EXPORT - 3516
		I	LITENGE	F	001	EXTRA ENGLISH LITERATURE
		I	TSP0002	F	001	SPECIAL TEST CHARGE

	I	TSPCSA4	F	001	CSA TEST AND CERTIFICATION
	I	EMISSNS	F	001	EMISSIONS
	I	60HERTZ	F	001	60 HERTZ
	I	STANDBY	F	001	STANDBY POWER APPLICATION
	I	EMCPTWO	F	001	ELECTRONIC MODULAR CONTROL PNL
	I	XLLENGL	F	001	EXTRA ENGLISH LITERATURE
	I	3516B	F	001	3516B DIESEL ENGINE
	I	NORAD	F	001	NO RADIATOR

PART NUMBERS

	I	PP3452	08	001	2876 BHP 2060 GEN KW WOF 60 HZ
	<u>NPR</u>	IY <u>149-6326</u>	02	002	GOVERNOR GP-ELECTRONIC
		I 0P-7512		001	0P7512 STANDBY PLUS PGM344
		I LA2277	02	001	3516B 2000 EKW 60 HZ EMISSIONS
	<u>NPR</u>	IY <u>116-9866</u>	06	001	ENGINE AR
		I 3L-0414		001	SINGLE BEARING GEN ALIGN-3500
		I 3L-0432		001	TEST - PKG GEN SET (EMCP II
		I 5N-9581		001	LOW EMISSION - 3500B SERIES.
		I 5P-2506	00	001	LITERATURE GP
	<u>NPR</u>	IY <u>7C-0527</u>	02	001	STARTING MOTOR GP-ELECTRIC
	<u>NPR</u>	IY <u>7N-6782</u>	08	001	INDICATOR GP-AIR FILTER CHANGE
	<u>NPR</u>	IY <u>8N-9639</u>	04	001	GUARD GP-DAMPER
	<u>NPR</u>	IRY <u>9X-9591</u>	01	001	CONVERTER GP-ELECTRICAL
	<u>NPR</u>	I 104-4704	03	001	MOUNTING GP-CONTROL PANEL
	<u>NPR</u>	IY <u>113-1581</u>	00	001	AIR CLEANER GP
	<u>NPR</u>	IY <u>115-3613</u>	00	001	MOUNTING GP-AIR CLEANER
	<u>NPR</u>	I 115-7182	01	001	RAIL GP-ENGINE SUPPORT
	<u>NPR</u>	IY <u>116-7004</u>	02	001	REGULATOR GP-TEMPERATURE
	<u>NPR</u>	IY <u>121-4450</u>	09	001	PANEL GP-CONTROL
	<u>NPR</u>	IY <u>121-8856</u>	05	001	CONNECTION GP-ELECTRICAL
	<u>NPR</u>	IY <u>126-9191</u>	02	001	GROUND GP-ELECTRICAL
	<u>NPR</u>	IY <u>134-0054</u>	04	001	WIRING GP-ENGINE
	<u>NPR</u>	I 141-1809	01	001	BOX GP-GENERATOR CONNECTION
	<u>NPR</u>	I 153-0191	01	001	INSTALLATION AR-GENERATOR
	<u>NPR</u>	IY <u>163-1462</u>	00	001	SENSOR & MTG GP-ELECTRIC
		I LA1860	05	001	GENERATOR 825 FRAME PM
	<u>NPR</u>	I 122-3487	01	001	CONVERSION GP-GENERATOR

	NPR	I	144-2000	03	001	GENERATOR AR
		I	3L-0456		001	PROCEDURE - DVR PROG AND TEST
	NPR	I	121-6202	06	001	REGULATOR GP-VOLTAGE
	NPR	I	145-5138	00	001	WIRING GP-ELECTRONIC CONTROL
		I	LA2291	00	001	GENERATOR REMOVAL - 825 FRAME
		I	121-4713	00	001	INSTRUCTIONS
		I	121-4706	00	001	TEST AS-CSA
	NPR	IY	121-4716	01	001	MODULE GP-ALARM
	NPR	IY	121-4712	01	001	PANEL GP-ELECTRONIC
	NPR	I	9Y-6496	02	001	MODULE GP-INTERFACE
		I	LA0783	01	001	RADIATOR REMOVAL 72/25, 0.428
		I	LA0961	02	001	Y ADAPTER
	NPR	IY	5N-2457	03	001	FITTING GP-EXHAUST
	NPR	IY	124-0104	01	001	FLANGE GP-EXHAUST
	NPR	IY	8N-6435	02	001	FILTER GP-PRIMARY FUEL
		I	LA1060	05	001	FUMES DISPOSAL
	NPR	IY	9Y-5563	00	001	FUMES DISPOSAL GP
	NPR	IY	120-9818	04	001	FUMES DISPOSAL GP
	NPR	IY	9Y-7876	01	001	DRAIN GP-ENGINE OIL
	NPR	IY	5N-4659	05	001	REGULATOR GP-OIL LEVEL
		I	PA5313	05	001	LUBRICATING OIL
	NPR	I	5P-2586	03	001	OIL
		I	PA1788	09	001	24 VOLT BATTERY SET - DRY
	NPR	IY	7L-7871	08	001	BATTERY GP
	NPR	IY	7W-0825	01	001	CABLE GP-BATTERY
	NPR	IY	3N-7056	00	001	SUPPORT GP-BATTERY
		I	PA4355	05	001	JACKET WATER HEATER - DUAL
	NPR	IY	7E-6247	02	001	HEATER GP-JACKET WATER
	NPR	IY	6I-1043	03	001	MOUNTING GP-JACKET WTR HEATER
	NPR	IY	6I-1044	07	001	MOUNTING GP-JACKET WTR HEATER
	NPR	IY	5R-7425	01	001	BARRING GP
	NPR	I	121-9480	02	001	CONNECTION GP-TERMINAL STRIP
		I	LA3237	00	001	FUEL PRIMING PUMP AR-RH
	NPR	IY	121-3327	04	001	PUMP GP-FUEL PRIMING
	NPR	IY	165-9154	00	001	PUMP GP-FUEL PRIMING
		I	5N-9599		001	ADAPTER AS

	I	0P-7086		001	BOX FOR EXPORT - 3516
	I	0P-9715		001	EXTRA LITERATURE-G.S. M/AUX
	I	0P-1513		001	SPECIAL TEST CHARGE
	I	LA1330	00	001	CSA TEST AND CERTIFICATION
	I	3L-0224		001	DIELECTRIC TEST - CSA
	I	3L-0334		001	NAMEPLATE INFORMATION
	I	PP3452	08	001	2876 BHP 2060 GEN KW WOF 60 HZ
	I	2T-8240	00	001	2145 KW @ 1800 RPM (2876 BHP)
	I	163-0669	00	001	SOFTWARE GP-ENG RATINGS ELEK

SHIPPED LOOSE

	<u>NPR</u>	S	0S-1571	016	BOLT
	<u>NPR</u>	S	0S-1588	016	BOLT
	<u>NPR</u>	S	0S-1590	016	BOLT
	<u>NPR</u>	S	1L-3769	001	RING-RETAINING
	<u>NPR</u>	S	1W-0531	001	BASE-PRIMARY FUEL FILTER
	<u>NPR</u>	S	2H-3429	001	RING-RETAINING
	<u>NPR</u>	S	2J-0157	001	SEAL-O-RING
	<u>NPR</u>	S	2J-3506	016	NUT-FULL
	<u>NPR</u>	S	2N-3475	002	SCREW
	<u>NPR</u>	S	2N-8928	008	CLIP
	<u>NPR</u>	S	2V-7397	002	CABLE AS
	<u>NPR</u>	S	3K-1715	001	CABLE AS
	<u>NPR</u>	S	3N-7054	001	SUPPORT AS-BATTERY
	<u>NPR</u>	S	3N-7055	001	BOARD
	<u>NPR</u>	S	3V-3308	016	WASHER-HARD
	<u>NPR</u>	S	3V-6785	001	CABLE AS
	<u>NPR</u>	S	5L-3773	002	GASKET-EXHAUST ELBOW
	<u>NPR</u>	S	5L-6297	002	ADAPTER AS-FLEXIBLE
	<u>NPR</u>	S	5M-2894	016	WASHER-HARD
	<u>NPR</u>	S	5P-0597	002	CLAMP-HOSE
	<u>NPR</u>	S	5P-1472	580	HOSE
	<u>NPR</u>	S	5P-8248	032	WASHER-HARD
	<u>NPR</u>	S	6V-2687	004	SCREW-PAN HEAD
	<u>NPR</u>	S	6V-6866	002	PLUG
	<u>NPR</u>	S	7H-9678	001	RETAINER-ELEMENT
	<u>NPR</u>	S	7N-1628	001	NUT

	NPR	S	7N-5274	001	COVER AS-TERMINAL
	NPR	S	7S-9323	001	SPRING
	NPR	S	8D-8724	002	FUSE
	NPR	S	8H-2778	001	SEAL-RING
	NPR	S	8H-7202	001	CASE AS-FUEL FILTER
	NPR	S	8L-8413	004	STRAP-CABLE
	NPR	S	8N-0869	001	COVER-TERMINAL
	NPR	S	8N-1663	002	BOOT
	NPR	S	8N-1725	001	COVER AS-TERMINAL
	NPR	S	9F-8125	002	LOCKWASHER
	NPR	S	9G-0003	004	COVER AS-TERMINAL
	NPR	S	9G-0004	004	COVER AS-TERMINAL
	NPR	S	9G-8909	001	COVER-TERMINAL
	NPR	S	9M-2342	001	FILTER ELEMENT-FUEL
	NPR	S	9S-8752	016	NUT-FULL
	NPR	S	9X-0203	002	MODULE GP-RELAY DRIVER
	NPR	S	9X-8887	016	BOLT
	NPR	S	9X-9720	004	BATTERY
	NPR	SY	9Y-6497	002	BOARD AS-RELAY
		S	9Y-9892	002	INSTRUCTIONS
	NPR	SY	126-3085	002	HARNES AS-ENGINE
	NPR	S	127-9070	002	POTENTIOMETER
	NPR	S	133-6479	001	FLANGE-EXHAUST
	NPR	S	133-6480	001	GASKET
	NPR	S	133-6485	001	ADAPTER AS-EXHAUST
	NPR	S	158-6182	002	HARNES AS-PANEL
	NPR	SY	161-0797	002	CONTROL AS-GOVERNOR
	NPR	S	171-6719	001	KIT-PARTS
	NPR	SY	171-6721	001	KIT-PARTS
		S	SEBP2414	002	PTSBK
		S	SEBP2417	002	PTSBK
		S	SEBP2922	002	PTSBK
		S	SEBP2931	002	PTSBK
		S	SEBU6042	002	SUPP
		S	SEBU6251	002	LUBE 1632-16 (A)
		S	SEBU6916	002	OMM



S	SEBU6918	002	OMM
S	SEBU6984	002	SUPP 140013B1(A)
S	SELF5260	002	NEW WARRANTY 1630-17 (A)
S	SELS0086	002	S.I.
S	SENR4794	002	SCHEMATIC
S	ESO	001	(PRNT ESO COPY)
S	PML	001	*REQUIRED DECALS