

3508B GEN SET ENGINE

Engine Serial Prefix - 2HW (Build Date - 01/2006, Test Date - 01/2006)

ENGINE - ENTIRE GROUP (2HW)

Qty.	NPR	Note	Part No.	ChangeReq. Level	Qty	Part Name
						<b>FEATURE CODES</b>
		I	508DZ20	F	001	3508B LAND ELECTRIC ENGINE 20
		I	BELTGD1	F	001	COOLING SYSTEM OPTIONS
		I	FDV0037	F	001	FAN DRIVE 02
		I	FANB006	F	001	BLOWER FAN (72 IN) SL 06
		I	FANPL10	F	001	FAN PULLEY 0.605 RATIO
		I	CLWOCN1	F	001	SINGLE WATER OUTLET
		I	CLINCN1	F	001	INLET CONNECTION
		I	CLS0001	F	001	COOLANT LEVEL SENSOR
		I	GOVPG08	F	001	GOVERNOR CONVERSION
		I	FUMDIS1	F	001	FUMES DISPOSAL
		I	FLXCP01	F	001	FLEXIBLE COUPLING
		I	COUHUB0	F	001	COUPLING HUB
		I	JWHD002	F	001	JACKET WATER HEATER - DUAL
		I	ALT2412	F	001	CHARGING ALTERNATOR 24V 60 AMP
		I	BARGP01	F	001	ENGINE BARRING GROUP
		I	1200RPM	F	001	1200 RPM
		I	MSPETEP	F	001	PETROLEUM EPG
		I	SWPENG2	F	001	SHRINK WRAP ENGINE ONLY
		I	LITENGE	F	001	EXTRA ENGLISH LITERATURE
		I	MSCPB12	F	001	DRILLING
		I	MWCODEE	F	001	PRIME POWER
		I	SET6013	F	001	915 BHP (682 BKW) W/O FAN
		I	DPX0002	F	001	DOMESTIC PACK FOR EXPORT
		I	3508B	F	001	3508B DIESEL ENGINE
		I	HP00915	F	001	915 BHP (682 BKW) W/O FAN
		I	LELEENG	F	001	LAND ELECTRIC ENGINE
		I	0V-8707	F	001	DTO QUOTE DESIGN FEE
						<b>PART NUMBERS</b>
		I	LA4457	03	001	3508B DITA OIL FIELD LAND RIG-

	NPR	IY	<a href="#">174-4949</a>	10	001	ENGINE AR
	NPR	IY	<a href="#">4W-2767</a>	00	001	CONTACTOR GP
	NPR	IY	<a href="#">5N-2438</a>	05	001	LINES GP-FLEXIBLE FUEL
	NPR	IY	<a href="#">5N-2457</a>	05	001	FITTING GP-EXHAUST
		I	5N-7558		001	NOTE - ASSEMBLY INSTRUCTIONS.
		I	5N-9635		001	CONVENIENCE NUM
		I	5N-9949		001	CONVENIENCE NUMB
		I	5P-2506	00	001	LITERATURE GP
	NPR	I	5P-2586	04	001	OIL
	NPR	IY	<a href="#">7C-0330</a>	07	001	CONTROL GP-AIR STARTING
	NPR	IY	<a href="#">7C-3371</a>	01	001	STARTING MOTOR GP-AIR
	NPR	IY	<a href="#">7E-6469</a>	09	001	MOUNTING GP-CONTACTOR
	NPR	IY	<a href="#">7N-6782</a>	08	001	INDICATOR GP-AIR FILTER CHANGE
	NPR	IY	<a href="#">7N-6962</a>	06	001	FLANGE GP-EXHAUST
	NPR	IY	<a href="#">7N-6968</a>	05	001	FITTING GP-EXHAUST
	NPR	IY	<a href="#">8N-9303</a>	08	001	AIR CLEANER GP
	NPR	IY	<a href="#">8N-9639</a>	04	001	GUARD GP-DAMPER
	NPR	IY	<a href="#">107-2855</a>	05	001	MOUNTING GP-INSTRUMENT PANEL
	NPR	IY	<a href="#">112-6597</a>	03	001	SILENCER GP-AIR STARTING
	NPR	IY	<a href="#">115-1064</a>	03	001	PUMP GP-FUEL PRIMING
	NPR	IY	<a href="#">115-5164</a>	02	001	BOX & MOUNTING GP
	NPR	IY	<a href="#">115-7841</a>	18	001	FILTER GP-ENGINE OIL
	NPR	IY	<a href="#">125-7089</a>	12	001	BOX GP-INSTRUMENT PANEL
	NPR	IY	<a href="#">134-6315</a>	02	001	WIRING GP-PANEL
	NPR	IY	<a href="#">163-1462</a>	01	001	SENSOR & MTG GP-ELECTRIC
	NPR	IY	<a href="#">176-1673</a>	01	001	REGULATOR GP-TEMPERATURE
	NPR	IY	<a href="#">210-6112</a>	03	001	DRAIN GP-ENGINE OIL
	NPR	IY	<a href="#">7W-9269</a>	07	001	LINES GP-AIR STARTING
	NPR	IY	<a href="#">253-7393</a>	00	001	WIRING GP-ENGINE
	NPR	IY	<a href="#">263-6853</a>	02	001	FILTER GP-FUEL
	NPR	IY	<a href="#">274-5749</a>	00	001	SHUTOFF GP-AIR
	NPR	IY	<a href="#">7W-7214</a>	04	001	GUARD GP-BELT
	NPR	IY	<a href="#">7W-3953</a>	09	001	DRIVE GP-FAN
	NPR	IY	<a href="#">7W-5639</a>	03	001	FAN GP-BLOWER
	NPR	IY	<a href="#">7W-5227</a>	01	001	PULLEY GP-FAN DRIVE
	NPR	IY	<a href="#">7W-6372</a>	04	001	CONNECTION GP-WATER

	NPR	IY	<a href="#">9Y-9173</a>	04	001	LINES GP-WATER
	NPR	IY	<a href="#">165-6634</a>	02	001	SENSOR GP-COOLANT LEVEL
		I	LA3242	02	001	ENGINE GOVERNOR CONVERSION
	NPR	IY	<a href="#">7W-3355</a>	05	001	SENSOR GP-SPEED
		I	176-1690	00	001	TEST-DIRECT F
	NPR	IY	<a href="#">180-7385</a>	01	001	CONTROL GP-CONVERTER
		I	LA1061	05	001	FUMES DISPOSAL
	NPR	IY	<a href="#">9Y-5563</a>	02	001	FUMES DISPOSAL GP
	NPR	IY	<a href="#">120-9818</a>	06	001	FUMES DISPOSAL GP
		I	PL1736	17	001	FLEXIBLE COUPLING
	NPR	IY	<a href="#">3N-8647</a>	05	001	FASTENER GP-COUPLING
	NPR	IY	<a href="#">3N-5765</a>	06	001	GUARD GP-COUPLING
		I	3N-9755	00	001	INSTRUCTIONS
	NPR	IY	<a href="#">3N-5764</a>	02	001	GUARD GP-EXTENSION
	NPR	IY	<a href="#">5N-3765</a>	10	001	COUPLING GP-FLEXIBLE
	NPR	IY	<a href="#">4P-9064</a>	00	001	GUARD GP-EXTENSION
	NPR	IY	<a href="#">3N-5596</a>	07	001	HUB-FLEXIBLE COUPLING
		I	PA4389	08	001	JACKET WATER HEATER - DUAL
	NPR	IY	<a href="#">6I-1039</a>	06	001	MOUNTING GP-JACKET WTR HEATER
	NPR	IY	<a href="#">6I-1040</a>	07	001	MOUNTING GP-JACKET WTR HEATER
	NPR	IY	<a href="#">200-6504</a>	01	001	HEATER GP-JACKET WATER
		I	LA1661	04	001	CHARGING ALT 24V 60 AMP
	NPR	IY	<a href="#">7E-2858</a>	05	001	ALTERNATOR GP-CHARGING
	NPR	IY	<a href="#">7E-4836</a>	08	001	MOUNTING GP-ALTERNATOR
	NPR	IY	<a href="#">7W-5780</a>	05	001	GUARD GP-BELT
	NPR	IY	<a href="#">166-4357</a>	00	001	DRIVE GP-ACCESSORY
	NPR	IY	<a href="#">5R-7425</a>	05	001	BARRING GP
		I	0V-1055		001	END USE: PETROLEUM EPG
		I	0P-7577		001	SHRINK WRAP PROTECTION - 3508
		I	0P-9715		001	EXTRA LITERATURE - ENGLISH
		I	LL5328	01	001	915 BHP 600 GEN KW W/F 60 HZ
		I	0K-3602		001	682 KW (915 BHP) @ 1200 RPM
		I	0P-1914		001	DOMESTIC PACK FOR EXPORT
		I	PA1966	10	001	RAILS
	NPR	IY	<a href="#">7W-3725</a>	03	001	RAIL GP-ENGINE SUPPORT
		I	0V-2319		001	DTO P/N 163-4269 COVER GROUP

## SHIPPED LOOSE

	S	ESO	001	(PRNT ESO COPY)
	S	PML	001	*REQUIRED DECALS
	<u>NPR</u>	S 0S-1571	008	BOLT
	<u>NPR</u>	S 0S-1588	008	BOLT
	<u>NPR</u>	S 0S-1589	012	BOLT
	<u>NPR</u>	S 0S-1591	008	BOLT
	<u>NPR</u>	S 0S-1594	016	BOLT
	<u>NPR</u>	S 0S-1621	010	BOLT
	<u>NPR</u>	S 1A-8537	012	BOLT
	<u>NPR</u>	S 1V-0623	008	PLATE
	<u>NPR</u>	S 2N-3385	016	NUT-CLIP
	<u>NPR</u>	S 2N-8928	004	CLIP
	<u>NPR</u>	S 3B-4506	016	LOCKWASHER
	<u>NPR</u>	S 3B-4508	010	LOCKWASHER
	<u>NPR</u>	S 3L-9689	016	WASHER
	<u>NPR</u>	SY <u>3N-5596</u>	001	HUB-FLEXIBLE COUPLING
	<u>NPR</u>	S 3N-5708	001	GUARD AS-EXTENSION
	<u>NPR</u>	SY <u>3N-5764</u>	001	GUARD GP-EXTENSION
	<u>NPR</u>	SY <u>3N-5765</u>	001	GUARD GP-COUPLING
	<u>NPR</u>	S 3N-6504	001	HOSE AS
	<u>NPR</u>	S 3N-6666	001	COUPLING-DRIVE
	<u>NPR</u>	SY <u>3N-8647</u>	001	FASTENER GP-COUPLING
		S 3N-9755	001	INSTRUCTIONS
	<u>NPR</u>	S 3V-3308	008	WASHER-HARD
	<u>NPR</u>	S 4B-4280	010	WASHER
	<u>NPR</u>	S 4D-3704	024	WASHER-HARD
	<u>NPR</u>	S 4P-9063	001	GUARD AS-EXTENSION
	<u>NPR</u>	SY <u>4P-9064</u>	001	GUARD GP-EXTENSION
	<u>NPR</u>	S 4V-8198	008	SPACER
	<u>NPR</u>	S 5F-5990	002	CLIP
	<u>NPR</u>	S 5L-3773	001	GASKET-EXHAUST ELBOW
	<u>NPR</u>	S 5M-2894	012	WASHER-HARD
	<u>NPR</u>	SY <u>5N-2438</u>	001	LINES GP-FLEXIBLE FUEL
	<u>NPR</u>	SY <u>5N-2457</u>	001	FITTING GP-EXHAUST
	<u>NPR</u>	S 5N-3272	003	BOOT-RUBBER COUPLING

	NPR	S	5N-3274	001	PLATE
	NPR	S	5N-3284	001	COUPLING-OUTER
	NPR	SY	<u>5N-3765</u>	001	COUPLING GP-FLEXIBLE
	NPR	S	5N-4817	001	GUARD AS-COUPLING
	NPR	S	5N-5561	002	LUBRICANT-SILICONE
	NPR	S	5P-0597	001	CLAMP-HOSE
	NPR	S	5P-1472	290	HOSE
	NPR	S	6F-5985	001	HOSE AS
		SY	<u>6L-4502</u>	001	CHART-PLATE & FILM
	NPR	S	6V-8801	004	NUT
	NPR	S	7N-5971	001	ADAPTER
	NPR	S	7N-6954	001	FLANGE
	NPR	S	7N-6957	001	GASKET
	NPR	SY	<u>7N-6962</u>	001	FLANGE GP-EXHAUST
	NPR	SY	<u>7N-6968</u>	001	FITTING GP-EXHAUST
	NPR	SY	<u>7W-5639</u>	001	FAN GP-BLOWER
	NPR	SY	<u>7W-9269</u>	001	LINES GP-AIR STARTING
	NPR	S	8C-6913	008	WASHER-HARD
	NPR	S	8N-1186	001	HOSE AS
	NPR	S	8N-1663	001	BOOT
	NPR	S	8N-2555	002	FILTER-SOOT
	NPR	SY	<u>8N-9303</u>	001	AIR CLEANER GP
	NPR	S	8T-4223	006	WASHER-HARD
	NPR	S	8T-4835	006	BOLT
	NPR	S	8T-4896	004	WASHER-HARD
	NPR	S	8T-6762	001	PLUG-PIPE
	NPR	S	9B-7237	008	BOLT
	NPR	S	9H-0846	002	SEAL-O-RING
	NPR	S	9S-8752	008	NUT-FULL
	NPR	S	9X-8872	008	BOLT-LOCKING
	NPR	SY	<u>9Y-5563</u>	001	FUMES DISPOSAL GP
	NPR	S	115-1783	001	SPIDER AS-FAN
	NPR	SY	<u>125-7089</u>	001	BOX GP-INSTRUMENT PANEL
	NPR	SY	<u>165-6634</u>	001	SENSOR GP-COOLANT LEVEL
	NPR	S	201-8899	008	BOLT-12 POINT HEAD
	NPR	S	214-6045	001	BELLOWS AS



S	LEXM0051	001	IMO TECH DOC
S	RENR1243	001	SMGP
S	SEBU6251	001	LUBE
S	SEBU6916	002	OMM
S	SELF5397	001	WARRANTY
S	SERP2734	002	PTSCD
S	SMBU6981	002	SUPP

Key:

I Installed

Y Separate Illustration

S Shipped Loose