

3516B GENERATOR SET
 Engine Serial Prefix - ZAP (Built – 2006)

▼ ENGINE - ENTIRE GROUP (ZAP)

Qty.	NPR	Note	Part No.	Change Level	Req. Qty	Part Name
						FEATURE CODES
		I	516DE3R	F	001	3516B, 60HZ, 1800RPM PGS 3R
		I	ACLDE04	F	001	AIR CLEANER - DUAL ELEMENT 04
		S	EXCEL13	F	001	ELBOW, 406 MM (16 IN)
		S	EXCFL10	F	001	FLANGE, 406 MM (16 IN)
		S	EXCFF20	F	001	FLEXIBLE FITTING - 8 INCH DUAL
		S	MUF0030	F	001	MUFFLER - 16" MODULAR
		S	EXCYA06	F	001	Y ADAPTER - 8 X 16
		S	FWS0004	F	001	WATER SEPARATOR
		S	BTC1005	F	001	BATTERY CHARGER 10 AMP
		I	ELSM246	F	001	HD ELEC STRTNG MOTOR DUAL 24V
		I	JWHD004	F	001	JACKET WATER HEATER-DUAL
		I	CT35006	F	001	CURRENT TRANSF., 3500:5 RATIO
		I	EMCP33B	F	001	EMCP 3.3 CONTROL PANEL - B
		I	BOTCBLR	F	001	BOTTOM CBL ENTRY NO SHROUD STD
		I	AUXPNLL	F	001	AUXILIARY PLATE MOUNTING - LH
		I	BUSBL6S	F	001	5000A LV BUS BARS RH(NEMA) STD
		I	CUSTCNR	F	001	CUSTOMER CONNECTION MTG RH STD
		I	NOENCPB	F	001	NO ENCLOSURE REAR (STANDARD)
		I	NOENCPL	F	001	NO ENCLOSURE LEFT (STANDARD)
		I	UIPBHHS	F	001	CONTROL PANEL MOUNT REAR (STD)
		I	60H-0480	F	001	60HZ 480 VOLTS
		I	MSEPGGN	F	001	GENERAL EPG
		I	MSCEC76	F	001	MANUFACTURING
		I	MWCODEE	F	001	PRIME POWER
		I	KW01825	F	001	1825 EKW W/FAN
		I	DPX0002	F	001	DOMESTIC PACK FOR EXPORT
		I	3516B	F	001	3516B NON EPA - EXPORT ONLY
		I	NONULL	F	001	NON UL 2200 LISTED PKG GEN SET
		I	PRIMEPA	F	001	PRIME POWER APPLICATION
		I	LOWBSFC	F	001	LOW BSFC

PART NUMBERS

	I	GZ0117	06	001	3516B, 60HZ, 1800RPM PGS 3R
<u>NPR</u>	IRY	<u>256-0758</u>	06	001	ENGINE AR
	I	3L-0284		001	*****TEST - PKG GEN SET*****
<u>NPR</u>	IY	<u>262-8106</u>	00	001	GENERATOR AR
<u>NPR</u>	IY	<u>252-5590</u>	01	001	FASTENER GP-GENERATOR COUPLING
	I	3L-0414		001	SINGLE BEARING GEN ALIGN-3500
	I	252-7405	00	001	***** TEST - GEN ELE SYS LE *
<u>NPR</u>	SY	<u>7W-0825</u>	01	002	CABLE GP-BATTERY
<u>NPR</u>	SY	<u>3N-7056</u>	00	002	SUPPORT GP-BATTERY
<u>NPR</u>	SY	<u>7L-7871</u>	09	002	BATTERY GP
<u>NPR</u>	IY	<u>240-0740</u>	01	001	SWITCH GP-DISCONNECT
<u>NPR</u>	IY	<u>245-0000</u>	02	001	BOX GP-CONTROL PANEL
<u>NPR</u>	IY	<u>245-0087</u>	04	001	MOUNTING GP-CONTROL PANEL
<u>NPR</u>	IY	<u>245-0095</u>	01	001	WIRING GP-GENERATOR
<u>NPR</u>	IY	<u>245-0082</u>	01	001	CONTROL GP-GENERATOR SET
<u>NPR</u>	IY	<u>252-7367</u>	01	003	MOUNTING GP-PANEL
<u>NPR</u>	IY	<u>252-7409</u>	01	001	FASTENER GP-WIRING HARNESS
<u>NPR</u>	IY	<u>245-0092</u>	02	001	WIRING GP-GENERATOR
<u>NPR</u>	IY	<u>245-0003</u>	04	001	BOX GP-EXTENSION TERMINAL
<u>NPR</u>	IY	<u>269-3488</u>	02	001	COVER GP-GENERATOR
<u>NPR</u>	IY	<u>252-7438</u>	03	002	PLUG GP-BOX
<u>NPR</u>	IY	<u>252-7343</u>	02	001	BUS BAR GP-BOX
<u>NPR</u>	IY	<u>252-7372</u>	01	001	WIRING GP-GENERATOR
<u>NPR</u>	IY	<u>252-7418</u>	03	001	WIRING GP-GENERATOR
<u>NPR</u>	IY	<u>252-7556</u>	00	002	COVER GP-CONTROL PANEL
<u>NPR</u>	IY	<u>260-6666</u>	04	001	CONNECTION GP-GENERATOR LEADS
<u>NPR</u>	IY	<u>252-7411</u>	07	001	GROUND GP-ELECTRICAL
<u>NPR</u>	IY	<u>245-0001</u>	00	001	COVER GP-CONTROL PANEL
<u>NPR</u>	IY	<u>245-0013</u>	01	001	COVER GP-GENERATOR
<u>NPR</u>	IY	<u>245-0007</u>	01	002	COVER GP-GENERATOR
<u>NPR</u>	IY	<u>245-0023</u>	01	001	COVER GP-CONTROL PANEL
<u>NPR</u>	IY	<u>245-0027</u>	03	001	COVER GP-ENCLOSURE
<u>NPR</u>	IY	<u>245-0096</u>	00	001	COVER GP-EXTENSION BOX
<u>NPR</u>	IY	<u>245-0025</u>	00	001	COVER GP-EXTENSION BOX
<u>NPR</u>	IY	<u>245-0024</u>	00	001	COVER GP-ENCLOSURE
<u>NPR</u>	IY	<u>246-9375</u>	04	001	WIRING GP-SENSOR

	NPR	IY	259-2168	02	001	SENSOR GP-TEMPERATURE
	NPR	IY	245-0031	02	001	WIRING GP-ENGINE
		I	252-7392	00	001	INSTRUCTIONS
		I	252-7394	00	001	INSTRUCTIONS
		I	252-7396	02	001	INSTRUCTIONS-GOV
		I	252-7400	01	001	NOTE-BUSS BAR MOUNTING
	NPR	IY	249-0309	01	001	RADIATOR GP
	NPR	IY	212-4694	01	001	DRIVE GP-FAN
	NPR	IY	256-0625	02	001	PULLEY GP-FAN DRIVE
	NPR	IY	250-9694	03	001	CONVERSION AR-ENGINE
	NPR	SY	256-3172	02	001	MOUNTING GP-RADIATOR
	NPR	IY	121-3356	06	001	SENSOR & MTG GP-RADIATOR
	NPR	IY	268-4442	02	001	DRAIN GP-ENGINE OIL
	NPR	I	5P-2586	04	416	OIL
	NPR	IY	147-3738	02	001	VALVE GP-FLUID SAMPLING
	NPR	IY	7N-6782	08	001	INDICATOR GP-AIR FILTER CHANGE
	NPR	IY	208-0821	00	001	LINES GP-AIR
	NPR	SY	5N-2438	05	001	LINES GP-FLEXIBLE FUEL
	NPR	IY	115-1063	04	001	PUMP GP-FUEL PRIMING
	NPR	IY	120-9818	06	002	FUMES DISPOSAL GP
	NPR	SY	9Y-5563	03	002	FUMES DISPOSAL GP
	NPR	IY	245-8742	00	001	RAIL GP-ENGINE & GEN SUPPORT
	NPR	SY	256-3168	01	001	MOUNTING GP-ENGINE FLEXIBLE
	NPR	IY	244-4064	02	001	MOUNTING GP-RAIL
	NPR	IY	197-9052	00	001	GUARD GP-DAMPER
	NPR	IY	252-7700	00	001	PLUG GP-BOX
	NPR	IY	241-0235	00	001	WIRING GP-ELECTRIC STARTING
	NPR	IY	242-7068	00	001	WIRING GP-ELECTRIC STARTING
	NPR	IY	205-7860	08	001	FILM GP
	NPR	IY	3N-8594	06	005	COVER GP-ENGINE LIFTING EYE
		I	LE0104	01	001	AIR CLEANER - DUAL ELEMENT
	NPR	IY	212-4620	02	001	MOUNTING GP-AIR CLEANER
		I	LE0138	00	001	FITTING ARRANGEMENT - EXHAUST
	NPR	SY	111-4986	00	001	ELBOW-EXHAUST
		I	LE0143	00	001	406MM (16 INCH) FLANGE GP
	NPR	SY	103-6668	02	003	FLANGE GP-EXHAUST

	I	LE2003	00	001	FLEXIBLE FITTING - 8 INCH DUAL
<u>NPR</u>	SY	<u>5N-2457</u>	05	004	FITTING GP-EXHAUST
	I	LE2002	01	001	MUFFLER GP - SIZE 16" MODULAR
<u>NPR</u>	SY	<u>110-8066</u>	05	001	MUFFLER
	I	LE2009	00	001	Y ADAPTER - 8 X 16
<u>NPR</u>	SY	<u>124-0104</u>	02	001	FLANGE GP-EXHAUST
	I	LE0196	01	001	FUEL WATER SEPARATOR
<u>NPR</u>	SY	<u>233-7973</u>	01	001	SEPARATOR GP-WATER
	I	LE0162	01	001	BATTERY CHARGER - 10 AMP
<u>NPR</u>	SY	<u>7W-0408</u>	01	001	BATTERY CHARGER
	I	LE0175	03	001	HEAVY DUTY ELECTRIC STARTING
<u>NPR</u>	IY	<u>8N-3896</u>	16	001	STARTING MOTOR GP-ELECTRIC
	I	LE0214	02	001	HEATER AR - JACKET WATER
<u>NPR</u>	IY	<u>134-3160</u>	08	001	MOUNTING GP-JACKET WTR HEATER
<u>NPR</u>	IY	<u>166-6652</u>	07	001	MOUNTING GP-JACKET WTR HEATER
<u>NPR</u>	IY	<u>200-6504</u>	01	002	HEATER GP-JACKET WATER
	I	GC2903	00	001	MOUNTING GP-CT (3500:5)
<u>NPR</u>	IY	<u>252-7332</u>	03	001	TRANSFORMER GP-CURRENT
	I	GC3238	01	001	EMCP3.3
<u>NPR</u>	I	254-6368	04	001	ELECTRONICS GP-GENERATOR SET
<u>NPR</u>	IY	<u>245-0030</u>	07	001	PANEL GP-CONTROL
<u>NPR</u>	IY	<u>245-0035</u>	08	001	BOX GP-ELECTRONIC
	S	244-9655	01	001	INSTRUCTIONS
	I	GC2501	01	001	BOTTOM CBL ENTRY NO SHROUD STD
	I	252-7502	04	001	INSTRUCTIONS
	I	5N-9597		001	VOLTAGE INDICATOR 480V, 60HZ
	I	0V-1065		001	END USE: GENERAL EPG
	I	LL5681	00	001	2628 BHP 1825 GEN KW W/F 60 HZ
	I	0K-6890		001	1960 KW (2628 BHP) @ 1800 RPM
	I	5N-9582		001	LOW BSFC STRATEGY
	I	0P-1914		001	DOMESTIC PACK FOR EXPORT
	S	5N-6957	01	001	LITERATURE GP
					SHIPPED LOOSE
	S	ESO		001	(PRNT ESO COPY)
	S	PML		001	*REQUIRED DECALS
<u>NPR</u>	S	0S-1571		032	BOLT

	NPR	S	0S-1588	032	BOLT
	NPR	S	0S-1590	016	BOLT
	NPR	S	0S-1594	008	BOLT
	NPR	S	1S-5772	001	GASKET
	NPR	S	2J-3506	048	NUT-FULL
	NPR	S	2N-8928	008	CLIP
	NPR	S	2V-7397	002	CABLE AS
	NPR	S	3K-1715	002	CABLE AS
	NPR	S	3N-6504	001	HOSE AS
	NPR	S	3N-7054	002	SUPPORT AS-BATTERY
	NPR	S	3N-7055	002	BOARD
	NPR	SY	3N-7056	001	SUPPORT GP-BATTERY
	NPR	S	3V-3308	032	WASHER-HARD
	NPR	S	3V-6785	002	CABLE AS
	NPR	S	5F-5990	002	CLIP
	NPR	S	5L-3773	004	GASKET-EXHAUST ELBOW
	NPR	SY	5N-2438	001	LINES GP-FLEXIBLE FUEL
	NPR	SY	5N-2457	001	FITTING GP-EXHAUST
	NPR	S	5P-0597	002	CLAMP-HOSE
	NPR	S	5P-1472	580	HOSE
	NPR	S	5P-8248	096	WASHER-HARD
		SY	6L-4502	001	CHART-PLATE & FILM
	NPR	S	6V-8801	008	NUT
	NPR	SY	7L-7871	001	BATTERY GP
	NPR	S	7N-5274	002	COVER AS-TERMINAL
	NPR	SY	7W-0408	001	BATTERY CHARGER
	NPR	SY	7W-0825	001	CABLE GP-BATTERY
	NPR	S	8L-8413	004	STRAP-CABLE
	NPR	S	8N-0869	002	COVER-TERMINAL
	NPR	S	8N-1186	001	HOSE AS
	NPR	S	8N-1663	002	BOOT
	NPR	S	8N-1725	002	COVER AS-TERMINAL
	NPR	S	8N-6432	001	ADAPTER
	NPR	S	8T-4131	010	NUT
	NPR	S	8T-4896	016	WASHER-HARD
	NPR	S	9B-7237	008	BOLT

	<u>NPR</u>	S	9G-0003	004	COVER AS-TERMINAL
	<u>NPR</u>	S	9G-0004	004	COVER AS-TERMINAL
	<u>NPR</u>	S	9G-8909	002	COVER-TERMINAL
	<u>NPR</u>	S	9S-8752	032	NUT-FULL
	<u>NPR</u>	S	9X-8887	048	BOLT
	<u>NPR</u>	S	9X-9720	004	BATTERY
	<u>NPR</u>	SY	<u>9Y-5563</u>	001	FUMES DISPOSAL GP
	<u>NPR</u>	SY	<u>103-6668</u>	001	FLANGE GP-EXHAUST
	<u>NPR</u>	SY	<u>110-8066</u>	001	MUFFLER
	<u>NPR</u>	SY	<u>111-4986</u>	001	ELBOW-EXHAUST
	<u>NPR</u>	SY	<u>124-0104</u>	001	FLANGE GP-EXHAUST
	<u>NPR</u>	S	133-6479	003	FLANGE-EXHAUST
	<u>NPR</u>	S	133-6480	003	GASKET
	<u>NPR</u>	S	133-6485	001	ADAPTER AS-EXHAUST
	<u>NPR</u>	S	168-7790	010	BOLT
	<u>NPR</u>	S	177-1452	010	WASHER-HARD
	<u>NPR</u>	SY	<u>214-6045</u>	004	BELLOWS AS
	<u>NPR</u>	SY	<u>233-7973</u>	001	SEPARATOR GP-WATER
	<u>NPR</u>	SY	<u>256-3168</u>	001	MOUNTING GP-ENGINE FLEXIBLE
	<u>NPR</u>	SY	<u>256-3172</u>	001	MOUNTING GP-RADIATOR
		S	259-2174	010	MOUNT-ISOLATION
		S	SERP4057	001	PTSCD
		S	SSBU6251	001	LUBE
		S	SSBU7789	001	OMM

Key: