

3516C GENERATOR SET

Engine Serial Number - SBK (Build Date - 03/2011, Test Date - 03/2011)

▼ ENGINE - ENTIRE GROUP (SBK)

| <u>Qty.</u> | <u>NPR</u> | <u>Note</u> | <u>Part No.</u> | <u>Change Level</u> | <u>Req. Qty</u> | <u>Part Name</u> |
|--------------------------|------------|-------------|-----------------|---------------------|-----------------|--------------------------------|
| | | | | | | FEATURE CODES |
| <input type="checkbox"/> | | I | 516DE5U | F | 001 | 3516C HD, 60HZ, 1800RPM PGS 5U |
| <input type="checkbox"/> | | S | VIBRM10 | F | 001 | VIBRATION ISOLATOR REMOVAL 10 |
| <input type="checkbox"/> | | I | BATRM01 | F | 001 | BATRM01 |
| <input type="checkbox"/> | | I | NOEUCRT | F | 001 | NO EU CERT REQUEST-SEE DETAILS |
| <input type="checkbox"/> | | S | BTC20A2 | F | 001 | BATTERY CHARGER 20 AMP |
| <input type="checkbox"/> | | I | ELSM246 | F | 001 | HD ELEC STRTNG MOTOR DUAL 24V |
| <input type="checkbox"/> | | S | BAT2417 | F | 001 | 24V BAT SET-DRY 2600 CCA |
| <input type="checkbox"/> | | I | ALT2496 | F | 001 | CHARGING ALTERNATOR-45AMP 96 |
| <input type="checkbox"/> | | I | GENRTD3 | F | 001 | GEN MON 2 BEARING RANDOM WOUN3 |
| <input type="checkbox"/> | | S | EMCP33A | F | 001 | EMCP 3.3 CONTROL PANEL |
| <input type="checkbox"/> | | I | OVDGRS1 | F | 001 | RAISE/LOWER SWITCH HV |
| <input type="checkbox"/> | | I | HRNCN01 | F | 001 | 50 FOOT INTERCONNECT B |
| <input type="checkbox"/> | | I | CCT1511 | F | 001 | CCCT, 150:5 RATIO 15 |
| <input type="checkbox"/> | | I | JWHWP53 | F | 001 | JKT WATER HTR W/PUMP 208V 53 |
| <input type="checkbox"/> | | I | PRIMEPA | F | 001 | PRIME POWER APPLICATION |
| <input type="checkbox"/> | | I | CERTESE | F | 001 | EPA EMERGENCY STATIONARY ONLY |
| <input type="checkbox"/> | | I | 60H13K8 | F | 001 | 60HZ 13800 VOLTS |
| <input type="checkbox"/> | | I | TRSGEN7 | F | 001 | PGS TEST REPORT @ 0.8 PF |
| <input type="checkbox"/> | | I | SWP0001 | F | 001 | SHRINK WRAP PRO - 3516 |
| <input type="checkbox"/> | | I | MWCODEF | F | 001 | STANDBY POWER |
| <input type="checkbox"/> | | I | MSCP13 | F | 001 | AUXILIARY |
| <input type="checkbox"/> | | I | KW02250 | F | 001 | 2250 EKW W/FAN |
| <input type="checkbox"/> | | I | MSPETPG | F | 001 | PETRO PRODUCTION/PUMPING |
| <input type="checkbox"/> | | I | ESCNONE | F | 001 | NO EXTENDED SERVICE COVERAGE |
| <input type="checkbox"/> | | I | NONULL | F | 001 | NON UL 2200 LISTED PKG GEN SET |
| <input type="checkbox"/> | | | OTO8060 | F | 001 | OTO8060 |
| <input type="checkbox"/> | | I | 0V-2834 | F | 001 | ENGINEERING FEE |

| | | | | | |
|--|---------------------|------------------------------|----|-----|------------------------------|
| | I | 334-1011 | F | 001 | OTO8059 |
| | I | 0V-2330 | F | 001 | DTO QUOTE CORRECTION |
| | NPR | ILY 250-9694 | F | 001 | CONVERSION AR-ENGINE |
| | NPR | ILY 330-3343 | F | 001 | MOUNTING GP-BRACKET |
| | NPR | ILY 270-3507 | F | 001 | RADIATOR GP |
| | NPR | ILY 212-4694 | F | 001 | DRIVE GP-FAN |
| | NPR | ILY 121-3356 | F | 001 | SENSOR & MTG GP-RADIATOR |
| | NPR | SLY 282-8315 | F | 001 | LINES GP-AIR |
| | NPR | ILY 356-1648 | F | 001 | GUARD GP-LINES |
| | NPR | IY 4P-7072 | F | 001 | CONNECTION GP-WATER |
| | I | 0V-3410 | F | 001 | PETROLEUM PACKAGING |
| | I | 0V-3410 | F | 001 | PETROLEUM PACKAGING |
| | N | 0V-8707 | F | 001 | DTO QUOTE DESIGN FEE |
| | N | 0V-8707 | F | 001 | DTO QUOTE DESIGN FEE |
| | I | 0V-2834 | F | 001 | ENGINEERING FEE |
| | I | 0V-2834 | F | 001 | ENGINEERING FEE |
| | N | 0V-8707 | F | 001 | DTO QUOTE DESIGN FEE |
| | IL | 0V-2834 | F | 001 | ENGINEERING FEE |
| | IL | 0V-2834 | F | 001 | ENGINEERING FEE |
| | IL | 0V-2834 | F | 001 | ENGINEERING FEE |
| | IL | 334-1011 | F | 001 | OTO8059 |
| | I | 0V-2834 | F | 001 | ENGINEERING FEE |
| | I | 0V-2787 | F | 001 | END USE: PETRO DRILLING |
| | I | 0V-2788 | F | 001 | PETRO PRODUCTION/PUMPING |
| | | | | | PART NUMBERS |
| | I | LA5453 | 00 | 001 | 3516C HD 2500SC2 HV GEN SE |
| | NPR | IY 120-9818 | 06 | 003 | FUMES DISPOSAL GP |
| | NPR | IY 166-5183 | 00 | 001 | CONNECTION GP-TERMINAL STRIP |
| | NPR | IY 197-9052 | 02 | 001 | GUARD GP-DAMPER |
| | NPR | IY 205-7860 | 10 | 001 | FILM GP |
| | NPR | IY 207-1346 | 03 | 001 | PUMP GP-FUEL PRIMING |
| | NPR | IY 208-0820 | 05 | 001 | MOUNTING GP-AIR CLEANER |
| | NPR | IY 240-0740 | 02 | 001 | SWITCH GP-DISCONNECT |
| | NPR | IY 241-0235 | 00 | 001 | WIRING GP-ELECTRIC STARTING |
| | NPR | IY 242-7068 | 00 | 001 | WIRING GP-ELECTRIC STARTING |
| | NPR | IY 245-8735 | 00 | 001 | RAIL GP-ENGINE & GEN SUPPORT |

| | | | | | |
|---------------------|----|--------------------------|----|-----|--------------------------------|
| | I | 252-7405 | 00 | 001 | ***** TEST - GEN ELE SYS LE * |
| NPR | SY | 255-5437 | 05 | 001 | PANEL GP-ELECTRONIC |
| NPR | IY | 256-0514 | 03 | 001 | PANEL GP-ELECTRICAL |
| NPR | IY | 258-5570 | 01 | 002 | COVER GP-CONTROL PANEL |
| NPR | IY | 259-2168 | 03 | 001 | SENSOR GP-TEMPERATURE |
| NPR | IY | 260-1317 | 01 | 001 | BOX GP-ELECTRONIC |
| NPR | I | 262-4854 | 02 | 001 | FILM GP-CONTROL |
| NPR | IY | 266-6136 | 12 | 001 | ENGINE AR |
| NPR | IY | 268-3901 | 01 | 001 | BOX GP-EXTENSION TERMINAL |
| NPR | IY | 268-4442 | 03 | 001 | DRAIN GP-ENGINE OIL |
| NPR | IY | 278-3526 | 03 | 001 | LINES GP-AIR |
| NPR | SY | 282-0929 | 01 | 001 | FUMES DISPOSAL GP |
| NPR | SY | 286-2586 | 00 | 001 | LINES GP-FUEL |
| NPR | I | 292-2494 | 02 | 001 | HARNES AS-WIRING |
| NPR | IY | 310-7699 | 00 | 001 | INSTALLATION AR-GENERATOR |
| NPR | IY | 311-1156 | 00 | 001 | GENERATOR AR |
| NPR | IY | 313-6506 | 01 | 001 | BOX GP-JUNCTION |
| NPR | IY | 324-3897 | 02 | 001 | RELAY GP |
| | I | 3L-0284 | | 001 | *****TEST - PKG GEN SET***** |
| | I | 3L-0467 | | 001 | TWO BEARING GEN ALIGNMENT-3500 |
| NPR | SY | 3N-7056 | 00 | 002 | SUPPORT GP-BATTERY |
| NPR | IY | 3N-8594 | 06 | 005 | COVER GP-ENGINE LIFTING EYE |
| | S | 5P-2506 | 00 | 001 | LITERATURE GP |
| NPR | I | 5P-2586 | 05 | 481 | OIL |
| NPR | IY | 7N-6782 | 08 | 001 | INDICATOR GP-AIR FILTER CHANGE |
| NPR | SY | 7W-0825 | 02 | 002 | CABLE GP-BATTERY |
| NPR | IY | 7W-6669 | 01 | 001 | GUARD GP-DAMPER |
| | I | GZ0292 | 01 | 001 | VIBRATION ISOLATOR REMOVAL |
| | I | LE0952 | 04 | 001 | REMOVAL AR, BATTERIES, CABLES, |
| NPR | I | 357-1662 | 01 | 001 | PLATE & FILM GP |
| NPR | SY | 286-0177 | 00 | 001 | BATTERY CHARGER |
| | I | LE0175 | 03 | 001 | HEAVY DUTY ELECTRIC STARTING |
| NPR | IY | 8N-3896 | 19 | 001 | STARTING MOTOR GP-ELECTRIC |
| | I | LE0176 | 06 | 001 | OVERSIZE BATTERY - 2600CCA |
| NPR | SY | 7L-7872 | 09 | 002 | BATTERY GP |
| | I | GZ0290 | 01 | 001 | ALTERNATOR-CHARGING |

| | | | | | | |
|--|---------------------|----|--------------------------|----|-----|--------------------------------|
| | NPR | IY | 107-7361 | 06 | 001 | DRIVE GP-ACCESSORY |
| | NPR | IY | 5N-5692 | 14 | 001 | ALTERNATOR GP-CHARGING |
| | NPR | IY | 7E-4836 | 11 | 001 | MOUNTING GP-ALTERNATOR |
| | NPR | IY | 271-9270 | 04 | 001 | GUARD GP-BELT |
| | NPR | IY | 126-9191 | 05 | 001 | GROUND GP-ELECTRICAL |
| | NPR | IY | 133-6468 | 01 | 001 | WIRE AS-GROUND |
| | NPR | IY | 241-0243 | 00 | 001 | WIRING GP-ALTERNATOR |
| | NPR | IY | 151-9228 | 03 | 001 | GUARD GP-BELT |
| | | I | GC2987 | 00 | 001 | GENERATOR MONITORING PACKAGE |
| | NPR | IY | 259-5806 | 04 | 001 | WIRING GP-PANEL |
| | | I | GC2980 | 01 | 001 | EMCP 3.3 CONTROL PANEL - HV |
| | NPR | IY | 271-5426 | 06 | 001 | CONTROL GP-GENERATOR SET |
| | NPR | I | 254-6368 | 06 | 001 | ELECTRONICS GP-GENERATOR SET |
| | | I | GC2982 | 00 | 001 | RAISE/LOWER SWITCH |
| | NPR | IY | 271-1775 | 02 | 001 | SWITCH GP-TOGGLE |
| | | I | GC2973 | 00 | 001 | 50' INTERCONNECT |
| | NPR | SY | 255-8884 | 02 | 001 | HARNESS AS-PANEL |
| | | I | LE0455 | 00 | 001 | CROSS CURRENT COMPENSATION TRA |
| | NPR | IY | 139-0380 | 02 | 001 | TRANSFORMER GP-CURRENT |
| | | I | GP1292 | 01 | 001 | JKT WATER HTR W/PUMP 208V 53 |
| | NPR | IY | 330-3345 | 01 | 001 | HEATER GP-JACKET WATER |
| | NPR | IY | 307-8458 | 01 | 001 | MOUNTING GP-JACKET WTR HEATER |
| | NPR | I | 313-5252 | 01 | 001 | CONNECTION GP-WATER |
| | | I | 9Y-8155 | 04 | 001 | NOTE-STAMP FOR PRIME POWER |
| | | I | 366-2120 | 00 | 001 | CERTIFICATION - EMERGENCY STBY |
| | | I | 5N-9605 | | 001 | VOLTAGE INDICATOR 13800V, 60HZ |
| | | I | 0P-1793 | | 001 | ***GEN SET TEST CHG @ 0.8 PF** |
| | | I | 0P-7607 | | 001 | SHRINK WRAP PROTECTION - 3516 |
| | | I | LL6013 | 00 | 001 | 3273 BHP 2250 GEN KW W/F 60 HZ |
| | | I | 0K-8523 | | 001 | 2441 BKW (3273 BHP) @ 1800 RPM |
| | | I | 0V-3462 | | 001 | EPA TIER II - NONROAD |
| | | I | 0V-2788 | | 002 | PETRO PRODUCTION/PUMPING |
| | | I | 0V-2330 | | 001 | DTO QUOTE CORRECTION |
| | NPR | IY | 4P-7072 | 04 | 001 | CONNECTION GP-WATER |
| | | I | 0V-3410 | | 002 | PETROLEUM PACKAGING |

| | | | | |
|--|---------------------|----------------------------|-----|-----------------------------|
| | N | 0V-8707 | 003 | DTO QUOTE DESIGN FEE |
| | I | 0V-2834 | 001 | ENGINEERING FEE |
| | I | 0V-2787 | 001 | END USE: PETRO DRILLING |
| | | | | SHIPPED LOOSE |
| | S | | 001 | PACK IN CARTON ONLY INFO(A) |
| | S | ESO | 001 | (PRNT ESO COPY) |
| | S | PML | 001 | *REQUIRED DECALS |
| | NPR | S 0S-1594 | 002 | BOLT |
| | NPR | S 1W-8129 | 001 | SUPPORT |
| | NPR | S 2N-2107 | 003 | CLIP |
| | NPR | S 2N-8928 | 014 | CLIP |
| | NPR | S 2P-1293 | 002 | LOCKNUT |
| | NPR | S 2V-7397 | 002 | CABLE AS |
| | NPR | S 3K-1715 | 002 | CABLE AS |
| | NPR | S 3N-7054 | 002 | SUPPORT AS-BATTERY |
| | NPR | S 3N-7055 | 002 | BOARD |
| | NPR | SY 3N-7056 | 001 | SUPPORT GP-BATTERY |
| | NPR | S 3V-6785 | 002 | CABLE AS |
| | NPR | S 4L-6454 | 002 | BOLT |
| | NPR | S 5P-0597 | 003 | CLAMP-HOSE |
| | NPR | S 5P-1472 | 260 | HOSE |
| | NPR | S 5P-2566 | 002 | BOLT |
| | NPR | S 5S-7383 | 001 | BOLT |
| | | SY 6L-4502 | 001 | CHART-PLATE & FILM |
| | NPR | S 6V-8188 | 002 | NUT |
| | NPR | S 6V-8801 | 008 | NUT |
| | NPR | S 6V-8997 | 002 | UNION |
| | NPR | S 6V-9746 | 005 | SEAL-O-RING |
| | NPR | S 6V-9853 | 001 | ELBOW |
| | NPR | S 7C-2172 | 001 | BRACKET |
| | NPR | SY 7L-7872 | 001 | BATTERY GP |
| | NPR | S 7N-5274 | 002 | COVER AS-TERMINAL |
| | NPR | SY 7W-0825 | 001 | CABLE GP-BATTERY |
| | NPR | S 7X-0294 | 005 | BOLT |
| | NPR | S 7X-0304 | 002 | BOLT |
| | NPR | S 8L-8413 | 004 | STRAP-CABLE |

| | | | | |
|---------------------|----|--------------------------|-----|---------------------|
| NPR | S | 8N-0869 | 002 | COVER-TERMINAL |
| NPR | S | 8N-1663 | 003 | BOOT |
| NPR | S | 8N-1725 | 002 | COVER AS-TERMINAL |
| NPR | S | 8T-4223 | 004 | WASHER-HARD |
| NPR | S | 8T-4896 | 020 | WASHER-HARD |
| NPR | S | 8T-9101 | 002 | BOLT |
| NPR | S | 9B-7237 | 001 | BOLT |
| NPR | S | 9G-0003 | 002 | COVER AS-TERMINAL |
| NPR | S | 9G-0004 | 002 | COVER AS-TERMINAL |
| NPR | S | 9G-8140 | 001 | SPACER |
| NPR | S | 9G-8909 | 002 | COVER-TERMINAL |
| NPR | SY | 9X-9730 | 004 | BATTERY GP |
| NPR | S | 090-8747 | 002 | SPACER |
| NPR | S | 134-9799 | 002 | PIPE |
| NPR | S | 138-3251 | 005 | SPACER |
| | S | 255-5436 | 001 | *PRT- |
| NPR | SY | 255-5437 | 001 | PANEL GP-ELECTRONIC |
| NPR | SY | 255-8884 | 001 | HARNESS AS-PANEL |
| NPR | SY | 282-0929 | 001 | FUMES DISPOSAL GP |
| NPR | S | 282-2602 | 001 | BRACKET |
| NPR | S | 285-8515 | 001 | BRACKET |
| NPR | SY | 286-0177 | 001 | BATTERY CHARGER |
| NPR | S | 286-2186 | 001 | HOSE AS |
| NPR | SY | 286-2586 | 001 | LINES GP-FUEL |
| NPR | S | 286-3257 | 001 | HOSE AS |
| | S | REN7885 | 002 | SCHEMATIC |
| | S | SEBP4371 | 002 | PTSBK |
| | S | SEBU8479 | 002 | OMM |
| | S | SELF5463 | 002 | WARRANTY 1400 (A) |
| | S | SELF9001 | 002 | SUPP 1400 (A) |