

3516B GENERATOR SET

Engine Serial Prefix - ZAP (Build Date - 10/2007, Test Date - 10/2007)

▼ ENGINE - ENTIRE GROUP (ZAP00746)

<u>Qty.</u>	<u>NPR</u>	<u>Note</u>	<u>Part No.</u>	<u>Change Level</u>	<u>Req. Qty</u>	<u>Part Name</u>
						FEATURE CODES
		I	516DE3R	F	001	3516B, 60HZ, 1800RPM PGS 3R
		I	RADS062	F	001	RAD SERPENTINE 44CTD, 0.455
		I	WTLVLS7	F	001	WATER LEVEL SWITCH GAUGE 7
		S	EXCYA06	F	001	Y ADAPTER - 8 X 16
		S	FWS0004	F	001	WATER SEPARATOR
		I	BARGP01	F	001	ENGINE BARRING GROUP
		I	MANPP03	F	001	MANUAL PRE-LUBE W/SUMP PUMP 3
		S	VIBRM09	F	001	VIBRATION ISOLATORS REMOVAL 09
		S	VIBIS18	F	001	LINEAR SPRING ISOLATORS 18
		I	RADRM73	F	001	RADIATOR REMOVAL F60CTD, 0.370
		I	BATRM01	F	001	BATRM01
		I	ELSM246	F	001	HD ELEC STRTNG MOTOR DUAL 24V
		I	JWHWP18	F	001	JWH WITH PUMP 220V 18
		I	ALT2496	F	001	CHARGING ALTERNATOR-45AMP 96
		I	CT35006	F	001	CURRENT TRANSF., 3500:5 RATIO
		I	EMCP33A	F	001	EMCP 3.3 CONTROL PANEL
		I	RSELWR1	F	001	RAISE/LOWER SWITCH
		I	EMCSD10	F	001	SPARE DISCRETE I/O PACKAGE 10
		I	RTDDIOH	F	001	OPTIONAL MODULE HARNESS
		S	LPCMONS	F	001	LOCAL PC MONITORING
		I	PANLGTS	F	001	PANEL LIGHTS
		I	BOTCBLR	F	001	BOTTOM CBL ENTRY NO SHROUD STD
		I	AUXPNLL	F	001	AUXILIARY PLATE MOUNTING - LH
		I	BUSBL6S	F	001	5000A LV BUS BARS RH(NEMA) STD
		I	CUSTCNR	F	001	CUSTOMER CONNECTION MTG RH STD
		I	NOENCPB	F	001	NO ENCLOSURE REAR (STANDARD)
		I	NOENCPL	F	001	NO ENCLOSURE LEFT (STANDARD)
		I	UIPBHHS	F	001	CONTROL PANEL MOUNT REAR (STD)
		I	60H-0480	F	001	60HZ 480 VOLTS
		I	MSEPGGN	F	001	GENERAL EPG
		I	TRSGEN2	F	001	PGS TEST REPORT @ 1.0 PF
		I	DPX0001	F	001	DOMESTIC PACK-EXPORT CONTAINER

	I	SWP0001	F	001	SHRINK WRAP PRO - 3516
	I	MSCEC76	F	001	MANUFACTURING
	I	MWCODEF	F	001	STANDBY POWER
	I	KW02000	F	001	2000 EKW W/FAN
	I	3516B	F	001	3516B NON EPA - EXPORT ONLY
	I	NONULL	F	001	NON UL 2200 LISTED PKG GEN SET
	I	STANDBY	F	001	STANDBY POWER APPLICATION
	I	LOWBSFC	F	001	LOW BSFC
					PART NUMBERS
	I	GZ0117	07	001	3516B, 60HZ, 1800RPM PGS 3R
	NPR	IRY 256-0758	07	001	ENGINE AR
		I 3L-0284		001	*****TEST - PKG GEN SET*****
	NPR	IY 262-8106	00	001	GENERATOR AR
	NPR	IY 252-5590	02	001	FASTENER GP-GENERATOR COUPLING
		I 3L-0414		001	SINGLE BEARING GEN ALIGN-3500
		I 252-7405	00	001	***** TEST - GEN ELE SYS LE *
	NPR	SY 7W-0825	01	002	CABLE GP-BATTERY
	NPR	SY 3N-7056	00	002	SUPPORT GP-BATTERY
	NPR	IY 240-0740	01	001	SWITCH GP-DISCONNECT
	NPR	IY 245-0000	02	001	BOX GP-CONTROL PANEL
	NPR	IY 245-0087	06	001	MOUNTING GP-CONTROL PANEL
	NPR	IY 245-0095	01	001	WIRING GP-GENERATOR
	NPR	IY 245-0082	02	001	CONTROL GP-GENERATOR SET
	NPR	IY 252-7367	01	003	MOUNTING GP-PANEL
	NPR	IY 252-7409	02	001	FASTENER GP-WIRING HARNESS
	NPR	IY 245-0092	02	001	WIRING GP-GENERATOR
	NPR	IY 245-0003	06	001	BOX GP-EXTENSION TERMINAL
	NPR	IY 269-3488	02	001	COVER GP-GENERATOR
	NPR	IY 252-7438	03	001	PLUG GP-BOX
	NPR	IY 252-7343	03	001	BUS BAR GP-BOX
	NPR	IY 252-7372	01	001	WIRING GP-GENERATOR
	NPR	IY 252-7418	03	001	WIRING GP-GENERATOR
	NPR	IY 252-7556	00	002	COVER GP-CONTROL PANEL
	NPR	IY 260-6666	05	001	CONNECTION GP-GENERATOR LEADS
	NPR	IY 252-7411	09	001	GROUND GP-ELECTRICAL
	NPR	IY 245-0001	00	001	COVER GP-CONTROL PANEL
	NPR	IY 245-0013	01	001	COVER GP-GENERATOR
	NPR	IY 245-0007	01	002	COVER GP-GENERATOR
	NPR	IY 245-0023	01	001	COVER GP-CONTROL PANEL
	NPR	IY 245-0027	03	001	COVER GP-ENCLOSURE

	NPR	IY	245-0096	00	001	COVER GP-EXTENSION BOX
	NPR	IY	245-0025	00	001	COVER GP-EXTENSION BOX
	NPR	IY	245-0024	00	001	COVER GP-ENCLOSURE
	NPR	IY	259-2168	03	001	SENSOR GP-TEMPERATURE
	NPR	IY	245-0031	02	001	WIRING GP-ENGINE
		I	252-7392	00	001	INSTRUCTIONS
		I	252-7394	00	001	INSTRUCTIONS
		I	252-7396	02	001	INSTRUCTIONS-GOV
		I	252-7400	01	001	NOTE-BUSS BAR MOUNTING
	NPR	I	5P-2586	04	416	OIL
	NPR	IY	147-3738	02	001	VALVE GP-FLUID SAMPLING
	NPR	IY	7N-6782	08	001	INDICATOR GP-AIR FILTER CHANGE
	NPR	IY	208-0820	04	001	MOUNTING GP-AIR CLEANER
	NPR	IY	208-0821	02	001	LINES GP-AIR
	NPR	SY	5N-2438	05	001	LINES GP-FLEXIBLE FUEL
	NPR	IY	115-1063	04	001	PUMP GP-FUEL PRIMING
	NPR	IY	120-9818	06	002	FUMES DISPOSAL GP
	NPR	SY	9Y-5563	03	002	FUMES DISPOSAL GP
	NPR	IY	245-8742	00	001	RAIL GP-ENGINE & GEN SUPPORT
	NPR	IY	244-4064	02	001	MOUNTING GP-RAIL
	NPR	IY	197-9052	00	001	GUARD GP-DAMPER
		S	5P-2506	00	001	LITERATURE GP
	NPR	IY	241-0235	00	001	WIRING GP-ELECTRIC STARTING
	NPR	IY	242-7068	00	001	WIRING GP-ELECTRIC STARTING
	NPR	IY	205-7860	08	001	FILM GP
	NPR	IY	3N-8594	06	005	COVER GP-ENGINE LIFTING EYE
		I	GP0706	00	001	RADIATOR 44CTD 0.455
	NPR	IY	249-0301	01	001	RADIATOR GP
	NPR	I	101-2844	04	105	COOLANT-EXTENDED LIFE
	NPR	IY	7W-7214	05	001	GUARD GP-BELT
	NPR	IY	7W-3953	10	001	DRIVE GP-FAN
	NPR	IY	235-2324	00	001	FAN GP-BLOWER
	NPR	IY	254-2203	00	001	PULLEY GP-FAN DRIVE
	NPR	IY	121-3364	04	001	SENSOR & MTG GP-RADIATOR
	NPR	IY	251-3091	01	001	CONVERSION AR-COOLING CIRCUIT
		I	LE6936	00	001	WATER LEVEL SWITCH GAUGE
	NPR	IY	252-8801	00	001	GAUGE GP-COOLANT LEVEL
		I	LE2009	00	001	Y ADAPTER - 8 X 16
	NPR	SY	5N-2457	06	002	FITTING GP-EXHAUST
	NPR	SY	124-0104	02	001	FLANGE GP-EXHAUST

	I	LE0196	01	001	FUEL WATER SEPARATOR
	NPR	SY 233-7973	01	001	SEPARATOR GP-WATER
	NPR	IY 253-2468	01	001	BARRING GP
	I	GZ0267	00	001	MANUAL PRE-LUBE W/SUMP PUMP 3
	NPR	IY 197-7082	03	001	PUMP & LINES GP-PRELUBRICATION
	NPR	IY 201-0549	03	001	DRAIN GP-ENGINE OIL
	I	GZ0291	00	001	VIBRATION ISOLATOR REMOVAL
	I	GZ0294	01	001	ISOLATOR
	NPR	SY 276-0002	00	001	MOUNTING GP-ENGINE FLEXIBLE
	NPR	SY 276-0003	00	001	MOUNTING GP-RADIATOR
	I	GP0150	01	001	RADIATOR REMOVAL F60CTD, 0.370
	I	LE0952	04	001	REMOVAL AR, BATTERIES, CABLES,
	I	LE0175	03	001	HEAVY DUTY ELECTRIC STARTING
	NPR	IY 8N-3896	17	001	STARTING MOTOR GP-ELECTRIC
	I	GC3249	02	001	JACKET WATER HEATER W/ PUMP
	NPR	IY 291-5105	01	001	HEATER GP-JACKET WATER
	NPR	IY 269-3352	00	001	MOUNTING GP-JACKET WTR HEATER
	NPR	IY 268-9570	04	001	WIRING GP-JACKET WATER HEATER
	NPR	IY 236-8821	03	001	CONNECTION GP-WATER
	I	GZ0290	01	001	ALTERNATOR-CHARGING
	NPR	IY 107-7361	04	001	DRIVE GP-ACCESSORY
	NPR	IRY 5N-5692	12	001	ALTERNATOR GP-CHARGING
	NPR	IY 7E-4836	10	001	MOUNTING GP-ALTERNATOR
	NPR	IY 271-9270	02	001	GUARD GP-BELT
	NPR	IY 126-9191	05	001	GROUND GP-ELECTRICAL
	NPR	IY 133-6468	01	001	WIRE AS-GROUND
	NPR	IY 241-0243	00	001	WIRING GP-ALTERNATOR
	NPR	IY 151-9228	02	001	GUARD GP-BELT
	I	GC2903	00	001	MOUNTING GP-CT (3500:5)
	NPR	IY 252-7332	03	001	TRANSFORMER GP-CURRENT
	I	GC3238	01	001	EMCP3.3
	NPR	I 254-6368	05	001	ELECTRONICS GP-GENERATOR SET
	NPR	IY 245-0030	08	001	PANEL GP-CONTROL
	NPR	IY 245-0035	10	001	BOX GP-ELECTRONIC
	S	244-9655	01	001	INSTRUCTIONS
	I	GC2995	00	001	RAISE/LOWER SWITCH
	NPR	IY 267-8475	00	001	WIRING GP-GENERATOR
	I	GC5037	00	001	SPARE DISCRETE I/O PACKAGE
	NPR	IY 252-7347	01	001	WIRING GP-PANEL
	I	GC2963	00	001	OPTIONAL MODULE HARNESS

	NPR	IY	252-7362	00	001	WIRING GP-PANEL
		I	GC3243	01	001	LOCAL PC MONITORING
	NPR	SY	270-0476	00	001	ADAPTER GP-COMMUNICATION
		I	GC2991	01	001	PANEL LIGHTS
	NPR	IY	269-7022	00	001	LIGHTING GP-GENERATOR
		I	GC2501	01	001	BOTTOM CBL ENTRY NO SHROUD STD
		I	252-7502	04	001	INSTRUCTIONS
		I	5N-9597		001	VOLTAGE INDICATOR 480V, 60HZ
		I	0V-1065		001	END USE: GENERAL EPG
		I	0P-1910		001	PGS TEST REPORT @ 1.0 PF
		I	0P-7824		001	DOMESTIC PACK-EXPORT CONTAINER
		I	0P-7607		001	SHRINK WRAP PROTECTION - 3516
		I	LL5670	01	001	2876 BHP 2000 GEN KW W/F
		I	0K-6352		001	2145 BKW (2876 BHP) @ 1800 RPM
		I	5N-9582		001	LOW BSFC STRATEGY
						SHIPPED LOOSE
		S	ESO		001	(PRNT ESO COPY)
		S	PML		001	*REQUIRED DECALS
	NPR	S	0S-1571		016	BOLT
	NPR	S	0S-1588		016	BOLT
	NPR	S	0S-1590		016	BOLT
	NPR	S	0S-1594		008	BOLT
	NPR	S	1S-5772		001	GASKET
	NPR	S	2J-3506		016	NUT-FULL
	NPR	S	2N-8928		008	CLIP
	NPR	S	3K-1715		002	CABLE AS
	NPR	S	3N-6504		001	HOSE AS
	NPR	S	3N-7054		002	SUPPORT AS-BATTERY
	NPR	S	3N-7055		002	BOARD
	NPR	SY	3N-7056		001	SUPPORT GP-BATTERY
	NPR	S	3V-3308		016	WASHER-HARD
	NPR	S	3V-6785		002	CABLE AS
	NPR	S	5F-5990		002	CLIP
	NPR	S	5L-3773		002	GASKET-EXHAUST ELBOW
	NPR	SY	5N-2438		001	LINES GP-FLEXIBLE FUEL
	NPR	SY	5N-2457		001	FITTING GP-EXHAUST
	NPR	S	5P-0597		002	CLAMP-HOSE
	NPR	S	5P-1472		580	HOSE
	NPR	S	5P-7197		010	WASHER
	NPR	S	5P-8248		032	WASHER-HARD

	SY	6L-4502	001	CHART-PLATE & FILM
	NPR	S 6V-8801	008	NUT
	NPR	S 7N-5274	002	COVER AS-TERMINAL
	NPR	SY 7W-0825	001	CABLE GP-BATTERY
	NPR	S 8N-0869	002	COVER-TERMINAL
	NPR	S 8N-1186	001	HOSE AS
	NPR	S 8N-1663	002	BOOT
	NPR	S 8N-1725	002	COVER AS-TERMINAL
	NPR	S 8N-6432	001	ADAPTER
	NPR	S 8T-4896	016	WASHER-HARD
	NPR	S 9B-7237	008	BOLT
	NPR	S 9G-8909	002	COVER-TERMINAL
	NPR	S 9S-8752	016	NUT-FULL
	NPR	S 9X-8887	016	BOLT
	NPR	SY 9Y-5563	001	FUMES DISPOSAL GP
	NPR	SY 124-0104	001	FLANGE GP-EXHAUST
	NPR	S 133-6479	001	FLANGE-EXHAUST
	NPR	S 133-6480	001	GASKET
	NPR	S 133-6485	001	ADAPTER AS-EXHAUST
	NPR	S 153-3864	010	MOUNT AS
	NPR	S 153-3865	002	MOUNT AS
	NPR	SY 214-6045	002	BELLOWS AS
	NPR	SY 233-7973	001	SEPARATOR GP-WATER
	NPR	S 245-3512	002	GASKET
	NPR	S 270-0475	001	ADAPTER-COMMUNICATION
	NPR	SY 270-0476	001	ADAPTER GP-COMMUNICATION
	NPR	SY 276-0002	001	MOUNTING GP-ENGINE FLEXIBLE
	NPR	SY 276-0003	001	MOUNTING GP-RADIATOR
		S SEBU6251	001	LUBE 140019B2(A)
		S SEBU7789	001	OMM
		S SELF5405	001	WARRANTY
		S SERP4057	001	PTSCD