

3516B GEN SET ENGINE

Engine Serial Prefix - 7RN (Build Date - 03/2000, Test Date - 03/2000, Ship Date - 03/2000)

▼ ENGINE - ENTIRE GROUP (7RN)

<u>Qty.</u>	<u>NPR</u>	<u>Note</u>	<u>Part No.</u>	<u>Change Level</u>	<u>Req. Qty</u>	<u>Part Name</u>
						FEATURE CODES
		I	KW01825	F	001	1825 EKW W/FAN
		I	516DE54	F	001	3516B 1825 EKW 60 HZ - LO BSFC
		I	OGNP008	F	001	GENERATOR 826 FRAME PM 2 BRG
		I	RPA0063	F	001	825 FRAME GENERATOR REMOVAL
		I	EMCENGU	F	001	ENGLISH DISPLAY UNITS
		I	EMCAM06	F	001	ALARM MODULE - NFPA 99
		I	EMCPLAR	F	001	PANEL LIGHTS/AUXILIARY RELAY
		I	CLSSTND	F	001	COOLANT LOSS SENSING
		I	EMCCIM1	F	001	CUSTOMER INTERFACE MODULE-CIM
		I	ALSLSM1	F	001	LOAD SHARE MODULE
		I	SHREL01	F	001	SPACE HEATER RELAY
		I	RRM0027	F	001	RADIATOR REMOVAL 46/CV, 0.428
		I	CLS0001	F	001	COOLANT LEVEL SENSOR
		I	JWHD001	F	001	JACKET WATER HEATER - DUAL
		I	FPPRH01	F	001	FUEL PRIMING PUMP, RH MOUNTED
		I	FUMDIS4	F	001	FUMES DISPOSAL
		I	OPADRN4	F	001	OIL PAN DRAIN VALVE
		I	OLVLRG1	F	001	OIL LEVEL REGULATOR
		I	LUBOIL1	F	001	LUBRICATING OIL
		I	ELSDLH1	F	001	ELEC START MTR LH DUAL 24V
		I	BAT2401	F	001	24 VOLT BATTERY SET - DRY
		I	60H-0480	F	001	60HZ 480 VOLTS
		I	MSEPGGN	F	001	GENERAL EPG
		I	3516B	F	001	3516B DIESEL ENGINE
		I	LOWBSFC	F	001	LO BSFC
		I	60HERTZ	F	001	60 HERTZ
		I	PRIMEPA	F	001	PRIME POWER APPLICATION
		I	EMCPTWO	F	001	ELECTRONIC MODULAR CONTROL PNL
		I	NORAD	F	001	NO RADIATOR
						PART NUMBERS
		I	LL5048	02	001	2628 BHP 1880 GEN KW WOF 60 HZ
		I	LA3035	01	001	3516B 1825 EKW 60 HZ - LO BSFC
	<u>NPR</u>	IY	<u>159-8836</u>	01	001	ENGINE AR
		I	3L-0432		001	TEST - PKG GEN SET (EMCP II)

	NPR	IY	5N-2438	05	001	LINES GP-FLEXIBLE FUEL
		I	5N-9582		001	LOW BSFC STRATEGY
		I	5P-2506	00	001	LITERATURE GP
	NPR	IY	7N-6782	08	001	INDICATOR GP-AIR FILTER CHANGE
	NPR	IY	8N-9639	04	001	GUARD GP-DAMPER
	NPR	I	104-4704	03	001	MOUNTING GP-CONTROL PANEL
	NPR	IY	113-1581	00	001	AIR CLEANER GP
	NPR	IY	115-3613	01	001	MOUNTING GP-AIR CLEANER
	NPR	IY	121-4450	10	001	PANEL GP-CONTROL
	NPR	IY	121-8856	06	001	CONNECTION GP-ELECTRICAL
	NPR	IY	126-9191	02	001	GROUND GP-ELECTRICAL
	NPR	IY	134-0061	04	001	WIRING GP-ENGINE
	NPR	I	141-1809	01	001	BOX GP-GENERATOR CONNECTION
		I	3L-0456		001	PROCEDURE - DVR PROG AND TEST
	NPR	I	121-6202	06	001	REGULATOR GP-VOLTAGE
	NPR	I	145-5138	00	001	WIRING GP-ELECTRONIC CONTROL
		I	LA1849	05	001	GENERATOR 826 FRAME PM 2 BRG
		I	3L-0467		001	TWO BEARING GEN ALIGNMENT-3500
	NPR	I	104-6203	05	001	INSTALLATION AR-GENERATOR
	NPR	IY	115-7046	01	001	RAIL GP-ENGINE SUPPORT
	NPR	I	144-1826	03	001	GENERATOR AR
		I	159-7447	00	001	INSTRUCTIONS
		I	LA3033	01	001	GENERATOR REMOVAL - 825 FRAME
		I	121-4713	00	001	INSTRUCTIONS
	NPR	IY	121-4716	01	001	MODULE GP-ALARM
	NPR	IY	121-4712	01	001	PANEL GP-ELECTRONIC
		I	139-1129	00	001	COOLANT SENSING PROGRAM
	NPR	I	9Y-6496	02	001	MODULE GP-INTERFACE
		I	LA0498	06	001	LOAD SHARE MODULE
	NPR	IY	149-6326	02	001	GOVERNOR GP-ELECTRONIC
	NPR	I	122-0335	02	001	RELAY GP
		I	PA3069	08	001	RADIATOR REMOVAL 46/CV, 0.428
	NPR	IY	111-3794	00	001	SENSOR GP-COOLANT LEVEL
		I	PA4355	05	001	JACKET WATER HEATER - DUAL
	NPR	IY	7E-6247	03	001	HEATER GP-JACKET WATER
	NPR	IY	6I-1043	03	001	MOUNTING GP-JACKET WTR HEATER
	NPR	IY	6I-1044	07	001	MOUNTING GP-JACKET WTR HEATER
	NPR	IY	115-1063	02	001	PUMP GP-FUEL PRIMING
		I	LA1060	05	001	FUMES DISPOSAL
	NPR	IY	9Y-5563	00	001	FUMES DISPOSAL GP

	NPR	IY	120-9818	04	001	FUMES DISPOSAL GP
	NPR	IY	9Y-7876	01	001	DRAIN GP-ENGINE OIL
	NPR	IY	5N-4659	06	001	REGULATOR GP-OIL LEVEL
		I	PA5313	05	001	LUBRICATING OIL
	NPR	I	5P-2586	03	001	OIL
		I	PA1772	06	001	ELECTRIC STARTING MOTOR LH
	NPR	IY	8N-3896	14	001	STARTING MOTOR GP-ELECTRIC
	NPR	IY	7L-7872	08	001	BATTERY GP
		I	5N-9597		001	VOLTAGE INDICATOR 480V, 60HZ
		I	0V-1065		001	0V1065 ENDUSE:GENERAL EPG
		I	LL5048	02	001	2628 BHP 1880 GEN KW WOF 60 HZ
		I	0K-1138	00	001	1960 KW @ 1800 RPM (2628 BHP)
						SHIPPED LOOSE
	NPR	S	0S-1588		008	BOLT
	NPR	S	2N-8928		008	CLIP
	NPR	S	2V-7397		001	CABLE AS
	NPR	S	3N-6504		001	HOSE AS
	NPR	S	5F-5990		002	CLIP
	NPR	S	5M-2894		016	WASHER-HARD
	NPR	S	5P-0597		002	CLAMP-HOSE
	NPR	S	5P-1472		580	HOSE
	NPR	S	6V-2687		002	SCREW-PAN HEAD
	NPR	S	8L-8413		002	STRAP-CABLE
	NPR	S	8N-1186		001	HOSE AS
	NPR	S	8N-1663		002	BOOT
	NPR	S	9G-0003		002	COVER AS-TERMINAL
	NPR	S	9G-0004		002	COVER AS-TERMINAL
	NPR	S	9S-8752		008	NUT-FULL
	NPR	S	9X-0203		001	MODULE GP-RELAY DRIVER
	NPR	SY	9X-9730		002	BATTERY GP
	NPR	SY	9Y-6497		001	BOARD AS-RELAY
		S	9Y-9892		001	INSTRUCTIONS
	NPR	SY	111-3794		001	SENSOR GP-COOLANT LEVEL
	NPR	S	171-6719		001	KIT-PARTS
	NPR	SY	171-6721		001	KIT-PARTS
		S	SEBP2414		001	PTSBK
		S	SEBP2416		001	PTSBK
		S	SEBU6042		001	SUPP
		S	SEBU6251		001	LUBE
		S	SEBU6916		001	OMM



S	SEBU6918	001	OMM
S	SEBU6984	001	SUPP
S	SELF5260	001	WARRANTY 140013C2(A)
S	SELS0086	001	S.I.
S	SENR4794	001	SCHEMATIC
S	ESO	001	(PRNT ESO COPY)
S	PML	001	*REQUIRED DECALS