

3516B GEN SET ENGINE

Engine Serial Prefix - 6HN (Build Date - 05/1997, Test Date - 05/1997, Ship Date - 06/1997)

▼ ENGINE - ENTIRE GROUP (6HN)

<u>Qty.</u>	<u>NPR</u>	<u>Note</u>	<u>Part No.</u>	<u>Change Level</u>	<u>Req. Qty</u>	<u>Part Name</u>
		I	LA1288	06	001	<b>PART NUMBERS</b> 3516B 2000 EKW 60 HZ - LO BSFC
	<a href="#">NPR</a>	IY	<a href="#">128-2847</a>	03	001	ENGINE AR
		I	3L-0414		001	SINGLE BEARING GEN ALIGN-3500
		I	3L-0432		001	TEST - PKG GEN SET (EMCP II
		I	5N-9582		001	LOW BSFC - 3500B SERIES.
		I	5P-2506	00	001	LITERATURE GP
	<a href="#">NPR</a>	IY	<a href="#">7C-0527</a>	02	001	STARTING MOTOR GP-ELECTRIC
	<a href="#">NPR</a>	IY	<a href="#">7N-6782</a>	07	001	INDICATOR GP-AIR FILTER CHANGE
	<a href="#">NPR</a>	IY	<a href="#">7W-6669</a>	01	001	GUARD GP-DAMPER
	<a href="#">NPR</a>	I	7W-8708	00	001	INSTALLATION AR-GENERATOR
	<a href="#">NPR</a>	IY	<a href="#">8N-9639</a>	04	001	GUARD GP-DAMPER
	<a href="#">NPR</a>	IRY	<a href="#">9X-9591</a>	01	001	CONVERTER GP-ELECTRICAL
	<a href="#">NPR</a>	I	9Y-0532	01	001	GENERATOR AR
	<a href="#">NPR</a>	I	104-4704	03	001	MOUNTING GP-CONTROL PANEL
	<a href="#">NPR</a>	IY	<a href="#">113-1581</a>	00	001	AIR CLEANER GP
	<a href="#">NPR</a>	IY	<a href="#">115-3613</a>	01	001	MOUNTING GP-AIR CLEANER
	<a href="#">NPR</a>	I	115-7182	01	001	RAIL GP-ENGINE SUPPORT
	<a href="#">NPR</a>	IY	<a href="#">121-4450</a>	05	001	PANEL GP-CONTROL
	<a href="#">NPR</a>	IY	<a href="#">121-8856</a>	02	001	CONNECTION GP-ELECTRICAL
	<a href="#">NPR</a>	IY	<a href="#">126-9191</a>	02	001	GROUND GP-ELECTRICAL
	<a href="#">NPR</a>	IY	<a href="#">130-8002</a>	00	001	WIRING GP-ENGINE
	<a href="#">NPR</a>	IY	<a href="#">134-0054</a>	00	001	WIRING GP-ENGINE
	<a href="#">NPR</a>	I	115-3056	01	001	CONNECTION GP-TERMINAL STRIP
	<a href="#">NPR</a>	I	141-1809	00	001	BOX GP-GENERATOR CONNECTION
	<a href="#">NPR</a>	I	141-1810	00	001	MOUNTING GP-TRANSFORMER
	<a href="#">NPR</a>	I	141-4987	00	001	COVER GP-GENERATOR
	<a href="#">NPR</a>	I	144-9062	00	001	TRANSFORMER GP-CURRENT
		I	LA0427	06	001	CHARGING ALTERNATOR 24V 35AMP
	<a href="#">NPR</a>	IY	<a href="#">7C-4803</a>	02	001	ALTERNATOR GP-CHARGING
	<a href="#">NPR</a>	IY	<a href="#">7E-4836</a>	03	001	MOUNTING GP-ALTERNATOR
	<a href="#">NPR</a>	IY	<a href="#">7W-5780</a>	03	001	GUARD GP-BELT
	<a href="#">NPR</a>	IY	<a href="#">107-7361</a>	01	001	DRIVE GP-ACCESSORY

	<a href="#">NPR</a>	IY	<a href="#">133-6468</a>	00	001	WIRE AS-GROUND
	<a href="#">NPR</a>	IY	<a href="#">111-3794</a>	00	001	SENSOR GP-COOLANT LEVEL
	<a href="#">NPR</a>	IY	<a href="#">121-3327</a>	03	001	PUMP GP-FUEL PRIMING
	<a href="#">NPR</a>	IY	<a href="#">5N-2438</a>	05	001	LINES GP-FLEXIBLE FUEL
		I	LA1449	00	001	GENERATOR CONVERSION
	<a href="#">NPR</a>	I	128-2540	03	001	CONVERSION GP-GENERATOR
		I	LA0456	00	001	DIGITAL VOLTAGE REGULATOR
	<a href="#">NPR</a>	I	121-6202	03	001	REGULATOR GP-VOLTAGE
	<a href="#">NPR</a>	IY	<a href="#">121-4712</a>	01	001	PANEL GP-ELECTRONIC
		I	121-4713	00	001	INSTRUCTIONS
	<a href="#">NPR</a>	I	9Y-6496	02	001	MODULE GP-INTERFACE
		I	139-1129	00	001	COOLANT LOSS SENSING
	<a href="#">NPR</a>	IY	<a href="#">121-4716</a>	01	001	MODULE GP-ALARM
		I	LA1060	01	001	FUMES DISPOSAL
	<a href="#">NPR</a>	IY	<a href="#">9Y-5563</a>	00	001	FUMES DISPOSAL GP
	<a href="#">NPR</a>	IY	<a href="#">120-9818</a>	03	001	FUMES DISPOSAL GP
	<a href="#">NPR</a>	IY	<a href="#">9Y-7876</a>	00	001	DRAIN GP-ENGINE OIL
		I	PA5313	03	001	LUBRICATING OIL
	<a href="#">NPR</a>	I	5P-2586	03	001	OIL
		I	LA1296	01	001	RADIATOR REMOVAL 46CV, 0.428
	<a href="#">NPR</a>	IY	<a href="#">112-3513</a>	00	001	CIRCUIT BREAKER AS
		I	5N-9597		001	VOLTAGE INDICATOR - 480 VOLT
		I	0P-8707		001	_____QUOTE NO.
		I	PP3636	02	001	2876 BHP 2060 GEN KW WOF 60 HZ
		I	2T-8461	00	001	2145 KW @ 1800 RPM (2876 BHP)
	<a href="#">NPR</a>	I	132-3796	00	001	SOFTWARE GP-ELECTRONIC
	<a href="#">NPR</a>	I	138-1385	00	001	SOFTWARE GP-ELECTRONIC

Key:

I Installed

Y Separate Illustration

R REMFG PART MAY BE AVAILABLE