

G3408C GAS ENGINE

Engine Serial Prefix - BAZ (Build Date - 10/2004, Test Date - 10/2004)

▼ ENGINE - ENTIRE GROUP (BAZ)

<u>Qty.</u>	<u>NPR</u>	<u>Note</u>	<u>Part No.</u>	<u>Change Level</u>	<u>Req. Qty</u>	<u>Part Name</u>
						<b>FEATURE CODES</b>
		I	408GIS5	F	001	G3408C LE INDUSTRIAL ENGINE 05
		I	ALT2475	F	001	CHARGING ALTERNATOR 24V 60AMP
		I	AMM2401	F	001	AMMETER GAUGE 24 V
		I	BTRCBL1	F	001	BATTERY CABLES
		I	BTR0001	F	001	BATTERY RACK
		I	BAT2401	F	001	24 VOLT BATTERY SET - DRY
		I	AIARM10	F	001	AIR INLET ADAPTER
		I	ACLRCP3	F	001	AIR CLEANER RAIN CAP
		I	LUBOIL9	F	001	LUBRICATING OIL
		I	1800RPM	F	001	1800 RPM
		I	ELSM247	F	001	ELECTRIC STARTING MOTOR 24V 7
		I	GOVSC14	F	001	PROACT SPEED CONTROL 14
		I	NOCSA01	F	001	CSA IGNITION NOT DESIRED
		I	OPDS001	F	001	DEEP SUMP PAN
		I	MSEPGGN	F	001	GENERAL EPG
		I	SOCSS01	F	001	CUSTOMER SUPPLIED SHUTOFF
		I	MSCEC73	F	001	RESIDENTIAL BUILDINGS
		I	MWCODEH	F	001	COGENERATION
		I	PSTSPCL	F	001	*SPECIAL SETTING REQUEST* 01
		I	COMRA06	F	001	8.5:1 COMPRESSION RATIO
		I	EMISS03	F	001	LOW EMISSION LEVEL
		I	LOPRESS	F	001	LOW PRESSURE GAS
		I	NGASFUE	F	001	NATURAL GAS FUEL
		I	NOAFRC1	F	001	A/F RATIO CONT NOT DESIRED
		I	RATSPEC	F	001	SPECIAL RATING REQUEST
		I	SOVCU01	F	001	CUST. SUPPLIED SHUT OFF VALVE
	<a href="#">NPR</a>	ILY	<a href="#">194-0882</a>	F	001	BOX GP-CONTROL PANEL
	<a href="#">NPR</a>	IY	<a href="#">195-8022</a>	F	001	HARNESS AS-WIRING

	I	259-4627	F	001	MOUNTING GP
<a href="#">NPR</a>	I	136-6924	F	001	PANEL GP-CONTROL
<a href="#">NPR</a>	I	121-6200	F	001	REGULATOR GP-VOLTAGE
<a href="#">NPR</a>	IY	<a href="#">248-4905</a>	F	001	WIRING GP-PANEL
<a href="#">NPR</a>	I	255-7954	F	001	BASE GP-ENGINE & GENERATOR
<a href="#">NPR</a>	I	240-6833	F	001	HARNESS AS-WIRING
<a href="#">NPR</a>	I	115-5122	F	001	GENERATOR AR
<a href="#">NPR</a>	IY	<a href="#">103-0692</a>	F	001	VALVE GP-SOLENOID
	I	3L-0414	F	001	SINGLE BEARING GEN ALIGN-3500
<a href="#">NPR</a>	I	4P-3359	F	001	COUPLING GP-GENERATOR
	I	PA4442	F	001	WIDE STRUCTURAL STEEL BASE
	I	0V-2330	F	001	DTO QUOTE CORRECTION
	I	0P-8910	F	001	POST SALE SPAR
					<b>PART NUMBERS</b>
	I	LA3790	00	001	G3408 LE INDUSTRIAL ENG COMPAT
<a href="#">NPR</a>	IY	<a href="#">200-8021</a>	07	001	ENGINE AR
<a href="#">NPR</a>	IY	<a href="#">2W-0587</a>	04	001	LINES GP-OIL SUPPLY
<a href="#">NPR</a>	IY	<a href="#">2W-2046</a>	08	001	LINES GP-TURBOCHARGER OIL
<a href="#">NPR</a>	IY	<a href="#">4N-2328</a>	07	001	METER GP-SERVICE
<a href="#">NPR</a>	IY	<a href="#">4P-6715</a>	02	001	MOUNTING GP-AIR CLEANER
<a href="#">NPR</a>	IY	<a href="#">4P-6717</a>	01	001	AIR CLEANER GP
	I	5P-2506	00	001	LITERATURE GP
<a href="#">NPR</a>	IY	<a href="#">7N-9078</a>	00	001	SUPPORT GP-ENGINE
<a href="#">NPR</a>	IY	<a href="#">9Y-1268</a>	03	001	PUMP GP-AUXILIARY WATER
<a href="#">NPR</a>	IY	<a href="#">9Y-9840</a>	02	001	CONVERSION GP-GOVERNOR DRIVE
	I	103-0026	01	001	PLATE & FILM GP
<a href="#">NPR</a>	IY	<a href="#">105-4663</a>	03	001	MANIFOLD GP-EXHAUST
<a href="#">NPR</a>	I	106-9222	05	001	COVER GP
<a href="#">NPR</a>	IY	<a href="#">107-7897</a>	04	001	DRIVE GP-GOVERNOR
<a href="#">NPR</a>	I	108-1655	04	001	SENSOR & MOUNTING GP
<a href="#">NPR</a>	IY	<a href="#">111-6835</a>	03	001	LINES GP-WATER
<a href="#">NPR</a>	IY	<a href="#">135-6298</a>	04	001	LINES GP-WATER
<a href="#">NPR</a>	IY	<a href="#">135-8583</a>	00	001	PULLEY GP-CRANKSHAFT
<a href="#">NPR</a>	IY	<a href="#">139-9028</a>	02	001	DAMPER & PULLEY GP
	IY	<a href="#">159-3761</a>	01	001	TURBOCHARGER GP
<a href="#">NPR</a>	IY	<a href="#">180-7977</a>	02	001	AFTERCOOLER GP-TREATED WATER

	<a href="#">NPR</a>	IY	<a href="#">223-2159</a>	02	001	IGNITION GP-GAS ENGINE
	<a href="#">NPR</a>	IY	<a href="#">183-3557</a>	04	001	LINES GP-AIR
	<a href="#">NPR</a>	IY	<a href="#">183-3904</a>	02	001	CARBURETOR GP
	<a href="#">NPR</a>	IY	<a href="#">189-4908</a>	02	001	BYPASS GP-EXHAUST
	<a href="#">NPR</a>	IY	<a href="#">214-2429</a>	03	001	LINES GP-WATER
	<a href="#">NPR</a>	IY	<a href="#">201-0383</a>	00	001	REGULATOR GP-GAS PRESSURE
	<a href="#">NPR</a>	IY	<a href="#">217-5226</a>	01	001	ACTUATOR GP-ELECTRONIC
	<a href="#">NPR</a>	IY	<a href="#">204-0329</a>	00	001	WIRING GP-ENGINE
	<a href="#">NPR</a>	IY	<a href="#">195-8026</a>	01	001	HARNESS AS-WIRING
	<a href="#">NPR</a>	IY	<a href="#">195-8033</a>	01	001	FASTENER GP-WIRING HARNESS
	<a href="#">NPR</a>	IY	<a href="#">234-6044</a>	00	001	PLUG GP-BOX
		I	LA0216	01	001	CHARGING ALTERNATOR 24V 60 AMP
	<a href="#">NPR</a>	IY	<a href="#">1W-1340</a>	03	001	MOUNTING GP-ALTERNATOR
	<a href="#">NPR</a>	IY	<a href="#">4N-3986</a>	15	001	ALTERNATOR GP-CHARGING
	<a href="#">NPR</a>	IY	<a href="#">5N-0369</a>	06	001	CIRCUIT BREAKER GP
	<a href="#">NPR</a>	IY	<a href="#">8M-7892</a>	18	001	AMMETER GP
	<a href="#">NPR</a>	IY	<a href="#">137-6876</a>	01	001	GOVERNOR AS-ELECTRONIC
		I	LA3818	00	001	MOTOR AR-ELECTRIC START FOR 70
	<a href="#">NPR</a>	IY	<a href="#">2S-7227</a>	18	001	STARTING MOTOR GP-ELECTRIC
	<a href="#">NPR</a>	IY	<a href="#">195-8030</a>	03	001	WIRING GP-ENGINE
	<a href="#">NPR</a>	I	7W-0825	01	001	CABLE GP-BATTERY
	<a href="#">NPR</a>	I	3N-7056	00	001	SUPPORT GP-BATTERY
	<a href="#">NPR</a>	I	7L-7872	09	001	BATTERY GP
	<a href="#">NPR</a>	IY	<a href="#">5N-7823</a>	01	001	ADAPTER GP-AIR CLEANER
	<a href="#">NPR</a>	IY	<a href="#">4W-0481</a>	01	001	CAP AS-AIR CLEANER
		I	LA3648	00	001	OIL-GAS ENGINE
	<a href="#">NPR</a>	I	7X-2425	02	001	OIL
		I	0P-1556		001	CUSTOMER SUPPLIED SHUTOFF
		I	0V-1065		001	END USE: GENERAL EPG
		I	5Z-3333	00	001	***SPECIAL SETTING REQUEST***
	<a href="#">NPR</a>	ILY	<a href="#">194-0915</a>	00	001	MOUNTING GP-CONTROL PANEL
	<a href="#">NPR</a>	I	146-1859	02	001	SHUTOFF GP-ELECTRICAL
		I	3L-0432		001	TEST - PKG GEN SET (EMCP II)
	<a href="#">NPR</a>	I	104-4704	03	001	MOUNTING GP-CONTROL PANEL
		I	253-2071	00	001	CONNECTION GP
	<a href="#">NPR</a>	IY	<a href="#">206-0250</a>	00	001	TRANSFORMER GP-CURRENT

	<a href="#">NPR</a>	IL	121-6202	08	001	REGULATOR GP-VOLTAGE
	<a href="#">NPR</a>	I	256-7507	01	001	HARNESS AS-WIRING
	<a href="#">NPR</a>	ILY	<a href="#">4N-4286</a>	05	001	SUPPORT GP-ENGINE
	<a href="#">NPR</a>	IY	<a href="#">160-9800</a>	00	006	PAD-ISOLATOR
		I	PA4689	01	001	JACKET WATER HEATER
	<a href="#">NPR</a>	I	4P-7352	01	001	MOUNTING GP-JACKET WTR HEATER
	<a href="#">NPR</a>	I	7E-6247	04	001	HEATER GP-JACKET WATER
	<a href="#">NPR</a>	I	6I-2656	00	001	SWITCH GP-TEMPERATURE
	<a href="#">NPR</a>	I	5N-2975	06	001	INSTALLATION AR-GENERATOR
		I	0V-2319		001	NEW UPS 150KVA 50HZ 400V 4WIRE
		I	8Q-9795	00	001	PACKAGING AR
		I	5N-7563		001	NOTE- CONTROL PANEL MTG (RH)
		I	121-4713	00	001	INSTRUCTIONS
	<a href="#">NPR</a>	IY	<a href="#">158-6171</a>	06	001	CONVERSION AR
		I	245-8400	00	001	CHART - DTO
		I	0V-8707		001	DTO QUOTE DESIGN FEE
		I	5N-9597		001	VOLTAGE INDICATOR 480V, 60HZ
		I	LL9353	00	001	425 BHP 300 GEN KW 60 HZ WOF
		I	0K-6103		001	317 BKW (425 BHP) @ 1800 RPM
						<b>SHIPPED LOOSE</b>
		S			001	
	<a href="#">NPR</a>	S	1W-8914		001	AMMETER AS
	<a href="#">NPR</a>	S	2V-7397		001	CABLE AS
	<a href="#">NPR</a>	S	3K-1715		001	CABLE AS
	<a href="#">NPR</a>	S	3N-7054		001	SUPPORT AS-BATTERY
	<a href="#">NPR</a>	S	3N-7055		001	BOARD
	<a href="#">NPR</a>	S	3V-6785		001	CABLE AS
	<a href="#">NPR</a>	SY	<a href="#">4W-0481</a>		001	CAP AS-AIR CLEANER
	<a href="#">NPR</a>	S	5N-7824		001	ADAPTER AS
	<a href="#">NPR</a>	S	5N-7830		001	GASKET
	<a href="#">NPR</a>	S	6V-3507		001	SEAL-RECTANGULAR
	<a href="#">NPR</a>	S	7N-5274		001	COVER AS-TERMINAL
	<a href="#">NPR</a>	S	8L-8413		002	STRAP-CABLE
	<a href="#">NPR</a>	S	8N-0869		001	COVER-TERMINAL
	<a href="#">NPR</a>	S	8N-1725		001	COVER AS-TERMINAL
	<a href="#">NPR</a>	S	8T-4224		048	WASHER-HARD

	<a href="#">NPR</a>	S	8T-9043	024	BOLT
	<a href="#">NPR</a>	S	9G-0003	002	COVER AS-TERMINAL
	<a href="#">NPR</a>	S	9G-0004	002	COVER AS-TERMINAL
	<a href="#">NPR</a>	S	9G-8909	001	COVER-TERMINAL
	<a href="#">NPR</a>	S	9X-9730	002	BATTERY GP
	<a href="#">NPR</a>	S	031-4155	024	LOCKNUT
	<a href="#">NPR</a>	SY	<a href="#">103-0692</a>	001	VALVE GP-SOLENOID
	<a href="#">NPR</a>	SY	<a href="#">137-6876</a>	001	GOVERNOR AS-ELECTRONIC
	<a href="#">NPR</a>	SY	<a href="#">160-9800</a>	006	PAD-ISOLATOR
		S	REHS0371	001	S.I.
		S	SEBU6042	001	SUPP
		S	SEBU6400	001	LUBE
		S	SEBU6883	001	OMM
		S	SELF5340	001	WARRANTY 140013C2(A)
		S	SENR4794	001	SCHEMATIC
		S	SERP3368	001	PTSCD
4		S	ESO	001	(PRNT ESO COPY)
		S	PML	001	*REQUIRED DECALS

Key:

I Installed

Y Separate Illustration

L Less Indicator

S Shipped Loose