

Engine Serial Number - CTF (Build Date - 10/2007, Test Date - 10/2007)

[View Latest Kit Information](#)

▼ ENGINE - ENTIRE GROUP (CTF)

<u>Qty.</u>	<u>NPR</u>	<u>Note</u>	<u>Part No.</u>	<u>Change Level</u>	<u>Req. Qty</u>	<u>Part Name</u>
						<b>FEATURE CODES</b>
		I	508DE1Q	F	001	3508MUI, 50HZ, 1000RPM PGS
		I	EMCMETU	F	001	METRIC DISPLAY UNITS 01
		I	ACLHD16	F	001	AIR CLEANER - HEAVY DUTY
		N	WTLVLS2	F	001	WATER LEVEL SWITCH GAUGE
		S	PFF0001	F	001	PRIMARY FUEL FILTER
		I	LVEXB02	F	001	LOW VOLTAGE EXTENSION BOX
		I	CAACBX1	F	001	CABLE ACCESS BOX
		I	ELSMDL0	F	001	ELEC START MTR DUAL 24V 01
		S	BTC1005	F	001	BATTERY CHARGER 10 AMP
		I	JWH0031	F	001	JACKET WATER HEATER-SGL 31
		I	LUBRM01	F	001	LUBE OIL REMOVAL
		I	SPMPMP1	F	001	SUMP PUMP MANUAL PRELUBE 01
		I	EXRVAL6	F	001	EXPLOSION RELIEF VALVE 04
		S	EXCFF12	F	001	FLEXIBLE FITTING
		I	BARGP01	F	001	ENGINE BARRING GROUP
		I	50H-0400	F	001	50HZ 400 VOLTS
		I	MSPETEP	F	001	PETROLEUM EPG
		I	TRSGEN2	F	001	PGS TEST REPORT @ 1.0 PF
		I	MSCP13	F	001	AUXILIARY
		I	MWCODEE	F	001	PRIME POWER
		I	KV00500	F	001	500 KVA W/FAN
		I	DPX0002	F	001	DOMESTIC PACK FOR EXPORT
		I	3508MUI	F	001	3508 MUI DIESEL ENGINE
		I	NONULL	F	001	NON UL 2200 LISTED PKG GEN SET
		I	PRIMEPA	F	001	PRIME POWER APPLICATION
		I	LOWBSFC	F	001	LO BSFC
		I	0V-2329	F	001	PRODUCTION CORRECTION

	<a href="#">NPR</a>	IY	<a href="#">7N-1875</a>	F	001	FILLER GP-ENGINE OIL
	<a href="#">NPR</a>	IY	<a href="#">7N-8633</a>	F	001	COVER GP-CYLINDER BLOCK
	<a href="#">NPR</a>	I	121-3553	F	001	COVER GP-CYLINDER BLOCK
	<a href="#">NPR</a>	I	101-0831	F	001	COVER GP-VALVE MECHANISM
						<b>PART NUMBERS</b>
		I	LE0041	15	001	ENGINE AR 3508 DITA PKG
	<a href="#">NPR</a>	IY	<a href="#">198-0920</a>	00	001	GENERAL AR
		I	252-5641	02	001	CONVERSION AR
	<a href="#">NPR</a>	IY	<a href="#">250-9694</a>	04	001	CONVERSION AR-ENGINE
		I	3L-0456		001	PROCEDURE - DVR PROG AND TEST
		I	3L-0467		001	TWO BEARING GEN ALIGNMENT-3500
	<a href="#">NPR</a>	S	3N-7056	00	001	SUPPORT GP-BATTERY
	<a href="#">NPR</a>	I	4W-3752	04	001	FUMES DISPOSAL GP
	<a href="#">NPR</a>	SY	<a href="#">5N-2438</a>	05	001	LINES GP-FLEXIBLE FUEL
	<a href="#">NPR</a>	IY	<a href="#">7C-6207</a>	07	001	RADIATOR GP
	<a href="#">NPR</a>	SY	<a href="#">7L-7872</a>	09	001	BATTERY GP
	<a href="#">NPR</a>	SY	<a href="#">7W-0825</a>	01	001	CABLE GP-BATTERY
	<a href="#">NPR</a>	IY	<a href="#">7W-3953</a>	10	001	DRIVE GP-FAN
	<a href="#">NPR</a>	IY	<a href="#">7W-5227</a>	01	001	PULLEY GP-FAN DRIVE
	<a href="#">NPR</a>	IY	<a href="#">7W-6669</a>	01	001	GUARD GP-DAMPER
		I	3L-0284		001	TEST - PKG GEN SET
	<a href="#">NPR</a>	IY	<a href="#">7W-7214</a>	05	001	GUARD GP-BELT
	<a href="#">NPR</a>	SY	<a href="#">8N-9567</a>	06	001	MOUNTING GP-ENGINE FLEXIBLE
	<a href="#">NPR</a>	IY	<a href="#">8N-9639</a>	04	001	GUARD GP-DAMPER
	<a href="#">NPR</a>	IY	<a href="#">9Y-4859</a>	01	001	FASTENER GP-RADIATOR
	<a href="#">NPR</a>	SY	<a href="#">9Y-5563</a>	03	001	FUMES DISPOSAL GP
	<a href="#">NPR</a>	SY	<a href="#">9Y-8234</a>	05	001	MOUNTING GP-RADIATOR
	<a href="#">NPR</a>	I	101-2844	04	067	COOLANT-EXTENDED LIFE
	<a href="#">NPR</a>	IY	<a href="#">104-4704</a>	03	001	MOUNTING GP-CONTROL PANEL
	<a href="#">NPR</a>	IY	<a href="#">247-0305</a>	04	001	INSTALLATION AR-GENERATOR
	<a href="#">NPR</a>	IY	<a href="#">108-5555</a>	07	001	SWITCH GP-DISCONNECT
	<a href="#">NPR</a>	IY	<a href="#">121-6202</a>	09	001	REGULATOR GP-VOLTAGE
	<a href="#">NPR</a>	IY	<a href="#">121-8855</a>	06	001	CONNECTION GP-ELECTRICAL
	<a href="#">NPR</a>	I	129-2244	02	001	SENSOR & MTG GP-RADIATOR
	<a href="#">NPR</a>	IY	<a href="#">138-1973</a>	08	001	GOVERNOR GP-ELECTRONIC
	<a href="#">NPR</a>	IY	<a href="#">141-1808</a>	03	001	BOX GP-GENERATOR CONNECTION

	<a href="#">NPR</a>	IY	<a href="#">147-3738</a>	02	001	VALVE GP-FLUID SAMPLING
	<a href="#">NPR</a>	IY	<a href="#">151-9228</a>	02	001	GUARD GP-BELT
		IY	<a href="#">158-6410</a>	01	001	GENERATOR AR
	<a href="#">NPR</a>	IY	<a href="#">187-6308</a>	19	001	PANEL GP-CONTROL
	<a href="#">NPR</a>	IY	<a href="#">187-6312</a>	04	001	HARNESS AS-SENSOR
	<a href="#">NPR</a>	IY	<a href="#">195-5885</a>	13	001	ENGINE AR
	<a href="#">NPR</a>	IY	<a href="#">197-5512</a>	02	001	RAIL GP-ENGINE SUPPORT
		I	198-1905	00	001	PAINT
	<a href="#">NPR</a>	IY	<a href="#">201-0549</a>	03	001	DRAIN GP-ENGINE OIL
	<a href="#">NPR</a>	IY	<a href="#">202-0052</a>	00	001	FAN GP-BLOWER
	<a href="#">NPR</a>	I	205-7860	08	001	FILM GP
	<a href="#">NPR</a>	IY	<a href="#">7W-9465</a>	08	001	PUMP GP-FUEL PRIMING
	<a href="#">NPR</a>	IY	<a href="#">3N-8594</a>	06	006	COVER GP-ENGINE LIFTING EYE
	<a href="#">NPR</a>	IY	<a href="#">241-3378</a>	02	001	WIRING GP-GENERATOR
	<a href="#">NPR</a>	IY	<a href="#">240-6833</a>	01	001	HARNESS AS-WIRING
		I	208-7482	00	001	TEST - GEN ELE SYS LE
	<a href="#">NPR</a>	IY	<a href="#">244-3831</a>	00	001	CONVERSION AR-ENGINE
	<a href="#">NPR</a>	IY	<a href="#">121-9640</a>	05	001	CONNECTION GP-ELECTRICAL
	<a href="#">NPR</a>	IY	<a href="#">154-3454</a>	02	001	TRANSFORMER GP-POTENTIAL
	<a href="#">NPR</a>	IY	<a href="#">144-9057</a>	03	001	TRANSFORMER GP-CURRENT
		I	121-4714	00	001	UNITS AS-METERIC
		I	LE0105	06	001	AIR CLEANER - HEAVY DUTY,
	<a href="#">NPR</a>	IY	<a href="#">206-7137</a>	03	001	MOUNTING GP-AIR CLEANER
	<a href="#">NPR</a>	NY	<a href="#">213-1412</a>	00	001	INDICATOR GP-AIR FILTER CHANGE
	<a href="#">NPR</a>	SY	<a href="#">289-3909</a>	01	001	AIR CLEANER GP
		I	LE0203	00	001	OPTIONAL WATER LEVEL GAGE
	<a href="#">NPR</a>	NY	<a href="#">110-5959</a>	05	001	SWITCH GP-COOLANT LEVEL
		I	LE0195	01	001	PRIMARY FUEL FILTER
	<a href="#">NPR</a>	SY	<a href="#">8N-6435</a>	02	001	FILTER GP-PRIMARY FUEL
		I	LE0608	00	001	EXTENSION BOX - LOW VOLTAGE
	<a href="#">NPR</a>	IY	<a href="#">122-3487</a>	03	001	CONVERSION GP-GENERATOR
		I	LE0609	01	001	CABLE ACCESS BOX
	<a href="#">NPR</a>	IY	<a href="#">122-1194</a>	01	001	BOX & MOUNTING GP
		I	GP0190	00	001	DUAL ELECTRIC STARTING-MUI
	<a href="#">NPR</a>	IY	<a href="#">7C-0527</a>	05	001	STARTING MOTOR GP-ELECTRIC
		I	LE0162	01	001	BATTERY CHARGER - 10 AMP

	<a href="#">NPR</a>	SY	<a href="#">7W-0408</a>	01	001	BATTERY CHARGER
		I	LE6062	01	001	JACKET WATER HEATER-SINGLE LH
	<a href="#">NPR</a>	IY	<a href="#">237-2236</a>	00	001	HEATER GP-JACKET WATER
	<a href="#">NPR</a>	IY	<a href="#">235-1223</a>	02	001	MOUNTING GP-JACKET WTR HEATER
	<a href="#">NPR</a>	IY	<a href="#">236-8821</a>	03	001	CONNECTION GP-WATER
	<a href="#">NPR</a>	SY	<a href="#">237-1971</a>	02	001	CONTACTOR GP-GENERATOR
		I	LE0971	00	001	LUBE OIL REMOVAL 01
		I	LE0183	06	001	SUMP PUMP - OPTIONAL
	<a href="#">NPR</a>	I	197-7082	03	001	PUMP & LINES GP-PRELUBRICATION
		I	LE3629	00	001	EXPLOSION RELIEF VALVE CRANKCA
	<a href="#">NPR</a>	IY	<a href="#">5N-4830</a>	19	001	VALVE GP-EXPLOSION RELIEF
		I	LE2004	00	001	FITTING GP - EXHAUST
	<a href="#">NPR</a>	SY	<a href="#">5N-2457</a>	06	001	FITTING GP-EXHAUST
	<a href="#">NPR</a>	IY	<a href="#">253-2468</a>	01	001	BARRING GP
		I	5N-9590		001	VOLTAGE INDICATOR 400V, 50HZ
		I	0V-1055		001	END USE: PETROLEUM EPG
		I	0P-1910		001	STD. GEN SET TEST CHARGE
		I	GG0144	01	001	603 BHP 400 GEN KW W/F 50 HZ
		I	0K-3209		001	450 KW @ 1000 RPM (603 BHP)
	<a href="#">NPR</a>	IY	<a href="#">107-7452</a>	06	001	TURBOCHARGER GP
		S	8N-2577	02	001	LITERATURE GP
		I	0P-1914		001	DOMESTIC PACK FOR EXPORT
	<a href="#">NPR</a>	IL	112-6033	12	001	FILLER GP-ENGINE OIL
	<a href="#">NPR</a>	IL	271-7784	03	001	COVER GP-CYLINDER BLOCK
	<a href="#">NPR</a>	IY	<a href="#">7N-1855</a>	07	001	COVER GP-VALVE MECHANISM
	<a href="#">NPR</a>	I	309-0101	01	001	FILLER GP-ENGINE OIL
						<b>SHIPPED LOOSE</b>
		S			006	
		S	ESO		001	(PRNT ESO COPY)
		S	PML		001	*REQUIRED DECALS
	<a href="#">NPR</a>	S	0S-1571		008	BOLT
	<a href="#">NPR</a>	S	0S-1588		008	BOLT
	<a href="#">NPR</a>	S	1L-3769		001	RING-RETAINING
	<a href="#">NPR</a>	S	1W-0531		001	BASE-PRIMARY FUEL FILTER
	<a href="#">NPR</a>	S	2H-3429		001	RING-RETAINING
	<a href="#">NPR</a>	S	2J-0157		001	SEAL-O-RING

	<a href="#">NPR</a>	S	2N-8928	004	CLIP
	<a href="#">NPR</a>	S	2N-9768	001	SWITCH-LIQUID LEVEL
	<a href="#">NPR</a>	S	2V-7397	001	CABLE AS
	<a href="#">NPR</a>	S	3B-6552	002	ELBOW-PIPE
	<a href="#">NPR</a>	S	3K-1715	001	CABLE AS
	<a href="#">NPR</a>	S	3N-6504	001	HOSE AS
	<a href="#">NPR</a>	S	3N-7054	001	SUPPORT AS-BATTERY
	<a href="#">NPR</a>	S	3N-7055	001	BOARD
	<a href="#">NPR</a>	S	3N-7056	001	SUPPORT GP-BATTERY
	<a href="#">NPR</a>	S	3V-3308	008	WASHER-HARD
	<a href="#">NPR</a>	S	3V-6785	001	CABLE AS
	<a href="#">NPR</a>	S	4L-6454	024	BOLT
	<a href="#">NPR</a>	S	4M-5281	002	BOLT
	<a href="#">NPR</a>	S	5F-5990	002	CLIP
	<a href="#">NPR</a>	S	5L-3233	002	FITTING-CONNECTOR
	<a href="#">NPR</a>	SY	<a href="#">5N-2438</a>	001	LINES GP-FLEXIBLE FUEL
	<a href="#">NPR</a>	SY	<a href="#">5N-2457</a>	001	FITTING GP-EXHAUST
	<a href="#">NPR</a>	SY	<a href="#">5N-7822</a>	002	AIR CLEANER GP
	<a href="#">NPR</a>	S	5N-7830	002	GASKET
	<a href="#">NPR</a>	S	5N-7905	002	HOSE
	<a href="#">NPR</a>	S	5N-7906	001	SUPPORT AS
	<a href="#">NPR</a>	S	5N-7915	002	ANGLE
	<a href="#">NPR</a>	S	5N-7917	004	SPACER
	<a href="#">NPR</a>	SY	<a href="#">5N-8603</a>	002	PRECLEANER GP
	<a href="#">NPR</a>	S	5N-8606	002	GASKET
	<a href="#">NPR</a>	S	5N-8729	012	SPACER
	<a href="#">NPR</a>	S	5N-8730	002	ADAPTER AS
	<a href="#">NPR</a>	S	5P-0597	001	CLAMP-HOSE
	<a href="#">NPR</a>	S	5P-1472	290	HOSE
	<a href="#">NPR</a>	S	5P-4869	004	CLAMP-HOSE
	<a href="#">NPR</a>	S	5P-7197	006	WASHER
	<a href="#">NPR</a>	S	5S-7379	006	BOLT
	<a href="#">NPR</a>	S	5S-7382	002	BOLT
	<a href="#">NPR</a>	S	6I-2933	002	INDICATOR-AIR FILTER SERVICE
		SY	<a href="#">6L-4502</a>	001	CHART-PLATE & FILM
	<a href="#">NPR</a>	S	6V-8188	001	NUT

	<a href="#">NPR</a>	S	6V-8801	004	NUT
	<a href="#">NPR</a>	S	7D-8793	001	ELBOW-FLARED
	<a href="#">NPR</a>	S	7H-9678	001	RETAINER-ELEMENT
	<a href="#">NPR</a>	SY	<a href="#">7L-7872</a>	001	BATTERY GP
	<a href="#">NPR</a>	S	7N-1628	001	NUT
	<a href="#">NPR</a>	S	7N-5274	001	COVER AS-TERMINAL
	<a href="#">NPR</a>	S	7S-9323	001	SPRING
	<a href="#">NPR</a>	SY	<a href="#">7W-0408</a>	001	BATTERY CHARGER
	<a href="#">NPR</a>	SY	<a href="#">7W-0825</a>	001	CABLE GP-BATTERY
	<a href="#">NPR</a>	S	7X-0344	002	BOLT
	<a href="#">NPR</a>	S	7X-0354	006	BOLT
	<a href="#">NPR</a>	S	7X-0355	005	BOLT
	<a href="#">NPR</a>	S	7X-0448	002	NUT
	<a href="#">NPR</a>	S	8H-2778	001	SEAL-RING
	<a href="#">NPR</a>	S	8H-7202	001	CASE AS-FUEL FILTER
	<a href="#">NPR</a>	S	8L-5008	002	ELBOW-PIPE
	<a href="#">NPR</a>	S	8L-8413	002	STRAP-CABLE
	<a href="#">NPR</a>	S	8N-0869	001	COVER-TERMINAL
	<a href="#">NPR</a>	S	8N-1186	001	HOSE AS
	<a href="#">NPR</a>	S	8N-1663	001	BOOT
	<a href="#">NPR</a>	S	8N-1725	001	COVER AS-TERMINAL
	<a href="#">NPR</a>	SY	<a href="#">8N-6435</a>	001	FILTER GP-PRIMARY FUEL
	<a href="#">NPR</a>	SY	<a href="#">8N-9567</a>	001	MOUNTING GP-ENGINE FLEXIBLE
	<a href="#">NPR</a>	S	8T-2502	006	BOLT
	<a href="#">NPR</a>	S	8T-4122	028	WASHER-HARD
	<a href="#">NPR</a>	S	8T-4223	002	WASHER-HARD
	<a href="#">NPR</a>	S	8T-4224	096	WASHER-HARD
	<a href="#">NPR</a>	S	8T-4896	008	WASHER-HARD
	<a href="#">NPR</a>	S	8T-8915	004	BOLT
	<a href="#">NPR</a>	S	8T-8919	001	BOLT
	<a href="#">NPR</a>	S	8T-9043	048	BOLT
	<a href="#">NPR</a>	S	9B-7237	004	BOLT
	<a href="#">NPR</a>	S	9G-0003	001	COVER AS-TERMINAL
	<a href="#">NPR</a>	S	9G-0004	001	COVER AS-TERMINAL
	<a href="#">NPR</a>	S	9G-8909	001	COVER-TERMINAL
	<a href="#">NPR</a>	S	9M-2342	001	FILTER ELEMENT-FUEL

	<a href="#">NPR</a>	S	9S-8752	008	NUT-FULL
	<a href="#">NPR</a>	S	9X-8267	002	WASHER
	<a href="#">NPR</a>	SY	<a href="#">9X-9730</a>	002	BATTERY GP
	<a href="#">NPR</a>	SY	<a href="#">9Y-5563</a>	001	FUMES DISPOSAL GP
	<a href="#">NPR</a>	SY	<a href="#">9Y-8234</a>	001	MOUNTING GP-RADIATOR
	<a href="#">NPR</a>	S	031-4155	048	LOCKNUT
	<a href="#">NPR</a>	S	032-1268	003	CONNECTOR
	<a href="#">NPR</a>	S	110-5957	002	HOSE AS
	<a href="#">NPR</a>	S	110-5958	001	SUPPORT AS
	<a href="#">NPR</a>	SY	<a href="#">110-5959</a>	001	SWITCH GP-COOLANT LEVEL
	<a href="#">NPR</a>	SY	<a href="#">121-8855</a>	001	CONNECTION GP-ELECTRICAL
	<a href="#">NPR</a>	S	153-3865	006	MOUNT AS
		SY	<a href="#">158-6410</a>	001	GENERATOR AR
	<a href="#">NPR</a>	SY	<a href="#">171-6719</a>	001	KIT-PARTS
	<a href="#">NPR</a>	S	171-6721	001	KIT-PARTS
	<a href="#">NPR</a>	S	201-8898	001	BOLT
	<a href="#">NPR</a>	SY	<a href="#">213-1412</a>	001	INDICATOR GP-AIR FILTER CHANGE
	<a href="#">NPR</a>	S	214-6045	001	BELLOWS AS
	<a href="#">NPR</a>	SY	<a href="#">237-1971</a>	001	CONTACTOR GP-GENERATOR
	<a href="#">NPR</a>	S	239-1324	001	CONTACTOR
	<a href="#">NPR</a>	S	245-3512	001	GASKET
	<a href="#">NPR</a>	S	289-3892	002	PLATE
	<a href="#">NPR</a>	SY	<a href="#">289-3909</a>	001	AIR CLEANER GP
		S	SENR3585	004	SMGP
		S	SENR6565	004	SMGP
		S	SERP2414	004	PTSCD
		S	SERP2922	004	PTSCD
		S	SERP3322	004	PTSCD
		S	SFBU6042	004	SUPP
		S	SFBU6251	004	LUBE CAB2D2 (A)
		S	SFBU6918	004	OMM
		S	SFBU7050	004	OMM
		S	SFBU7509	004	OMM

Key:

I Installed

N Not Installed

S Shipped Loose

Y Separate Illustration

L Less Indicator