

3516C GENERATOR SET

Engine Serial Prefix - SBJ (Build Date -08/2007, Test Date - 08/2007)

▼ ENGINE - ENTIRE GROUP (SBJ)

<u>Qty.</u>	<u>NPR</u>	<u>Note</u>	<u>Part No.</u>	<u>Change Level</u>	<u>Req. Qty</u>	<u>Part Name</u>
						FEATURE CODES
		I	516DE5A	F	001	3516C, 60HZ, 1800RPM PGS 5A
		I	OGNPMX1	F	001	GEN 827 FRAME PM 2 BRG X1
		I	RPA0313	F	001	825 FRAME GENERATOR REMOVAL
		S	FWS0004	F	001	WATER SEPARATOR
		I	PYRTC07	F	001	PYROMETER AND THERMOCOUPLES 07
		I	OLVLRG1	F	001	LUBRICATION SYSTEM
		I	EXRVAL5	F	001	EXPLOSION RELIEF VALVE
		S	VIBRM10	F	001	VIBRATION ISOLATOR REMOVAL 10
		I	BATRM01	F	001	BATRM01
		I	NGRDCNN	F	001	NGRDCNN
		S	BTC20A1	F	001	BATTERY CHG 20 AMP NFPA 99-110
		I	ELSM246	F	001	HD ELEC STRTNG MOTOR DUAL 24V
		I	JWHD004	F	001	JACKET WATER HEATER-DUAL
		S	BAT2417	F	001	24V BAT SET-DRY 2600 CCA
		I	ALT2496	F	001	CHARGING ALTERNATOR-45AMP 96
		I	BUSBM6L	F	001	1000A MV BUS BARS LEFT (NEMA)
		I	BUSBM6R	F	001	1000A MV BB REMOVAL-RH (NEMA)
		I	EMPTYPR	F	001	EMPTY ENCLOSURE RIGHT
		I	CT04005	F	001	CURRENT TRANSF., 400:5 RATIO
		I	EMCP33A	F	001	EMCP 3.3 CONTROL PANEL
		I	LOADSHM	F	001	LOAD SHARE MODULE
		I	GENRTD2	F	001	GENERATOR TEMP MONITORING
		I	RTDDIOH	F	001	OPTIONAL MODULE HARNESS
		S	LPCMONS	F	001	LOCAL PC MONITORING
		I	BOTCBLL	F	001	BOTTOM CBL ENTRY NO SHROUD STD
		I	AUXPNLL	F	001	AUXILIARY PLATE MOUNTING - LH
		I	CERTIF2	F	001	EPA & CARB NON-ROAD EMIS. CERT
		I	CUSTCNR	F	001	CUSTOMER CONNECTION MTG RH STD
		I	EMCSD10	F	001	SPARE DISCRETE I/O PACKAGE 10
		I	NOENCPB	F	001	NO ENCLOSURE REAR (STANDARD)
		I	UIPBHHS	F	001	CONTROL PANEL MOUNT REAR (STD)
		I	60H-4160	F	001	60HZ 4160 VOLTS
		I	MSEPGGN	F	001	GENERAL EPG
		S	LITPAPR	F	003	EXTRA ENG LIT - PAPER (1 - 6)

	I	TRSGEN7	F	001	PGS TEST REPORT @ 0.8 PF
	I	TRSGEN1	F	001	GENERATOR TEST REPORT
	I	MSCEC72	F	001	COMMERCIAL BUSINESSES
	I	MWCODEF	F	001	STANDBY POWER
	I	KW02000	F	001	2000 EKW W/FAN
	I	3516C	F	001	3516C DIESEL ENGINE
	I	CERTSTA	F	001	STATIONARY APPLICATION USE
	I	CERTUSA	F	001	END USER LOCATION DESCRIPTION
	I	NONULL	F	001	NON UL 2200 LISTED PKG GEN SET
	I	STANDBY	F	001	STANDBY POWER APPLICATION
	I	0V-2330	F	001	DTO QUOTE CORRECTION
					PART NUMBERS
	I	LA4570	07	001	3516C GLOBAL PKG-1800 RPM
	NPR	IY 266-6137	10	001	ENGINE AR
	NPR	IY 205-7860	08	001	FILM GP
		I 3L-0284		001	*****TEST - PKG GEN SET*****
		I 252-7405	00	001	***** TEST - GEN ELE SYS LE *
	NPR	SY 7W-0825	01	002	CABLE GP-BATTERY
	NPR	SY 3N-7056	00	002	SUPPORT GP-BATTERY
	NPR	IY 240-0740	01	001	SWITCH GP-DISCONNECT
	NPR	IY 245-0000	02	001	BOX GP-CONTROL PANEL
	NPR	IY 245-0087	05	001	MOUNTING GP-CONTROL PANEL
	NPR	IY 245-0082	02	001	CONTROL GP-GENERATOR SET
	NPR	IY 252-7367	01	003	MOUNTING GP-PANEL
	NPR	IY 245-0092	02	001	WIRING GP-GENERATOR
	NPR	IY 245-0003	05	002	BOX GP-EXTENSION TERMINAL
	NPR	IY 269-3488	02	001	COVER GP-GENERATOR
	NPR	SY 276-2449	02	001	LINES GP-AIR
	NPR	IY 252-7438	03	002	PLUG GP-BOX
	NPR	IY 252-7700	00	001	PLUG GP-BOX
	NPR	IY 252-7556	00	001	COVER GP-CONTROL PANEL
	NPR	IY 252-7411	09	001	GROUND GP-ELECTRICAL
	NPR	IY 245-0001	00	001	COVER GP-CONTROL PANEL
	NPR	IY 245-0013	01	001	COVER GP-GENERATOR
	NPR	IY 245-0007	01	002	COVER GP-GENERATOR
	NPR	IY 245-0023	01	001	COVER GP-CONTROL PANEL
	NPR	IY 245-0027	03	001	COVER GP-ENCLOSURE
	NPR	IY 245-0096	00	002	COVER GP-EXTENSION BOX
	NPR	IY 245-0025	00	002	COVER GP-EXTENSION BOX
	NPR	IY 241-0235	00	001	WIRING GP-ELECTRIC STARTING

	NPR	IY	242-7068	00	001	WIRING GP-ELECTRIC STARTING
	NPR	IY	259-2168	03	001	SENSOR GP-TEMPERATURE
	NPR	IY	245-0024	00	001	COVER GP-ENCLOSURE
	NPR	IY	245-0031	02	001	WIRING GP-ENGINE
		I	252-7392	00	001	INSTRUCTIONS
		I	252-7394	00	001	INSTRUCTIONS
		I	252-7396	02	001	INSTRUCTIONS-GOV
	NPR	IY	212-4694	02	001	DRIVE GP-FAN
	NPR	IY	250-9694	04	001	CONVERSION AR-ENGINE
	NPR	IY	268-4442	02	001	DRAIN GP-ENGINE OIL
	NPR	I	5P-2586	04	416	OIL
	NPR	IY	147-3738	01	001	VALVE GP-FLUID SAMPLING
	NPR	IY	7N-6782	08	001	INDICATOR GP-AIR FILTER CHANGE
	NPR	IY	208-0820	04	001	MOUNTING GP-AIR CLEANER
	NPR	IY	278-3525	02	001	LINES GP-AIR
	NPR	IY	115-1063	04	001	PUMP GP-FUEL PRIMING
	NPR	IY	120-9818	06	002	FUMES DISPOSAL GP
	NPR	NY	270-3505	02	001	RADIATOR GP
	NPR	SY	121-3356	07	001	SENSOR & MTG GP-RADIATOR
	NPR	SY	284-4916	00	001	GUARD GP-LINES
	NPR	IY	244-4064	02	001	MOUNTING GP-RAIL
	NPR	IY	197-9052	00	001	GUARD GP-DAMPER
	NPR	IY	7W-6669	01	001	GUARD GP-DAMPER
		S	5P-2506	00	001	LITERATURE GP
	NPR	IY	3N-8594	06	005	COVER GP-ENGINE LIFTING EYE
	NPR	SY	286-3573	00	001	LINES GP-FUEL
	NPR	SY	283-2548	00	001	FUMES DISPOSAL GP
		I	GC4820	01	001	GLOBAL-2250 GENERATOR 827/2
	NPR	IY	262-8236	00	001	GENERATOR AR
	NPR	IY	245-8743	00	001	RAIL GP-ENGINE & GEN SUPPORT
		I	3L-0467		001	TWO BEARING GEN ALIGNMENT-3500
	NPR	IY	252-7406	03	001	PLATE GP-COVER
	NPR	IY	252-7407	02	001	COVER GP-EXTENSION BOX
	NPR	IY	252-7410	00	001	FASTENER GP-WIRING HARNESS
	NPR	IY	245-0081	00	001	CONTROL GP-VOLTAGE
	NPR	IY	252-7427	01	001	WIRING GP-GENERATOR
	NPR	IY	252-7419	01	001	WIRING GP-GENERATOR
	NPR	IY	252-7374	04	001	MOUNTING GP-TRANSFORMER
	NPR	IY	252-7361	00	001	MOUNTING GP-TERMINAL STRIP
	NPR	IY	252-7412	04	001	BUS BAR GP-BOX

	NPR	IY	260-6665	03	001	CONNECTION GP-GENERATOR LEADS
	NPR	IY	252-5589	02	001	INSTALLATION AR-GENERATOR
	NPR	IY	269-7011	03	001	MOUNTING GP-TRANSFORMER
		I	GC4968	01	001	2000S GENERATOR REMOVAL
		I	LE0196	01	001	FUEL WATER SEPARATOR
	NPR	SY	233-7973	01	001	SEPARATOR GP-WATER
		I	LE0324	06	001	PYROMETER & CYL THERMOCOUPLES
	NPR	IY	120-4492	01	001	WIRING GP-PYROMETER
	NPR	IY	120-4498	04	016	THERMOCOUPLE GP
	NPR	SY	121-4112	02	001	HARNESS AS-PANEL
	NPR	NY	215-2559	01	001	PYROMETER GP
		I	LE0155	00	001	OIL LEVEL REGULATOR
		I	LE3628	00	001	EXPLOSION RELIEF VALVE CRANKCA
	NPR	IY	8N-8510	22	001	VALVE GP-EXPLOSION RELIEF
		I	GZ0292	01	001	VIBRATION ISOLATOR REMOVAL
		I	LE0952	04	001	REMOVAL AR, BATTERIES, CABLES,
	NPR	IY	278-7089	00	001	CABLE GP-GENERATOR GROUND
	NPR	SY	131-0832	01	001	BATTERY CHARGER GP
		I	LE0175	03	001	HEAVY DUTY ELECTRIC STARTING
	NPR	IY	8N-3896	17	001	STARTING MOTOR GP-ELECTRIC
		I	LE0214	02	001	HEATER AR - JACKET WATER
	NPR	IY	134-3160	09	001	MOUNTING GP-JACKET WTR HEATER
	NPR	IY	166-6652	07	001	MOUNTING GP-JACKET WTR HEATER
	NPR	IY	200-6504	02	002	HEATER GP-JACKET WATER
		I	LE0176	06	001	OVERSIZE BATTERY - 2600CCA
	NPR	SY	7L-7872	09	002	BATTERY GP
		I	GZ0290	01	001	ALTERNATOR-CHARGING
	NPR	IY	107-7361	04	001	DRIVE GP-ACCESSORY
	NPR	IRY	5N-5692	12	001	ALTERNATOR GP-CHARGING
	NPR	IY	7E-4836	09	001	MOUNTING GP-ALTERNATOR
	NPR	IY	271-9270	02	001	GUARD GP-BELT
	NPR	IY	126-9191	05	001	GROUND GP-ELECTRICAL
	NPR	IY	133-6468	01	001	WIRE AS-GROUND
	NPR	IY	241-0243	00	001	WIRING GP-ALTERNATOR
	NPR	IY	151-9228	02	001	GUARD GP-BELT
		I	GC2913	01	001	1000A MV BUS BARS LEFT (NEMA)
		I	252-7399	01	001	INSTRUCTIONS-BUS
		I	GC2912	01	001	BUS BAR MOUNTING-REMOVAL
		I	GC2510	00	001	EMPTY ENCLOSURE - RH
		I	252-7400	01	001	NOTE-BUSS BAR MOUNTING

	I	GC2892	00	001	Mounting Gp-CT (400:5)
NPR	IY	252-7321	03	001	TRANSFORMER GP-CURRENT
	I	GC3238	01	001	EMCP3.3
NPR	I	254-6368	05	001	ELECTRONICS GP-GENERATOR SET
NPR	IY	245-0030	08	001	PANEL GP-CONTROL
NPR	IY	245-0035	10	001	BOX GP-ELECTRONIC
	S	244-9655	01	001	INSTRUCTIONS
	I	GC2948	02	001	LOAD SHARE MODULE
NPR	IY	252-7417	05	001	CONTROL GP-LOAD SHARE MODULE
NPR	IY	252-7553	01	001	MODULE GP-ALARM
	I	271-4524	00	001	INSTRUCTIONS
NPR	IY	252-7480	00	001	WIRING GP-GENERATOR
	I	GC3241	00	001	Generator Monitoring Package F
NPR	IY	252-7345	01	001	WIRING GP-PANEL
NPR	IY	249-7649	01	001	CONNECTOR AS
NPR	IY	271-0185	02	001	SENSOR GP-TEMPERATURE
	I	GC2963	00	001	OPTIONAL MODULE HARNESS
NPR	IY	252-7362	00	001	WIRING GP-PANEL
	I	GC3243	01	001	LOCAL PC MONITORING
NPR	SY	270-0476	00	001	ADAPTER GP-COMMUNICATION
	I	GC2505	01	001	BOTTOM CABLE ENTRY (NO SHROUD)
	I	252-7502	04	001	INSTRUCTIONS
	I	5N-9599		001	ADAPTER AS
	I	0V-1065		001	END USE: GENERAL EPG
	I	0P-1793		001	***GEN SET TEST CHG @ 0.8 PF**
	I	0P-1530		001	GENERATOR TEST REPORT
	I	LL5712	01	001	2937 BHP 2000 GEN KW W/F 60 HZ
	I	0K-6996		001	2190 BKW (2937 BHP) @ 1800 RPM
	I	0V-3462		001	EPA TIER II - NONROAD
	I	0V-2329		001	PRODUCTION CORRECTION
	I	GC5037	00	001	SPARE DISCRETE I/O PACKAGE
NPR	IY	252-7347	01	001	WIRING GP-PANEL
NPR	IY	310-8008	00	001	REGULATOR GP-OIL LEVEL
	S	ESO		001	SHIPPED LOOSE (PRNT ESO COPY)
	S	PML		001	*REQUIRED DECALS
NPR	S	0S-1594		008	BOLT
	S	0V-1672		001	EXTRA ENG LIT - PAPER (1 - 6)
NPR	S	1K-6870		032	LOCKNUT
NPR	S	1S-4305		008	WASHER

	NPR	S	1S-5772	001	GASKET
	NPR	S	1W-2858	001	STRAP
	NPR	S	1W-8129	001	SUPPORT
	NPR	S	2N-2107	003	CLIP
	NPR	S	2N-3476	004	SCREW-MACHINE
	NPR	S	2N-8928	010	CLIP
	NPR	S	2P-1293	002	LOCKNUT
	NPR	S	2V-7397	002	CABLE AS
	NPR	S	2W-1745	002	SPACER
	NPR	S	3B-4504	004	LOCKWASHER
	NPR	S	3B-7744	001	FITTING
	NPR	S	3K-1715	002	CABLE AS
	NPR	S	3N-2451	004	JOINT AS-TUBE
	NPR	S	3N-7054	002	SUPPORT AS-BATTERY
	NPR	S	3N-7055	002	BOARD
	NPR	SY	3N-7056	001	SUPPORT GP-BATTERY
	NPR	S	3P-0648	016	SEAL-O-RING
	NPR	S	3V-6785	002	CABLE AS
	NPR	S	4B-2041	004	NUT
	NPR	S	4B-4863	004	WASHER
	NPR	S	4D-7794	002	CLIP
	NPR	S	4L-6454	001	BOLT
	NPR	S	4P-0692	002	CLAMP AS
	NPR	S	4R-8658	001	VALVE AS-MANUAL
	NPR	S	5C-2874	004	NUT
	NPR	S	5P-0597	002	CLAMP-HOSE
	NPR	S	5P-1075	020	WASHER-HARD
	NPR	S	5P-1076	008	WASHER-HARD
	NPR	S	5P-1472	760	HOSE
	NPR	S	5P-2566	016	BOLT
	NPR	S	5P-5894	001	COATING
	NPR	S	5S-7383	008	BOLT
		SY	6L-4502	001	CHART-PLATE & FILM
	NPR	S	6V-3835	001	SEAL-O-RING
	NPR	S	6V-8182	030	NUT
	NPR	S	6V-8188	030	NUT
	NPR	S	6V-8801	020	NUT
	NPR	S	6V-8997	002	UNION
	NPR	S	6V-9746	005	SEAL-O-RING
	NPR	S	6V-9853	001	ELBOW

<input type="checkbox"/>	NPR	S	7K-1181	007	STRAP-CABLE
<input type="checkbox"/>	NPR	SY	7L-7872	001	BATTERY GP
<input type="checkbox"/>	NPR	S	7N-5274	002	COVER AS-TERMINAL
<input type="checkbox"/>	NPR	S	7N-6986	002	SUPPORT
<input type="checkbox"/>	NPR	SY	7W-0825	001	CABLE GP-BATTERY
<input type="checkbox"/>	NPR	S	7X-0297	002	BOLT
<input type="checkbox"/>	NPR	S	7X-0300	002	BOLT
<input type="checkbox"/>	NPR	S	7X-0311	004	BOLT
<input type="checkbox"/>	NPR	S	7X-0368	024	BOLT
<input type="checkbox"/>	NPR	S	7X-0369	012	BOLT
<input type="checkbox"/>	NPR	S	7X-0370	008	BOLT
<input type="checkbox"/>	NPR	S	7X-0371	006	BOLT
<input type="checkbox"/>	NPR	S	7X-0447	004	NUT
<input type="checkbox"/>	NPR	S	7X-0448	012	NUT
<input type="checkbox"/>	NPR	S	7X-0582	060	WASHER-HARD
<input type="checkbox"/>	NPR	S	7Y-7389	004	SCREW
<input type="checkbox"/>	NPR	S	8C-4436	006	BOLT
<input type="checkbox"/>	NPR	S	8C-6024	001	SEAL-CONNECTOR
<input type="checkbox"/>	NPR	S	8L-8413	004	STRAP-CABLE
<input type="checkbox"/>	NPR	S	8N-0869	002	COVER-TERMINAL
<input type="checkbox"/>	NPR	S	8N-1663	002	BOOT
<input type="checkbox"/>	NPR	S	8N-1725	002	COVER AS-TERMINAL
<input type="checkbox"/>	NPR	S	8N-6432	001	ADAPTER
<input type="checkbox"/>	NPR	S	8T-2501	010	BOLT
<input type="checkbox"/>	NPR	S	8T-2502	006	BOLT
<input type="checkbox"/>	NPR	S	8T-4122	024	WASHER-HARD
<input type="checkbox"/>	NPR	S	8T-4223	056	WASHER-HARD
<input type="checkbox"/>	NPR	S	8T-4835	002	BOLT
<input type="checkbox"/>	NPR	S	8T-4896	022	WASHER-HARD
<input type="checkbox"/>	NPR	S	8T-4994	064	WASHER-HARD
<input type="checkbox"/>	NPR	S	8T-5360	008	WASHER
<input type="checkbox"/>	NPR	S	8T-8916	004	BOLT
<input type="checkbox"/>	NPR	S	8T-8917	006	BOLT
<input type="checkbox"/>	NPR	S	8T-8919	004	BOLT
<input type="checkbox"/>	NPR	S	8T-9101	002	BOLT
<input type="checkbox"/>	NPR	S	8T-9379	004	BOLT
<input type="checkbox"/>	NPR	S	8T-9393	012	BOLT
<input type="checkbox"/>	NPR	S	9B-7237	009	BOLT
<input type="checkbox"/>	NPR	S	9G-0003	004	COVER AS-TERMINAL
<input type="checkbox"/>	NPR	S	9G-0004	004	COVER AS-TERMINAL

	NPR	S	9G-8140	001	SPACER
	NPR	S	9G-8909	002	COVER-TERMINAL
	NPR	SY	9X-9730	004	BATTERY GP
	NPR	S	092-7385	001	CLIP
	NPR	S	105-3480	004	BOLT-SOCKET HEAD
	NPR	S	114-2410	001	PYROMETER GP
	NPR	SY	121-3356	001	SENSOR & MTG GP-RADIATOR
	NPR	S	121-3369	001	HARNESS AS-SENSOR
	NPR	S	121-4102	001	HARNESS AS-PANEL
	NPR	SY	121-4112	001	HARNESS AS-PANEL
	NPR	S	124-6267	014	CLAMP-HOSE
	NPR	S	126-5957	001	ELBOW
	NPR	SY	131-0832	001	BATTERY CHARGER GP
	NPR	S	135-6261	024	CLAMP
	NPR	S	136-4190	006	CLIP-2 PIECE
	NPR	S	136-4191	006	CLIP-2 PIECE
	NPR	S	161-1528	003	BRACKET
	NPR	S	176-0028	001	BRACKET
	NPR	S	198-4782	060	WASHER-HARD
	NPR	SY	204-2518	001	SENSOR GP-LIQUID LEVEL
	NPR	SY	215-2559	001	PYROMETER GP
	NPR	S	216-2783	002	JOINT AS-TUBE
	NPR	SY	233-7973	001	SEPARATOR GP-WATER
	NPR	S	251-5715	006	BOLT
	NPR	S	266-5360	004	WASHER
	NPR	S	270-0475	001	ADAPTER-COMMUNICATION
	NPR	SY	270-0476	001	ADAPTER GP-COMMUNICATION
	NPR	SY	270-3504	001	RADIATOR GP
	NPR	SY	270-3505	001	RADIATOR GP
	NPR	S	272-6462	001	GASKET
	NPR	S	273-3538	006	HOSE
	NPR	S	273-3540	002	TUBE
	NPR	S	274-1732	002	TUBE
	NPR	S	274-1737	006	BRACKET
	NPR	S	274-1742	001	TUBE
	NPR	SY	276-2449	001	LINES GP-AIR
	NPR	S	276-2450	001	TUBE AS
	NPR	S	276-3033	002	SUPPORT AS
	NPR	S	276-3039	001	SUPPORT
	NPR	S	276-3040	002	SUPPORT AS

	NPR	S	276-3041	001	TUBE
	NPR	S	276-3042	001	TUBE
	NPR	S	282-2602	001	BRACKET
	NPR	S	282-6664	002	BELLOWS
	NPR	S	282-6678	001	BRACKET
	NPR	S	282-6679	016	CLAMP
	NPR	S	282-6680	008	STRAP
	NPR	S	282-6684	001	BRACKET
	NPR	S	282-8532	001	BRACKET
	NPR	S	282-8535	002	U-BOLT
	NPR	S	282-9919	001	ADAPTER AS
	NPR	SY	283-2548	001	FUMES DISPOSAL GP
	NPR	S	284-4913	001	GUARD AS
	NPR	S	284-4914	001	GUARD AS
	NPR	S	284-4915	002	GUARD AS
	NPR	SY	284-4916	001	GUARD GP-LINES
	NPR	S	285-8515	001	BRACKET
	NPR	S	286-2182	001	HOSE AS
	NPR	S	286-2185	001	HOSE AS
	NPR	S	286-2445	002	PLATE
	NPR	SY	286-3573	001	LINES GP-FUEL
	NPR	S	289-0222	002	PLATE
	NPR	S	289-0223	002	PLATE
	NPR	S	289-0272	006	BOLT
	NPR	S	293-9809	002	CLIP-2 PIECE
	NPR	S	293-9810	002	CLIP-2 PIECE
	NPR	S	294-0517	004	STRAP
	NPR	S	294-0521	002	CLAMP
	NPR	S	294-0522	002	CLAMP
	NPR	S	294-5249	001	BRACKET
	NPR	S	294-5250	001	BRACKET
	NPR	S	295-2847	001	BRACKET
	NPR	S	295-2848	001	BRACKET
		S	SEBP4369	004	PTSBK
		S	SEBU6251	004	LUBE 140019B2(A)
		S	SEBU8111	004	OMM
		S	SELF5405	004	WARRANTY
		S	SERP4369	004	PTSCD