

Engine Serial Number - CTP002XX (Build Date - 14/03/2002, Test Date - 20/03/2002, Ship Date - unknown)

[View Latest Kit Information](#)

✦ ENGINE - ENTIRE GROUP (CTP002XX)

<u>Qty.</u>	<u>NPR</u>	<u>Note</u>	<u>Part No.</u>	<u>Change Level</u>	<u>Req. Qty</u>	<u>Part Name</u>
						<b>FEATURE CODES</b>
<input type="checkbox"/>		I	KW00375	F	001	375 EKW W/FAN
<input type="checkbox"/>		I	412GE06	F	001	G3412C LE 375 EKW 60HZ PGS
<input type="checkbox"/>		I	OGNPM0V	F	001	GENERATOR 592 FRAME PM
<input type="checkbox"/>		I	RPA0117	F	001	592 FRAME GENERATOR REMOVAL
<input type="checkbox"/>		I	EMCMETU	F	001	METRIC DISPLAY UNITS 01
<input type="checkbox"/>		I	EMCCAS1	F	001	COMMON ALARM/SHUTDOWN
<input type="checkbox"/>		I	EMCGRR1	F	001	GENERATOR RUNNING RELAY
<input type="checkbox"/>		I	CIM0001	F	001	CUSTOMER INTERFACE MODULE
<input type="checkbox"/>		I	EMCAM02	F	001	CUSTOM ALARM MODULE
<input type="checkbox"/>		I	GOVEL11	F	001	ELECTRONIC LOAD SHARE GOVERNOR
<input type="checkbox"/>		I	SHK0001	F	001	SPACE HEATER KIT
<input type="checkbox"/>		I	RADRM33	F	001	RADIATOR REMOVAL
<input type="checkbox"/>		I	BTC1001	F	001	BATTERY CHARGER 10 AMP
<input type="checkbox"/>		I	BATRM01	F	001	STANDARD BATTERY REMOVAL
<input type="checkbox"/>		I	60H-0480	F	001	60HZ 480 VOLTS
<input type="checkbox"/>		I	CONTINU	F	001	CONTINUOUS APPLICATION
<input type="checkbox"/>		I	MSEPGGN	F	001	GENERAL EPG
<input type="checkbox"/>		I	DPX0001	F	001	DOMESTIC PACK-EXPORT CONTAINER
<input type="checkbox"/>		I	LITENGE	F	001	EXTRA ENGLISH LITERATURE (1-6)
<input type="checkbox"/>		I	TRSGEN7	F	001	PGS TEST REPORT @ 0.8 PF
<input type="checkbox"/>		I	LANENGO	F	001	ENGLISH LANGUAGE OPTION
<input type="checkbox"/>		I	EMCPTWO	F	001	ELECTRONIC MODULAR CONTROL PNL
<input type="checkbox"/>		I	PTSRR01	F	001	REAR POWER TERMINAL STRIP
<input type="checkbox"/>		I	XLLENGL	F	001	EXTRA ENGLISH LITERATURE
						<b>PART NUMBERS</b>
<input type="checkbox"/>		I	GG5121	02	001	375 EKW @ 1800 RPM (475 BKW)

	<a href="#">NPR</a>	IY	<a href="#">108-0657</a>	11	001	IGNITION GP-GAS ENGINE
	<a href="#">NPR</a>	ILY	<a href="#">210-9076</a>	00	001	GUARD GP-BELT
		I	CA1423	02	001	PUMP GP-SUMP-MANUAL
	<a href="#">NPR</a>	IY	<a href="#">168-3300</a>	01	001	PUMP GP-SUMP
	<a href="#">NPR</a>	IY	<a href="#">108-1655</a>	03	001	SENSOR & MOUNTING GP
	<a href="#">NPR</a>	ILY	<a href="#">163-6112</a>	03	001	DRIVE GP-GOVERNOR
	<a href="#">NPR</a>	IY	<a href="#">107-7897</a>	04	001	DRIVE GP-GOVERNOR
	<a href="#">NPR</a>	IY	<a href="#">221-3040</a>	00	001	GUARD GP-BELT
		I	LE4010	12	001	ENGINE AR-G3412LE CONTINUOUS P
	<a href="#">NPR</a>	IY	<a href="#">2N-8220</a>	04	001	BREATHER GP
	<a href="#">NPR</a>	IY	<a href="#">2S-7227</a>	17	001	STARTING MOTOR GP-ELECTRIC
	<a href="#">NPR</a>	IY	<a href="#">2W-4237</a>	03	001	LINES GP-OIL SUPPLY
	<a href="#">NPR</a>	IY	<a href="#">2W-4685</a>	07	001	LINES GP-TURBOCHARGER OIL
	<a href="#">NPR</a>	IY	<a href="#">2W-7848</a>	00	001	FITTING GP-EXHAUST
		I	3L-0303		001	ADJUSTING-WW 2301 CONTROL SYS
		I	3L-0432		001	TEST - PKG GEN SET (EMCP II)
	<a href="#">NPR</a>	IY	<a href="#">3N-8594</a>	04	001	COVER GP-ENGINE LIFTING EYE
	<a href="#">NPR</a>	IY	<a href="#">4P-6715</a>	02	001	MOUNTING GP-AIR CLEANER
	<a href="#">NPR</a>	IY	<a href="#">4P-6717</a>	01	001	AIR CLEANER GP
	<a href="#">NPR</a>	IY	<a href="#">4P-6721</a>	04	001	REGULATOR GP-GAS PRESSURE
	<a href="#">NPR</a>	IY	<a href="#">6I-2160</a>	02	001	ACTUATOR AS-GOVERNOR
	<a href="#">NPR</a>	IY	<a href="#">7C-5154</a>	03	001	FUMES DISPOSAL GP
	<a href="#">NPR</a>	IY	<a href="#">9Y-1268</a>	02	001	PUMP GP-AUXILIARY WATER
	<a href="#">NPR</a>	I	106-9222	04	001	COVER GP
	<a href="#">NPR</a>	IY	<a href="#">107-7215</a>	02	001	AFTERCOOLER GP-WATER
	<a href="#">NPR</a>	IY	<a href="#">109-5175</a>	01	001	CONTROL GP-CARBURETOR
	<a href="#">NPR</a>	IY	<a href="#">112-9346</a>	02	001	LINES GP-AIR
	<a href="#">NPR</a>	IY	<a href="#">113-0909</a>	06	001	BYPASS GP-EXHAUST
	<a href="#">NPR</a>	IY	<a href="#">118-6379</a>	00	001	CARBURETOR GP
	<a href="#">NPR</a>	IY	<a href="#">119-6230</a>	03	001	MANIFOLD GP-EXHAUST
	<a href="#">NPR</a>	IY	<a href="#">124-8591</a>	02	001	LINES GP-WATER
	<a href="#">NPR</a>	IY	<a href="#">135-6298</a>	04	001	LINES GP-WATER
	<a href="#">NPR</a>	IY	<a href="#">135-8583</a>	00	001	PULLEY GP-CRANKSHAFT
	<a href="#">NPR</a>	IY	<a href="#">139-9028</a>	02	001	DAMPER & PULLEY GP
	<a href="#">NPR</a>	IY	<a href="#">149-7876</a>	03	001	FASTENER GP-GENERATOR COUPLING
	<a href="#">NPR</a>	IY	<a href="#">156-0040</a>	00	001	TRANSFORMER GP-CURRENT

	<a href="#">NPR</a>	IY	<a href="#">168-3241</a>	05	001	ENCLOSURE GP-GENERATOR
	<a href="#">NPR</a>	IY	<a href="#">169-0240</a>	03	001	COVER GP-GENERATOR
	<a href="#">NPR</a>	IY	<a href="#">169-0247</a>	09	001	BOX GP-EXTENSION TERMINAL
	<a href="#">NPR</a>	IY	<a href="#">169-0256</a>	05	001	MOUNTING GP-BUS BAR
	<a href="#">NPR</a>	IY	<a href="#">169-4450</a>	03	001	HARNESS AS-WIRING
	<a href="#">NPR</a>	IY	<a href="#">170-8400</a>	03	001	COVER GP-CONTROL PANEL
	<a href="#">NPR</a>	IY	<a href="#">183-4729</a>	03	001	COVER GP-ACCESS
	<a href="#">NPR</a>	IY	<a href="#">189-6394</a>	00	001	CONNECTION GP-GENERATOR LEADS
	<a href="#">NPR</a>	IY	<a href="#">194-0906</a>	00	001	WIRING GP-ENGINE
	<a href="#">NPR</a>	IY	<a href="#">195-8022</a>	01	001	HARNESS AS-WIRING
	<a href="#">NPR</a>	IY	<a href="#">195-8025</a>	01	001	HARNESS AS-WIRING
	<a href="#">NPR</a>	IY	<a href="#">195-8030</a>	00	001	WIRING GP-ENGINE
	<a href="#">NPR</a>	IY	<a href="#">195-8033</a>	00	001	FASTENER GP-WIRING HARNESS
	<a href="#">NPR</a>	IY	<a href="#">196-8775</a>	01	001	SWITCH GP-DISCONNECT
	<a href="#">NPR</a>	IY	<a href="#">201-4237</a>	00	001	TURBOCHARGER GP
	<a href="#">NPR</a>	IY	<a href="#">202-2009</a>	03	001	ENGINE AR
	<a href="#">NPR</a>	IY	<a href="#">204-2515</a>	00	001	WIRING GP-GENERATOR
	<a href="#">NPR</a>	IY	<a href="#">204-9824</a>	00	001	PANEL GP-ELECTRONIC
	<a href="#">NPR</a>	IY	<a href="#">205-0995</a>	00	001	GENERAL AR
	<a href="#">NPR</a>	IY	<a href="#">207-8040</a>	01	001	BASE GP-ENGINE & GENERATOR
	<a href="#">NPR</a>	I	1W-1340	01	001	MOUNTING GP-ALTERNATOR
	<a href="#">NPR</a>	I	5N-0369	05	001	CIRCUIT BREAKER GP
	<a href="#">NPR</a>	IY	<a href="#">204-7439</a>	00	001	LINES GP-ENGINE OIL DRAIN
	<a href="#">NPR</a>	IY	<a href="#">169-0296</a>	03	001	CONNECTION GP-GENERATOR LEADS
	<a href="#">NPR</a>	IY	<a href="#">4W-6328</a>	06	001	PANEL GP-INSTRUMENT
	<a href="#">NPR</a>	IRY	<a href="#">5N-5692</a>	12	001	ALTERNATOR GP-CHARGING
		I	3L-0462		001	TEST- GAS GENSET
		I	3L-0436		001	CHART-SPECIFICATION
	<a href="#">NPR</a>	IY	<a href="#">205-7860</a>	01	001	FILM GP
	<a href="#">NPR</a>	IY	<a href="#">198-8793</a>	00	001	SUPPORT GP-BATTERY
	<a href="#">NPR</a>	IY	<a href="#">101-8639</a>	01	001	WIRING GP-ALTERNATOR
		I	5P-2506	00	001	LITERATURE GP
	<a href="#">NPR</a>	I	8M-7892	18	001	AMMETER GP
	<a href="#">NPR</a>	I	9Y-6061	03	001	VALVE GP-SOLENOID
	<a href="#">NPR</a>	IY	<a href="#">111-6836</a>	04	001	LINES GP-WATER
	<a href="#">NPR</a>	IY	<a href="#">206-5551</a>	01	001	WIRING GP-GENERATOR

	<a href="#">NPR</a>	IY	<a href="#">146-1859</a>	00	001	SHUTOFF GP-ELECTRICAL
	<a href="#">NPR</a>	IY	<a href="#">212-6298</a>	00	001	SENSOR GP-SPEED
	<a href="#">NPR</a>	IY	<a href="#">208-7866</a>	00	001	PLATE & FILM GP
	<a href="#">NPR</a>	IY	<a href="#">166-5034</a>	02	001	FUMES DISPOSAL GP
	<a href="#">NPR</a>	I	7X-2425	01	001	OIL
		I	CA1516	01	001	GENERATOR AR-OPTIONAL-PM-SR4B
		IY	<a href="#">136-6634</a>	00	001	GENERATOR AR
	<a href="#">NPR</a>	IY	<a href="#">143-9518</a>	07	001	REGULATOR GP-VOLTAGE
	<a href="#">NPR</a>	IY	<a href="#">153-3434</a>	04	001	MOUNTING GP-ENGINE FLEXIBLE
		I	LE4081	00	001	GENERATOR REMOVAL 592 FRAME
		I	CA0847	04	001	METRIC DISPLAY UNITS 01
		I	121-4714	00	001	UNITS AS-METERIC
		I	CA1430	04	001	RELAY GP-COMMON ALARM/SHUTDOWN
	<a href="#">NPR</a>	IY	<a href="#">190-2565</a>	03	001	HARNES AS-WIRING
	<a href="#">NPR</a>	IY	<a href="#">200-0844</a>	01	001	RELAY GP
		I	CA1619	04	001	RELAY GP-RUNNING
	<a href="#">NPR</a>	IY	<a href="#">190-2566</a>	03	001	HARNES AS-WIRING
	<a href="#">NPR</a>	IY	<a href="#">200-0842</a>	01	001	RELAY GP
		I	CA1432	03	001	CONTROL GP-CUSTOMER INTERFACE
	<a href="#">NPR</a>	IY	<a href="#">171-6828</a>	02	001	MODULE GP-INTERFACE
		I	CA1437	03	001	CONTROL GP-ALARM MODULE-CAM W/
	<a href="#">NPR</a>	IY	<a href="#">171-6826</a>	03	001	PANEL GP-INSTRUMENT
		I	LE4102	00	001	2301A LOADSHARE MODULE GROUP
	<a href="#">NPR</a>	IY	<a href="#">172-0323</a>	01	001	CONTROL GP-GOVERNOR
		I	CA1445	02	001	HEATER GP-SPACE
	<a href="#">NPR</a>	IY	<a href="#">171-6842</a>	02	001	CONNECTION GP-ELECTRICAL
		I	LE4051	03	001	RADIATOR REMOVAL FOR G3412 LE
	<a href="#">NPR</a>	IY	<a href="#">7E-9050</a>	01	001	GUARD GP-DAMPER
		I	CA1449	03	001	BATTERY CHARGER - 10 AMP NON-U
	<a href="#">NPR</a>	IY	<a href="#">171-6839</a>	04	001	CONNECTION GP-ELECTRICAL
		I	CA1072	03	001	BATTERY REMOVAL
		I	5N-9597		001	VOLTAGE INDICATOR 480V, 60HZ
		I	9Y-8164		001	CONTINUOUS POWER APPLICATION
		I	0V-1065		001	END USE: GENERAL EPG
		I	0P-7824		001	DOMESTIC PACK-EXPORT CONTAINER
		I	0P-9715		001	EXTRA ENGLISH LITERATURE (1-6)

	I	0P-1793		001	PGS TEST REPORT @ 0.8 PF
	I	CA0866	05	001	LANGUAGE MARKINGS-ENGLISH
	I	GG5121	02	001	375 EKW @ 1800 RPM (475 BKW)
	I	0K-3396		001	375 EKW @ 1800 RPM (475 BKW)

Key:

I Installed

Y Separate Illustration

L Less Indicator

R REMFG PART MAY BE AVAILABLE