

3516B GENERATOR SET

Engine Serial Number - ZAP (Build Date - 09/2007, Test Date - 09/2007)

▼ ENGINE - ENTIRE GROUP (ZAP)

<u>Qty.</u>	<u>NPR</u>	<u>Note</u>	<u>Part No.</u>	<u>Change Level</u>	<u>Req. Qty</u>	<u>Part Name</u>
						FEATURE CODES
		I	516DE3R	F	001	3516B, 60HZ, 1800RPM PGS 3R
		S	FWS0004	F	001	WATER SEPARATOR
		I	RADRM73	F	001	RADIATOR REMOVAL F60CTD, 0.370
		S	BTC1005	F	001	BATTERY CHARGER 10 AMP
		I	ALT2496	F	001	CHARGING ALTERNATOR-45AMP 96
		I	CT35006	F	001	CURRENT TRANSF., 3500:5 RATIO
		I	CUSTCNL	F	001	CUSTOMER CONNECTION MTG - LH
		I	LSMBOXR	F	001	LOAD SHARE MODULE MTG - RH
		I	BOTCBLR	F	001	BOTTOM CBL ENTRY NO SHROUD STD
		I	BUSBL6S	F	001	5000A LV BUS BARS RH(NEMA) STD
		I	EMCP31	F	001	EMCP 3.1 CONTROL PANEL
		I	NOENCPB	F	001	NO ENCLOSURE REAR (STANDARD)
		I	NOENCPL	F	001	NO ENCLOSURE LEFT (STANDARD)
		I	UIPBBHS	F	001	CONTROL PANEL MOUNT REAR (STD)
		I	60H-0480	F	001	60HZ 480 VOLTS
		I	MSEPGGN	F	001	GENERAL EPG
		I	DPX0001	F	001	DOMESTIC PACK-EXPORT CONTAINER
		I	MSCEC72	F	001	COMMERCIAL BUSINESSES
		I	MWCODEF	F	001	STANDBY POWER
		I	KW02000	F	001	2000 EKW W/FAN
		I	3516B	F	001	3516B NON EPA - EXPORT ONLY
		I	NONULL	F	001	NON UL 2200 LISTED PKG GEN SET
		I	NORAD	F	001	NO RADIATOR
		I	STANDBY	F	001	STANDBY POWER APPLICATION
		I	LOWBSFC	F	001	LOW BSFC
						PART NUMBERS
		I	GZ0117	07	001	3516B, 60HZ, 1800RPM PGS 3R
	NPR	IRY	256-0758	07	001	ENGINE AR
		I	3L-0284		001	*****TEST - PKG GEN SET*****
	NPR	IY	262-8106	00	001	GENERATOR AR
	NPR	IY	252-5590	02	001	FASTENER GP-GENERATOR COUPLING
		I	3L-0414		001	SINGLE BEARING GEN ALIGN-3500
		I	252-7405	00	001	***** TEST - GEN ELE SYS LE *

	NPR	SY	7W-0825	01	002	CABLE GP-BATTERY
	NPR	SY	3N-7056	00	002	SUPPORT GP-BATTERY
	NPR	SY	7L-7871	09	002	BATTERY GP
	NPR	IY	7C-0527	05	001	STARTING MOTOR GP-ELECTRIC
	NPR	IY	240-0740	01	001	SWITCH GP-DISCONNECT
	NPR	IY	245-0000	02	001	BOX GP-CONTROL PANEL
	NPR	IY	245-0087	05	001	MOUNTING GP-CONTROL PANEL
	NPR	IY	245-0095	01	001	WIRING GP-GENERATOR
	NPR	IY	245-0082	02	001	CONTROL GP-GENERATOR SET
	NPR	IY	252-7367	01	003	MOUNTING GP-PANEL
	NPR	IY	252-7409	01	001	FASTENER GP-WIRING HARNESS
	NPR	IY	245-0092	02	001	WIRING GP-GENERATOR
	NPR	IY	245-0003	05	001	BOX GP-EXTENSION TERMINAL
	NPR	IY	269-3488	02	001	COVER GP-GENERATOR
	NPR	IY	252-7438	03	002	PLUG GP-BOX
	NPR	IY	252-7343	02	001	BUS BAR GP-BOX
	NPR	IY	252-7372	01	001	WIRING GP-GENERATOR
	NPR	IY	252-7418	03	001	WIRING GP-GENERATOR
	NPR	IY	252-7556	00	002	COVER GP-CONTROL PANEL
	NPR	IY	260-6666	05	001	CONNECTION GP-GENERATOR LEADS
	NPR	IY	252-7411	09	001	GROUND GP-ELECTRICAL
	NPR	IY	245-0001	00	001	COVER GP-CONTROL PANEL
	NPR	IY	245-0013	01	001	COVER GP-GENERATOR
	NPR	IY	245-0007	01	002	COVER GP-GENERATOR
	NPR	IY	245-0023	01	001	COVER GP-CONTROL PANEL
	NPR	I	254-6260	04	001	ELECTRONIC GP-ENGINE
	NPR	IY	267-8472	07	001	PANEL GP-CONTROL
	NPR	IY	267-8473	07	001	BOX GP-ELECTRONIC
	NPR	IY	245-0096	00	001	COVER GP-EXTENSION BOX
	NPR	IY	245-0025	00	001	COVER GP-EXTENSION BOX
	NPR	IY	245-0024	00	001	COVER GP-ENCLOSURE
	NPR	IY	259-2168	03	001	SENSOR GP-TEMPERATURE
	NPR	IY	245-0031	02	001	WIRING GP-ENGINE
		I	252-7392	00	001	INSTRUCTIONS
		I	252-7400	01	001	NOTE-BUSS BAR MOUNTING
	NPR	IY	268-4442	02	001	DRAIN GP-ENGINE OIL
	NPR	I	5P-2586	04	416	OIL
	NPR	IY	147-3738	02	001	VALVE GP-FLUID SAMPLING
	NPR	IY	7N-6782	07	001	INDICATOR GP-AIR FILTER CHANGE
	NPR	IY	208-0820	04	001	MOUNTING GP-AIR CLEANER

	NPR	IY	208-0821	01	001	LINES GP-AIR
	NPR	SY	5N-2438	05	001	LINES GP-FLEXIBLE FUEL
	NPR	IY	115-1063	04	001	PUMP GP-FUEL PRIMING
	NPR	IY	120-9818	06	002	FUMES DISPOSAL GP
	NPR	SY	9Y-5563	03	002	FUMES DISPOSAL GP
	NPR	IY	245-8742	00	001	RAIL GP-ENGINE & GEN SUPPORT
	NPR	SY	256-3168	01	001	MOUNTING GP-ENGINE FLEXIBLE
	NPR	IY	244-4064	02	001	MOUNTING GP-RAIL
	NPR	IY	197-9052	00	001	GUARD GP-DAMPER
		S	5P-2506	00	001	LITERATURE GP
	NPR	IY	252-7700	00	001	PLUG GP-BOX
	NPR	IY	241-0235	00	001	WIRING GP-ELECTRIC STARTING
	NPR	IY	242-7068	00	001	WIRING GP-ELECTRIC STARTING
	NPR	IY	205-7860	08	001	FILM GP
	NPR	IY	3N-8594	06	005	COVER GP-ENGINE LIFTING EYE
		I	LE0196	01	001	FUEL WATER SEPARATOR
	NPR	SY	233-7973	01	001	SEPARATOR GP-WATER
		I	GP0150	01	001	RADIATOR REMOVAL F60CTD, 0.370
	NPR	IY	4P-7072	03	001	CONNECTION GP-WATER
		I	LE0162	01	001	BATTERY CHARGER - 10 AMP
	NPR	SY	7W-0408	01	001	BATTERY CHARGER
		I	GZ0290	01	001	ALTERNATOR-CHARGING
	NPR	IY	107-7361	04	001	DRIVE GP-ACCESSORY
	NPR	IRY	5N-5692	12	001	ALTERNATOR GP-CHARGING
	NPR	IY	7E-4836	09	001	MOUNTING GP-ALTERNATOR
	NPR	IY	271-9270	02	001	GUARD GP-BELT
	NPR	IY	126-9191	05	001	GROUND GP-ELECTRICAL
	NPR	IY	133-6468	01	001	WIRE AS-GROUND
	NPR	IY	241-0243	00	001	WIRING GP-ALTERNATOR
	NPR	IY	151-9228	02	001	GUARD GP-BELT
		I	GC2903	00	001	MOUNTING GP-CT (3500:5)
	NPR	IY	252-7332	03	001	TRANSFORMER GP-CURRENT
		I	GC2933	00	001	CUSTOMER CONNECTION
		I	252-7393	00	001	INSTRUCTIONS
		I	GC2941	00	001	LOAD SHARE MODULE BOX
		I	252-7397	02	001	NOTE-GOVERNER/CONTROL PANEL MT
	NPR	IY	252-7369	04	001	CONTROL GP-LOAD SHARE MODULE
		I	GC2501	01	001	BOTTOM CBL ENTRY NO SHROUD STD
		I	252-7502	04	001	INSTRUCTIONS
		I	5N-9597		001	VOLTAGE INDICATOR 480V, 60HZ

	I	0V-1065		001	END USE: GENERAL EPG
	I	0P-7824		001	DOMESTIC PACK-EXPORT CONTAINER
	I	LL5670	01	001	2876 BHP 2000 GEN KW W/F
	I	0K-6352		001	2145 BKW (2876 BHP) @ 1800 RPM
	I	5N-9582		001	LOW BSFC STRATEGY
					SHIPPED LOOSE
	S	ESO		001	(PRNT ESO COPY)
	S	PML		001	*REQUIRED DECALS
	NPR	S 2N-8928		008	CLIP
	NPR	S 2V-7397		002	CABLE AS
	NPR	S 3K-1715		002	CABLE AS
	NPR	S 3N-6504		001	HOSE AS
	NPR	S 3N-7054		002	SUPPORT AS-BATTERY
	NPR	S 3N-7055		002	BOARD
	NPR	SY 3N-7056		001	SUPPORT GP-BATTERY
	NPR	S 3V-6785		002	CABLE AS
	NPR	S 5F-5990		002	CLIP
	NPR	SY 5N-2438		001	LINES GP-FLEXIBLE FUEL
	NPR	S 5P-0597		002	CLAMP-HOSE
	NPR	S 5P-1472		580	HOSE
		SY 6L-4502		001	CHART-PLATE & FILM
	NPR	S 6V-8801		008	NUT
	NPR	SY 7L-7871		001	BATTERY GP
	NPR	S 7N-5274		002	COVER AS-TERMINAL
	NPR	SY 7W-0408		001	BATTERY CHARGER
	NPR	SY 7W-0825		001	CABLE GP-BATTERY
	NPR	S 8L-8413		004	STRAP-CABLE
	NPR	S 8N-0869		002	COVER-TERMINAL
	NPR	S 8N-1186		001	HOSE AS
	NPR	S 8N-1663		002	BOOT
	NPR	S 8N-1725		002	COVER AS-TERMINAL
	NPR	S 8T-4131		010	NUT
	NPR	S 8T-4896		016	WASHER-HARD
	NPR	S 9B-7237		008	BOLT
	NPR	S 9G-0003		004	COVER AS-TERMINAL
	NPR	S 9G-0004		004	COVER AS-TERMINAL
	NPR	S 9G-8909		002	COVER-TERMINAL
	NPR	S 9X-9720		004	BATTERY
	NPR	SY 9Y-5563		001	FUMES DISPOSAL GP
	NPR	S 168-7790		010	BOLT

<input type="checkbox"/>	NPR	S	177-1452	010	WASHER-HARD
<input type="checkbox"/>	NPR	SY	233-7973	001	SEPARATOR GP-WATER
<input type="checkbox"/>	NPR	SY	256-3168	001	MOUNTING GP-ENGINE FLEXIBLE
<input type="checkbox"/>		S	259-2174	010	MOUNT-ISOLATION
<input type="checkbox"/>		S	SEBU6251	001	LUBE 140019B2(A)
<input type="checkbox"/>		S	SEBU7789	001	OMM
<input type="checkbox"/>		S	SELF5405	001	WARRANTY
<input type="checkbox"/>		S	SERP4057	001	PTSCD