

3512B GEN SET ENGINE

Engine Serial Number - 6WN (Build Date - 01/2000, Test Date - 01/2000, Ship Date - 01/2000)

[View Latest Kit Information](#)

▼ ENGINE - ENTIRE GROUP (6WN)

<u>Qty.</u>	<u>NPR</u>	<u>Note</u>	<u>Part No.</u>	<u>Change Level</u>	<u>Req. Qty</u>	<u>Part Name</u>
						<b>FEATURE CODES</b>
		I	KW01500	F	001	1500 EKW W/FAN
		I	512DE76	F	001	3512B 1500 EKW 60 HZ - LO BSFC
		I	GENCON1	F	001	GENERATOR CONVERSION
		I	CAACBX1	F	001	CABLE ACCESS BOX
		I	RADDFL1	F	001	RADIATOR DUCT FLANGE
		I	ACT0005	F	001	ANTIFREEZE
		I	FPPRH02	F	001	FUEL PRIMING PUMP, RH MOUNTED
		I	FLN0001	F	001	FLEXIBLE FUEL LINES
		I	FULCOL2	F	001	FUEL COOLER
		I	FUMDIS4	F	001	FUMES DISPOSAL
		I	OPADR4	F	001	OIL PAN DRAIN VALVE
		I	LUBOIL1	F	001	LUBRICATING OIL
		I	JWHD002	F	001	JACKET WATER HEATER - DUAL
		I	LWS0001	F	001	LOW WATER TEMPERATURE SWITCH
		I	BAT2417	F	001	24 VOLT BATTERY SET - DRY
		I	BTRCBL1	F	002	BATTERY CABLES
		I	ALT2442	F	001	CHARGING ALTERNATOR 24V 35 AMP
		I	EMCENGU	F	001	ENGLISH DISPLAY UNITS
		I	EMCAM06	F	001	ALARM MODULE - NFPA 99
		I	EMCPLAR	F	001	PANEL LIGHTS/AUXILIARY RELAY
		I	EMCCIM1	F	001	CUSTOMER INTERFACE MODULE-CIM
		I	ALSLSM1	F	001	LOAD SHARE MODULE
		I	WTLVLS3	F	001	WATER LEVEL SWITCH GAUGE
		I	TSPCSA5	F	001	NEUTRAL GROUNDING CONNECTION
		I	SHREL01	F	001	SPACE HEATER RELAY
		I	60H-0480	F	001	60HZ 480 VOLTS

	I	TRSGEN7	F	001	GEN SET TEST CHG AT 0.8 PF
	I	MSEPGGN	F	001	GENERAL EPG
	I	3512B	F	001	3512B DIESEL ENGINE.
	I	LOWBSFC	F	001	LO BSFC
	I	60HERTZ	F	001	60 HERTZ
	I	STANDBY	F	001	STANDBY POWER APPLICATION
	I	EMCPTWO	F	001	ELECTRONIC MODULAR CONTROL PNL
					<b>PART NUMBERS</b>
	I	PP3562	07	001	2172 BHP 1545 GEN KW WOF 60 HZ
	I	0P-8910		001	IX96-703_ POST SALE SPAR
	I	LA2123	02	001	3512B 1500 EKW 60 HZ - LO BSFC
	<a href="#">NPR</a>	IY <a href="#">128-2846</a>	03	001	ENGINE AR
		I		001	SINGLE BEARING GEN ALIGN-3500
		I		001	TEST - PKG GEN SET (EMCP II
	<a href="#">NPR</a>	IY <a href="#">4P-0558</a>	00	001	AIR CLEANER GP
		I		001	LOW BSFC - 3500B SERIES.
		I		001	LITERATURE GP
	<a href="#">NPR</a>	IY <a href="#">7C-0526</a>	01	001	STARTING MOTOR GP-ELECTRIC
	<a href="#">NPR</a>	IY <a href="#">7C-1664</a>	07	001	DRIVE GP-FAN
	<a href="#">NPR</a>	I	02	001	GUARD GP-BELT
	<a href="#">NPR</a>	IY <a href="#">7N-6782</a>	08	001	INDICATOR GP-AIR FILTER CHANGE
	<a href="#">NPR</a>	IY <a href="#">7W-5224</a>	00	001	PULLEY GP-FAN DRIVE
	<a href="#">NPR</a>	IY <a href="#">7W-5639</a>	02	001	FAN GP-BLOWER
	<a href="#">NPR</a>	IY <a href="#">7W-6669</a>	01	001	GUARD GP-DAMPER
	<a href="#">NPR</a>	IY <a href="#">8N-9639</a>	04	001	GUARD GP-DAMPER
	<a href="#">NPR</a>	IY <a href="#">9Y-6676</a>	04	001	RADIATOR GP
	<a href="#">NPR</a>	I	03	001	MOUNTING GP-CONTROL PANEL
	<a href="#">NPR</a>	IY <a href="#">113-1592</a>	03	001	MOUNTING GP-AIR CLEANER
	<a href="#">NPR</a>	I	00	001	RAIL GP-ENGINE & GEN SUPPORT
	<a href="#">NPR</a>	IY <a href="#">121-4450</a>	10	001	PANEL GP-CONTROL
	<a href="#">NPR</a>	IY <a href="#">121-8856</a>	06	001	CONNECTION GP-ELECTRICAL
	<a href="#">NPR</a>	IY <a href="#">126-9191</a>	02	001	GROUND GP-ELECTRICAL
	<a href="#">NPR</a>	IY <a href="#">134-0056</a>	04	001	WIRING GP-ENGINE
	<a href="#">NPR</a>	I	01	001	BOX GP-GENERATOR CONNECTION
	<a href="#">NPR</a>	I	03	001	GENERATOR AR
	<a href="#">NPR</a>	I	02	001	INSTALLATION AR-GENERATOR

	I	LA1969	03	001	GENERATOR CONVERSION
<a href="#">NPR</a>	I	154-6022	00	001	CONVERSION GP-GENERATOR
	I	3L-0456		001	PROCEDURE - DVR PROG AND TEST
<a href="#">NPR</a>	I	121-6202	06	001	REGULATOR GP-VOLTAGE
<a href="#">NPR</a>	I	145-5138	00	001	WIRING GP-ELECTRONIC CONTROL
<a href="#">NPR</a>	I	122-1194	01	001	BOX & MOUNTING GP
<a href="#">NPR</a>	IY	<a href="#">9Y-7822</a>	03	001	FLANGE GP-RADIATOR
	I	PA3948	04	001	ANTIFREEZE
<a href="#">NPR</a>	I	2P-9868	04	001	ANTIFREEZE
	I	5N-3701		001	**FACTORY NOTE**
	I	LA3236	00	001	FUEL PRIMING PUMP AR-RH
<a href="#">NPR</a>	IY	<a href="#">124-3187</a>	04	001	LINES GP-FUEL PRIMING
<a href="#">NPR</a>	IY	<a href="#">165-9154</a>	02	001	PUMP GP-FUEL PRIMING
<a href="#">NPR</a>	IY	<a href="#">5N-2438</a>	05	001	LINES GP-FLEXIBLE FUEL
<a href="#">NPR</a>	IY	<a href="#">7E-6681</a>	03	001	COOLER GP-FUEL
	I	LA1060	05	001	FUMES DISPOSAL
<a href="#">NPR</a>	IY	<a href="#">9Y-5563</a>	00	001	FUMES DISPOSAL GP
<a href="#">NPR</a>	IY	<a href="#">120-9818</a>	04	001	FUMES DISPOSAL GP
<a href="#">NPR</a>	IY	<a href="#">9Y-7876</a>	01	001	DRAIN GP-ENGINE OIL
	I	PA5311	05	001	LUBRICATING OIL
<a href="#">NPR</a>	I	5P-2586	03	001	OIL
	I	PA4391	08	001	JACKET WATER HEATER - DUAL
<a href="#">NPR</a>	IY	<a href="#">6I-1041</a>	04	001	MOUNTING GP-JACKET WTR HEATER
<a href="#">NPR</a>	IY	<a href="#">6I-1042</a>	06	001	MOUNTING GP-JACKET WTR HEATER
<a href="#">NPR</a>	IY	<a href="#">7E-6248</a>	06	001	HEATER GP-JACKET WATER
<a href="#">NPR</a>	I	3E-0264	02	001	SWITCH GP-TEMPERATURE
	I	PA1787	09	001	24 VOLT BATTERY SET - DRY
<a href="#">NPR</a>	I	7L-7872	08	001	BATTERY GP
<a href="#">NPR</a>	IY	<a href="#">7W-0825</a>	01	002	CABLE GP-BATTERY
	I	LA0427	08	001	CHARGING ALTERNATOR 24V 35AMP
<a href="#">NPR</a>	IY	<a href="#">7C-4803</a>	02	001	ALTERNATOR GP-CHARGING
<a href="#">NPR</a>	IY	<a href="#">7E-4836</a>	04	001	MOUNTING GP-ALTERNATOR
<a href="#">NPR</a>	IY	<a href="#">7W-5780</a>	04	001	GUARD GP-BELT
<a href="#">NPR</a>	IY	<a href="#">107-7361</a>	01	001	DRIVE GP-ACCESSORY
<a href="#">NPR</a>	I	133-6468	01	001	WIRE AS-GROUND
	I	121-4713	00	001	INSTRUCTIONS

	<a href="#">NPR</a>	IY	<a href="#">121-4716</a>	01	001	MODULE GP-ALARM
	<a href="#">NPR</a>	IY	<a href="#">121-4712</a>	01	001	PANEL GP-ELECTRONIC
	<a href="#">NPR</a>	I	9Y-6496	02	001	MODULE GP-INTERFACE
		I	LA0498	06	001	LOAD SHARE MODULE
	<a href="#">NPR</a>	IY	<a href="#">149-6326</a>	02	001	GOVERNOR GP-ELECTRONIC
	<a href="#">NPR</a>	IY	<a href="#">7E-9267</a>	00	001	SWITCH GP-COOLANT LEVEL
	<a href="#">NPR</a>	I	121-9480	02	001	CONNECTION GP-TERMINAL STRIP
	<a href="#">NPR</a>	I	122-0335	02	001	RELAY GP
		I	5N-9597		001	VOLTAGE INDICATOR - 480 VOLT
		I	0P-1793		001	GEN SET TEST CHG AT 0.8 PF
		I	0V-1065		001	END USE: GENERAL EPG
		I	PP3562	07	001	2172 BHP 1545 GEN KW WOF 60 HZ
		I	2T-8373	00	001	1620 KW @ 1800 RPM (2172 BHP)
						<b>SHIPPED LOOSE</b>
	<a href="#">NPR</a>	S	0S-1588		008	BOLT
	<a href="#">NPR</a>	S	2N-8928		008	CLIP
	<a href="#">NPR</a>	S	2V-7397		002	CABLE AS
	<a href="#">NPR</a>	S	3K-1715		002	CABLE AS
	<a href="#">NPR</a>	S	3N-6504		001	HOSE AS
	<a href="#">NPR</a>	S	3V-6785		002	CABLE AS
	<a href="#">NPR</a>	S	5F-5990		002	CLIP
	<a href="#">NPR</a>	S	5M-2894		016	WASHER-HARD
	<a href="#">NPR</a>	S	5P-0597		002	CLAMP-HOSE
	<a href="#">NPR</a>	S	5P-1472		580	HOSE
	<a href="#">NPR</a>	S	6V-2687		002	SCREW-PAN HEAD
	<a href="#">NPR</a>	S	7N-5274		002	COVER AS-TERMINAL
	<a href="#">NPR</a>	S	8L-8413		004	STRAP-CABLE
	<a href="#">NPR</a>	S	8N-0869		002	COVER-TERMINAL
	<a href="#">NPR</a>	S	8N-1186		001	HOSE AS
	<a href="#">NPR</a>	S	8N-1663		002	BOOT
	<a href="#">NPR</a>	S	8N-1725		002	COVER AS-TERMINAL
	<a href="#">NPR</a>	S	9G-0003		004	COVER AS-TERMINAL
	<a href="#">NPR</a>	S	9G-0004		004	COVER AS-TERMINAL
	<a href="#">NPR</a>	S	9G-8909		002	COVER-TERMINAL
	<a href="#">NPR</a>	S	9S-8752		008	NUT-FULL
	<a href="#">NPR</a>	S	9X-0203		001	MODULE GP-RELAY DRIVER

	<a href="#">NPR</a>	S	9X-9730	004	BATTERY GP
	<a href="#">NPR</a>	SY	<a href="#">9Y-6497</a>	001	BOARD AS-RELAY
		S	9Y-9892	001	INSTRUCTIONS
	<a href="#">NPR</a>	S	171-6719	001	KIT-PARTS
	<a href="#">NPR</a>	SY	<a href="#">171-6721</a>	001	KIT-PARTS
		S	SEBP2414	001	PTSBK
		S	SEBP2443	001	PTSBK
		S	SEBU6251	001	LUBE 1632-16 (A)
		S	SEBU6916	001	OMM
		S	SEBU6918	001	OMM
		S	SEBU6984	001	SUPP 140013B1(A)
		S	SELF5260	001	NEW WARRANTY 1630-17 (A)
		S	SELS0086	001	S.I.
		S	ESO	001	(PRNT ESO COPY)
		S	PML	001	*REQUIRED DECALS

Key:

I Installed

Y Separate Illustration

S Shipped Loose