

3406C GEN SET ENGINE

Engine Serial Prefix - 1LS (Build Date - 11/1996, Test Date - 11/1996, Ship Date - 11/1996)

▼ ENGINE - ENTIRE GROUP (1LS)

<u>Qty.</u>	<u>NPR</u>	<u>Note</u>	<u>Part No.</u>	<u>Change Level</u>	<u>Req. Qty</u>	<u>Part Name</u>
		I	CA0525	06	001	<b>PART NUMBERS</b> 3406 480 VOLT 60 HZ PGS
	<a href="#">NPR</a>	IY	<a href="#">131-6598</a>	01	001	ENGINE AR
	<a href="#">NPR</a>	IY	<a href="#">2W-8198</a>	09	001	SHUTOFF GP-ELECTRICAL
		I	3L-0432		001	*TEST - PKG GEN SET (EMCP II)*
	<a href="#">NPR</a>	IY	<a href="#">4N-1062</a>	10	001	STARTING MOTOR GP-ELECTRIC
	<a href="#">NPR</a>	IY	<a href="#">4N-3093</a>	08	001	FAN GP-BLOWER
	<a href="#">NPR</a>	IY	<a href="#">4N-9778</a>	03	001	LINES GP-WATER
	<a href="#">NPR</a>	IY	<a href="#">4P-7610</a>	02	001	SENSOR GP-SPEED
	<a href="#">NPR</a>	IY	<a href="#">4W-1727</a>	00	001	COVER GP-FUEL TRANSFER
		I	5N-7601		001	NOTE-CONT.& PNL CHART 129-4053
		I	5P-2506	00	001	LITERATURE GP
	<a href="#">NPR</a>	I	5P-2586	03	001	OIL
	<a href="#">NPR</a>	IY	<a href="#">6L-2927</a>	07	001	ELBOW GP-EXHAUST
	<a href="#">NPR</a>	IY	<a href="#">7N-8837</a>	02	001	DRIVE GP-FAN
	<a href="#">NPR</a>	IY	<a href="#">8N-6115</a>	02	001	AIR CLEANER GP
	<a href="#">NPR</a>	IY	<a href="#">103-1736</a>	01	001	WIRING GP-PANEL
	<a href="#">NPR</a>	IY	<a href="#">103-1956</a>	00	001	MOUNTING GP-CONTACTOR
	<a href="#">NPR</a>	IY	<a href="#">103-6101</a>	02	001	CONTROL GP-ENGINE MONITORING
	<a href="#">NPR</a>	IY	<a href="#">104-4704</a>	03	001	MOUNTING GP-CONTROL PANEL
	<a href="#">NPR</a>	IY	<a href="#">109-1532</a>	01	001	FUMES DISPOSAL GP
	<a href="#">NPR</a>	IY	<a href="#">109-3319</a>	02	001	COUPLING GP-GENERATOR
	<a href="#">NPR</a>	IY	<a href="#">111-4421</a>	01	001	ACTUATOR AS-GOVERNOR
	<a href="#">NPR</a>	IY	<a href="#">111-7534</a>	01	001	MOUNTING GP-ACTUATOR
	<a href="#">NPR</a>	IY	<a href="#">128-5881</a>	00	001	BASE GP-ENGINE & GENERATOR
	<a href="#">NPR</a>	IY	<a href="#">129-1483</a>	01	001	GENERATOR AR
	<a href="#">NPR</a>	IY	<a href="#">129-6803</a>	03	001	CONNECTION GP-ELECTRICAL
	<a href="#">NPR</a>	IY	<a href="#">129-7502</a>	01	001	LINES GP-COOLANT DRAIN
	<a href="#">NPR</a>	IY	<a href="#">129-7504</a>	01	001	LINES GP-ENGINE OIL DRAIN
	<a href="#">NPR</a>	IY	<a href="#">130-3480</a>	00	001	MOUNTING GP-VOLTAGE REGULATOR
	<a href="#">NPR</a>	IY	<a href="#">131-3533</a>	01	001	PUMP GP-GOV & FUEL INJ
	<a href="#">NPR</a>	IY	<a href="#">131-5455</a>	00	001	CONTROL AS-GOVERNOR
	<a href="#">NPR</a>	IY	<a href="#">1W-7411</a>	02	001	CONTROL GP-GOVERNOR
	<a href="#">NPR</a>	IY	<a href="#">7N-9946</a>	11	001	RADIATOR GP

	I	9Y-8156		001	STANDBY POWER APPLICATION
	I	PA5035	00	001	CHARGING ALTERNATOR 24V 35 AMP
	<a href="#">NPR</a>	IY <a href="#">2W-9664</a>	06	001	GUARD GP-BELT
	<a href="#">NPR</a>	IY <a href="#">4W-5580</a>	04	001	MOUNTING GP-ALTERNATOR
	<a href="#">NPR</a>	IRY <a href="#">6T-1395</a>	05	001	ALTERNATOR GP-CHARGING
	<a href="#">NPR</a>	I 103-7284	00	001	MOUNTING GP-CIRCUIT BREAKER
		I CA0563	00	001	EXTENDED LIFE COOLANT
	<a href="#">NPR</a>	I 119-5148	01	001	COOLANT-EXTENDED LIFE
		I CA0456	03	001	WEATHER PROTECTIVE ENCL-YELLOW
	<a href="#">NPR</a>	IY <a href="#">129-9424</a>	02	001	ENCLOSURE GP-GENERATOR
	<a href="#">NPR</a>	IY <a href="#">128-7405</a>	01	001	SHIELD-RAIN
	<a href="#">NPR</a>	IY <a href="#">5N-0378</a>	04	001	FILTER GP-PRIMARY FUEL
		I CA0427	00	001	AUTOMATIC VOLTAGE REGULATOR
	<a href="#">NPR</a>	IY <a href="#">130-3460</a>	00	001	REGULATOR GP-VOLTAGE
		I CA0415	00	001	CIRCUIT BREAKER W/ST 600 AMP
	<a href="#">NPR</a>	IY <a href="#">6I-3340</a>	00	001	NEUTRAL BUS BAR AS
	<a href="#">NPR</a>	IY <a href="#">105-7185</a>	00	001	HARNESS AS-PANEL
	<a href="#">NPR</a>	I 106-1771	00	001	FASTENER GP-EXTENSION BOX
	<a href="#">NPR</a>	IY <a href="#">111-9705</a>	00	001	CIRCUIT BREAKER GP
	<a href="#">NPR</a>	IY <a href="#">129-5841</a>	00	001	COVER GP-GENERATOR
	<a href="#">NPR</a>	IY <a href="#">130-1969</a>	01	001	MOUNTING GP-CIRCUIT BREAKER
	<a href="#">NPR</a>	IY <a href="#">130-2572</a>	00	001	BOX GP-EXTENSION TERMINAL
	<a href="#">NPR</a>	IY <a href="#">105-7931</a>	01	001	SWITCH AS-AUXILIARY
	<a href="#">NPR</a>	IY <a href="#">121-4712</a>	01	001	PANEL GP-ELECTRONIC
		I 121-4713	00	001	INSTRUCTIONS
		I CA0445	00	001	LH MTG OF CONTROL PANEL
		I 5N-7575		001	NOTE-CONTROL PANEL MTG. LH.
	<a href="#">NPR</a>	IY <a href="#">128-8556</a>	00	001	ADAPTER GP-BASE END CHANNELS
		I CA0293	00	001	FUEL TANK BASE-1136 L(300 GAL)
	<a href="#">NPR</a>	IY <a href="#">110-9697</a>	02	001	LINES GP-FLEXIBLE FUEL
	<a href="#">NPR</a>	IY <a href="#">130-1095</a>	01	001	TANK AS-FUEL
		I CA0470	00	001	JACKET WATER HEATER
	<a href="#">NPR</a>	IY <a href="#">7E-6247</a>	02	001	HEATER GP-JACKET WATER
	<a href="#">NPR</a>	IY <a href="#">129-4439</a>	02	001	MOUNTING GP-JACKET WTR HEATER
		I CA0435	00	001	24V BAT SET-DRY 05
	<a href="#">NPR</a>	IY <a href="#">7L-7871</a>	08	001	BATTERY GP
	<a href="#">NPR</a>	IY <a href="#">128-5214</a>	00	001	SUPPORT GP-BATTERY
		I 5N-7596		001	NOTE - MOUNT CIRCUIT BKR LH
		I 0P-9715		001	EXTRA LITERATURE - ENGLISH
		I 0P-1803		001	PGS TEST REPORT @ 0.8 PF



I	0P-7613		001	SHRINK WRAP PROTECTION - 3406
I	0P-1829		001	<- RELATED ENGINE ORDER
I	0P-9877		001	0P9877 MEC INCENT PGM7212
I	PP3527	01	001	519 BHP 362 GEN KWWOF 1800 RPM
I	2T-8140	00	001	387 KW @ 1800 RPM (519 BHP)
I	0P-9833		001	PRE 01JUL91 PRC STBYOIL439-9