

3406B GEN SET ENGINE

Engine Serial Prefix - 4RG (Build Date - 11/1991, Test Date - 11/1991, Ship Date - 11/1991)

▼ ENGINE - ENTIRE GROUP (4RG)

<u>Qty.</u>	<u>NPR</u>	<u>Note</u>	<u>Part No.</u>	<u>Change Level</u>	<u>Req. Qty</u>	<u>Part Name</u>
		I	PA3456	04	001	<b>PART NUMBERS</b> 3406 DITA PACKAGE GEN SET- 00
	<a href="#">NPR</a>	IY	<a href="#">9Y-9143</a>	03	001	ENGINE AR
	<a href="#">NPR</a>	IY	<a href="#">2W-8198</a>	08	001	SHUTOFF GP-ELECTRICAL
		I	3L-0348		001	PACKAGE GS TEST - EMCP
	<a href="#">NPR</a>	IY	<a href="#">4N-1062</a>	10	001	STARTING MOTOR GP-ELECTRIC
	<a href="#">NPR</a>	IY	<a href="#">4P-3495</a>	00	001	INSTALLATION AR
		I	5N-7563		001	NOTE- CONTROL PANEL MTG (RH)
		I	5N-7577		001	CNTRL&POWER PANEL CHART 9Y1400
		I	5P-2506	00	001	LITERATURE GP
	<a href="#">NPR</a>	I	5P-2586	02	001	OIL
	<a href="#">NPR</a>	IY	<a href="#">6L-2927</a>	07	001	ELBOW GP-EXHAUST
	<a href="#">NPR</a>	IY	<a href="#">7C-4664</a>	04	001	DRIVE GP-FAN
	<a href="#">NPR</a>	IY	<a href="#">7C-4746</a>	00	001	PULLEY GP-FAN DRIVE
		I	7C-5073	00	001	INSTRUCTION-INSTALLATION
	<a href="#">NPR</a>	IY	<a href="#">7C-5135</a>	04	001	FAN GP-BLOWER
	<a href="#">NPR</a>	IY	<a href="#">7C-6513</a>	06	001	CONTROL GP-EMCP ELECTRONIC
	<a href="#">NPR</a>	IY	<a href="#">7C-9024</a>	00	001	COVER GP-REGULATOR HOUSING
	<a href="#">NPR</a>	IY	<a href="#">7E-3125</a>	01	001	MOUNTING GP-TRANSFORMER
	<a href="#">NPR</a>	IY	<a href="#">7W-3355</a>	04	001	SENSOR GP-SPEED
	<a href="#">NPR</a>	IY	<a href="#">7W-9662</a>	06	001	MOUNTING GP-CONTACTOR
	<a href="#">NPR</a>	IY	<a href="#">9Y-0433</a>	00	001	GENERATOR AR
	<a href="#">NPR</a>	IY	<a href="#">9Y-1858</a>	02	001	RADIATOR GP
	<a href="#">NPR</a>	IY	<a href="#">9Y-1859</a>	01	001	LINES GP-WATER
	<a href="#">NPR</a>	IY	<a href="#">9Y-1862</a>	05	001	BASE GP-ENGINE & GENERATOR
	<a href="#">NPR</a>	IY	<a href="#">9Y-1865</a>	05	001	ENCLOSURE GP-RADIATOR
	<a href="#">NPR</a>	IY	<a href="#">9Y-1866</a>	00	001	LINES GP-COOLANT DRAIN
	<a href="#">NPR</a>	IY	<a href="#">9Y-2280</a>	04	001	ENCLOSURE GP-GENERATOR
	<a href="#">NPR</a>	IY	<a href="#">9Y-2704</a>	02	001	CONNECTION GP-ELECTRICAL
		I	9Y-2705	01	001	PACKAGE WIRING - EMCP
	<a href="#">NPR</a>	IY	<a href="#">9Y-2932</a>	00	001	MOUNTING GP-CONTROL
	<a href="#">NPR</a>	IY	<a href="#">9Y-3041</a>	00	001	LINES GP-ENGINE OIL DRAIN
	<a href="#">NPR</a>	I	9Y-3288	02	001	PLATE AS
	<a href="#">NPR</a>	IY	<a href="#">9Y-3919</a>	00	001	WIRING GP-ENGINE
	<a href="#">NPR</a>	IY	<a href="#">9Y-6103</a>	01	001	AIR CLEANER GP

	I	PA3810	00	001	GOVERNOR GP-WOODWARD 8920
<a href="#">NPR</a>	IY	<a href="#">6N-1016</a>	02	001	FILLER GP-ENGINE OIL
<a href="#">NPR</a>	IY	<a href="#">7E-0123</a>	00	001	MOUNTING GP-GOVERNOR ACTUATOR
<a href="#">NPR</a>	I	7E-0597	00	001	CONTROL AS-GOVERNOR
<a href="#">NPR</a>	IY	<a href="#">7E-0598</a>	00	001	ACTUATOR AS-GOVERNOR
<a href="#">NPR</a>	IY	<a href="#">9Y-1869</a>	00	001	DUCT GP-CAB AIR
<a href="#">NPR</a>	IY	<a href="#">9Y-1870</a>	04	001	ENCLOSURE GP-ENGINE
<a href="#">NPR</a>	IY	<a href="#">9Y-1868</a>	02	001	FUMES DISPOSAL GP
<a href="#">NPR</a>	IY	<a href="#">9Y-4812</a>	02	001	LINES GP-FLEXIBLE FUEL
<a href="#">NPR</a>	IY	<a href="#">4N-3287</a>	06	001	PUMP GP-FUEL PRIMING
<a href="#">NPR</a>	IY	<a href="#">7C-5296</a>	01	001	PANEL GP-INSTRUMENT
<a href="#">NPR</a>	IY	<a href="#">9Y-2995</a>	01	001	HEATER GP-JACKET WATER
	I	PA2864	00	001	BATTERY & RACK GP-LM-INSTALLED
<a href="#">NPR</a>	IY	<a href="#">7C-1977</a>	02	001	BATTERY GP
<a href="#">NPR</a>	IY	<a href="#">9Y-1871</a>	03	001	SUPPORT GP-BATTERY
	I	0P-9814		001	M_____2 EMCP PANEL
<a href="#">NPR</a>	IY	<a href="#">5N-4126</a>	03	001	CONNECTION GP-GENERATOR LEADS
	I	0P-9885		001	0P9885 STANDBY PLUS PGM 344
	I	PP0996	01	001	587 BHP 410 GEN KWWOF 60 HZ
	I	0T-9203	00	001	438 KW @ 1800 RPM (587 BHP)
	I	5N-7545		001	NOTE-REMOVE STD GOV SPRING
<a href="#">NPR</a>	I	8N-9595	02	001	SPRING

Key:

I Installed

Y Separate Illustration