

3512B GEN SET ENGINE

Engine Serial Prefix - 6WN (Build Date - 01/1998, Test Date - 02/1998, Ship Date - 02/1998)

▼ ENGINE - ENTIRE GROUP (6WN)

<u>Qty.</u>	<u>NPR</u>	<u>Note</u>	<u>Part No.</u>	<u>Change Level</u>	<u>Req. Qty</u>	<u>Part Name</u>
		I	LA1291	07	001	<b>PART NUMBERS</b> 3512B 1500 EKW 60 HZ - LO BSFC
	<a href="#">NPR</a>	IY	<a href="#">128-2846</a>	03	001	ENGINE AR
		I	3L-0414		001	SINGLE BEARING GEN ALIGN-3500
		I	3L-0432		001	TEST - PKG GEN SET (EMCP II
	<a href="#">NPR</a>	IY	<a href="#">4P-0558</a>	00	001	AIR CLEANER GP
		I	5N-9582		001	LOW BSFC - 3500B SERIES.
		I	5P-2506	00	001	LITERATURE GP
	<a href="#">NPR</a>	IY	<a href="#">7N-6782</a>	07	001	INDICATOR GP-AIR FILTER CHANGE
	<a href="#">NPR</a>	IY	<a href="#">7W-6669</a>	01	001	GUARD GP-DAMPER
	<a href="#">NPR</a>	I	7W-8708	00	001	INSTALLATION AR-GENERATOR
	<a href="#">NPR</a>	IY	<a href="#">8N-9639</a>	04	001	GUARD GP-DAMPER
	<a href="#">NPR</a>	I	9Y-0528	00	001	GENERATOR AR
	<a href="#">NPR</a>	I	104-4704	03	001	MOUNTING GP-CONTROL PANEL
	<a href="#">NPR</a>	IY	<a href="#">113-1592</a>	02	001	MOUNTING GP-AIR CLEANER
	<a href="#">NPR</a>	I	115-4772	03	001	RAIL GP-ENGINE SUPPORT
	<a href="#">NPR</a>	IY	<a href="#">121-4450</a>	07	001	PANEL GP-CONTROL
	<a href="#">NPR</a>	I	121-6204	01	001	REGULATOR GP-VOLTAGE
	<a href="#">NPR</a>	IY	<a href="#">121-8856</a>	02	001	CONNECTION GP-ELECTRICAL
	<a href="#">NPR</a>	IY	<a href="#">126-9191</a>	02	001	GROUND GP-ELECTRICAL
	<a href="#">NPR</a>	IY	<a href="#">130-8002</a>	00	001	WIRING GP-ENGINE
	<a href="#">NPR</a>	IY	<a href="#">134-0056</a>	01	001	WIRING GP-ENGINE
	<a href="#">NPR</a>	I	115-3056	02	001	CONNECTION GP-TERMINAL STRIP
	<a href="#">NPR</a>	I	141-1809	01	001	BOX GP-GENERATOR CONNECTION
	<a href="#">NPR</a>	I	141-4987	01	001	COVER GP-GENERATOR
	<a href="#">NPR</a>	I	144-9059	00	001	TRANSFORMER GP-CURRENT
		I	LA0498	04	001	LOAD SHARE MODULE
	<a href="#">NPR</a>	I	126-3085	02	001	HARNESS AS-ENGINE
	<a href="#">NPR</a>	I	131-5459	00	001	CONTROL AS-GOVERNOR
	<a href="#">NPR</a>	IY	<a href="#">9Y-0326</a>	02	001	CONNECTION GP-WATER
	<a href="#">NPR</a>	I	115-1062	02	001	PUMP GP-FUEL PRIMING
	<a href="#">NPR</a>	IY	<a href="#">5N-2438</a>	05	001	LINES GP-FLEXIBLE FUEL
	<a href="#">NPR</a>	IY	<a href="#">121-4712</a>	01	001	PANEL GP-ELECTRONIC
	<a href="#">NPR</a>	IY	<a href="#">2W-5616</a>	03	001	COVER GP-OIL PAN

		I	PA5311	03	001	LUBRICATING OIL
	<a href="#">NPR</a>	I	5P-2586	03	001	OIL
		I	PA2478	05	001	ELECTRIC STARTING MOTOR LH
	<a href="#">NPR</a>	IY	<a href="#">8N-3896</a>	13	001	STARTING MOTOR GP-ELECTRIC
		I	PA4358	06	001	JACKET WATER HEATER - DUAL
	<a href="#">NPR</a>	IY	<a href="#">7E-6247</a>	02	001	HEATER GP-JACKET WATER
	<a href="#">NPR</a>	IY	<a href="#">6I-1041</a>	02	001	MOUNTING GP-JACKET WTR HEATER
	<a href="#">NPR</a>	IY	<a href="#">6I-1042</a>	04	001	MOUNTING GP-JACKET WTR HEATER
		I	LA1296	01	001	RADIATOR REMOVAL 46CV, 0.428
		I	5N-9597		001	VOLTAGE INDICATOR - 480 VOLT
		I	PP3562	03	001	2172 BHP 1545 GEN KW WOF 60 HZ
		I	2T-8373	00	001	1620 KW @ 1800 RPM (2172 BHP)
	<a href="#">NPR</a>	I	138-8798	00	001	SOFTWARE GP-ELECTRONIC
						<b>SHIPPED LOOSE</b>
	<a href="#">NPR</a>	S	0L-1351		002	BOLT
	<a href="#">NPR</a>	S	0L-2070		001	BOLT
	<a href="#">NPR</a>	S	1B-7182		001	BOLT
	<a href="#">NPR</a>	S	1P-7625		001	ELBOW
	<a href="#">NPR</a>	S	2H-9523		001	GROMMET
	<a href="#">NPR</a>	S	2W-2606		001	PUMP AS-FUEL PRIMING
	<a href="#">NPR</a>	S	3J-1907		001	SEAL-O-RING
	<a href="#">NPR</a>	S	3K-0360		001	SEAL-O-RING
	<a href="#">NPR</a>	S	3N-6504		001	HOSE AS
	<a href="#">NPR</a>	S	4B-9782		001	BALL
	<a href="#">NPR</a>	S	4P-0693		010	CLAMP AS
	<a href="#">NPR</a>	S	5F-5990		002	CLIP
	<a href="#">NPR</a>	S	5M-2894		004	WASHER-HARD
	<a href="#">NPR</a>	S	5P-0537		001	WASHER-HARD
	<a href="#">NPR</a>	S	5P-4900		001	ELBOW-FLARED
	<a href="#">NPR</a>	S	6V-4362		001	CONNECTOR
	<a href="#">NPR</a>	S	6V-5049		001	SEAL-O-RING
	<a href="#">NPR</a>	S	7B-2742		001	BOLT
	<a href="#">NPR</a>	S	8N-1186		001	HOSE AS
	<a href="#">NPR</a>	S	8N-3480		001	CLIP
	<a href="#">NPR</a>	S	8N-6325		001	TUBE AS
	<a href="#">NPR</a>	S	9M-1974		001	WASHER-HARD
	<a href="#">NPR</a>	S	9N-1752		001	SPRING
	<a href="#">NPR</a>	S	9S-4191		001	PLUG-O-RING
	<a href="#">NPR</a>	S	9S-8752		001	NUT-FULL
	<a href="#">NPR</a>	S	9Y-8389		001	GASKET

	<a href="#">NPR</a>	S	112-5667	001	TUBE AS
	<a href="#">NPR</a>	S	131-4724	001	KIT-PARTS
		S	SEBP2414	001	PTSBK
		S	SEBP2443	001	PTSBK
		S	SEBU6042	001	SUPP
		S	SEBU6251	001	LUBE 1632-16 (A)
		S	SEBU6916	001	OMM
		S	SEBU6918	001	OMM
		S	SEBU6984	001	SUPP 140013B1(A)
		S	SELF5260	001	NEW WARRANTY 1630-17 (A)
		S	SELS0086	001	S.I.
		S	SENR4794	001	SCHEMATIC
		S	ESO	001	(PRNT ESO COPY)
		S	PML	001	*REQUIRED DECALS